



Black and Decker BV2500 Type 4 Powerhead Assembly Replacement

Replacing the broken or damaged powerhead assembly of the Black and Decker BV2500 Type 4.

Written By: Angelica Chow



INTRODUCTION

This guide will take you through the process of replacing the powerhead assembly on the Black and Decker BV2500 Type 4. The powerhead assembly contains all the internal components and you can buy it separately. This will save you from buying costly individual parts.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [Black Decker Powerhead Assembly 90535130SV](#) (1)

Step 1 — Clamshell (Black Outer Casing)

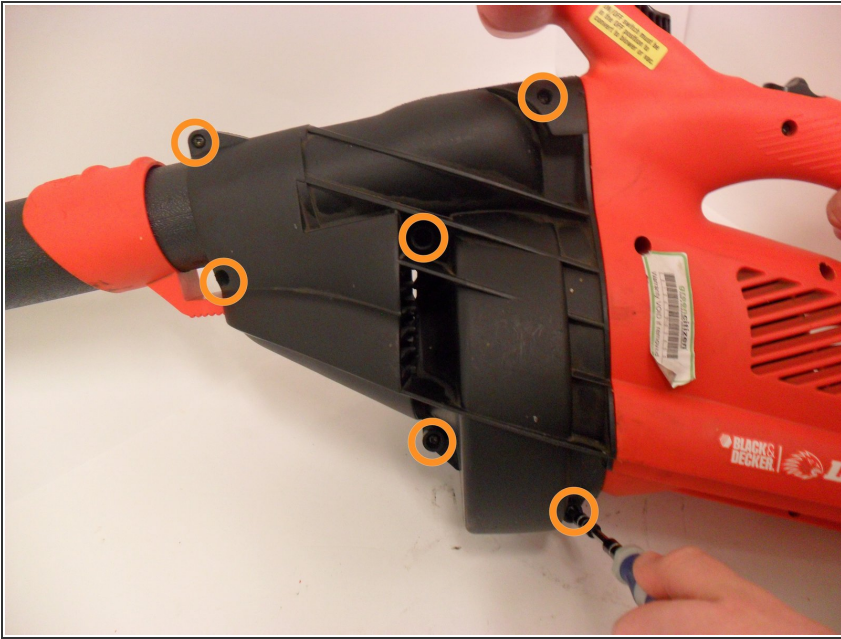

- Using a Phillips #2 screwdriver, remove the six 20 mm screws in the black plastic casing (clamshell).

Step 2



- Using your hands, remove the blower tube and clamshell.
 - To remove the clamshell, pull apart starting from the bottom until it is pulled out from the notches. Then slide it out away from the device.

Step 3 — Powerhead Assembly



- The powerhead assembly is the entire orange part of the device.
- Replace it with a new powerhead assembly.

To reassemble your device, follow these instructions in reverse order.