



# Samsung SCH-A670 Keypad Replacement

Written By: Nathan Brink



---

## INTRODUCTION

The Keypad may get worn or dirty as time goes by. This guide will aid in the removal of the keypad for cleaning or replacement.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Push Pin](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery Cover




- Slide the latch on the back of the phone up.

## Step 2 — Battery



- Remove the battery.

### Step 3 — Logic Board

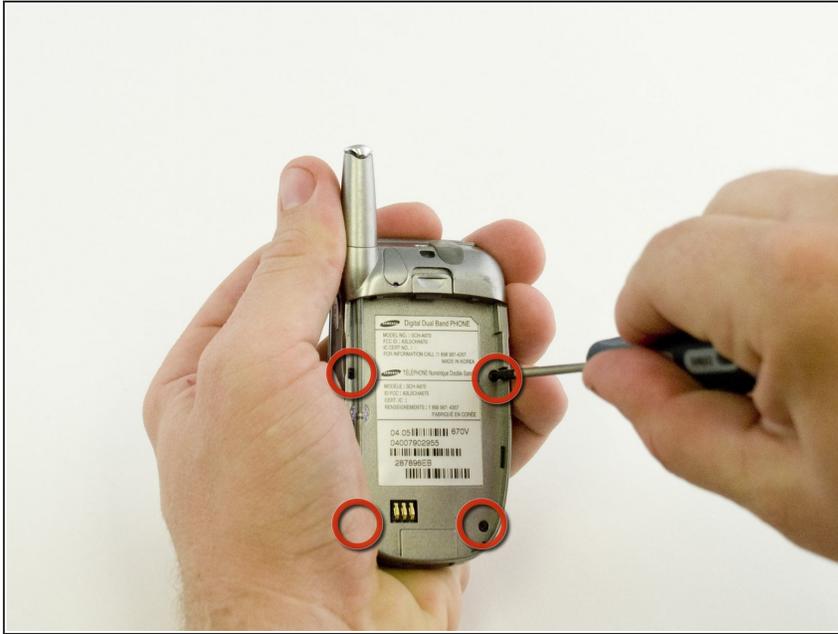

- After removing the battery, remove the four small Phillips-head screws with a #0 Phillips screwdriver.

### Step 4



- Using a thumbtack, pry the small plastic cover from the case near the base of the antenna.

## Step 5




- With a #0 Phillips screwdriver remove the screw which you just uncovered.

## Step 6




- Using the spudger, carefully pry the case apart starting near the charging port. Ease the case open.
- Then disconnect the small power connector near the top of the phone.

## Step 7

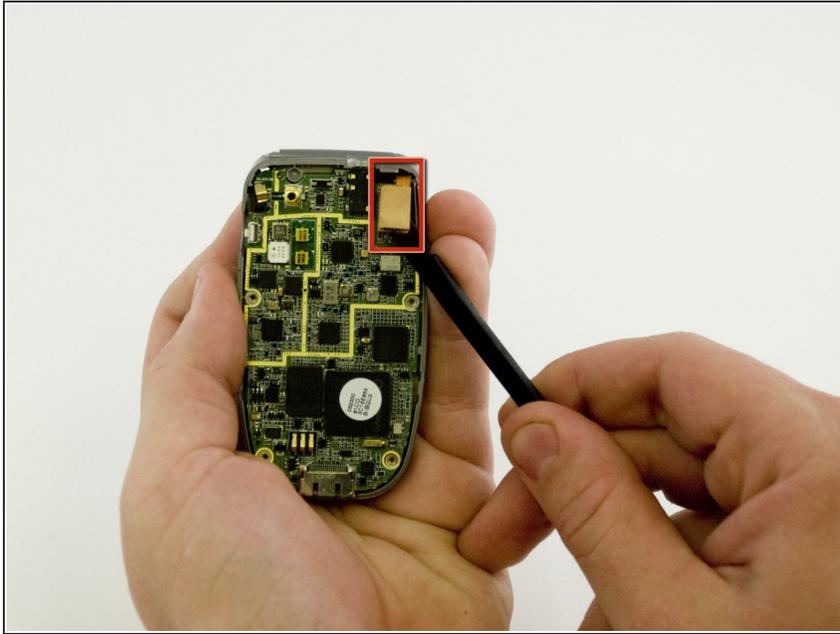

- Gently pry up the ribbon-type connector with the spudger.

## Step 8

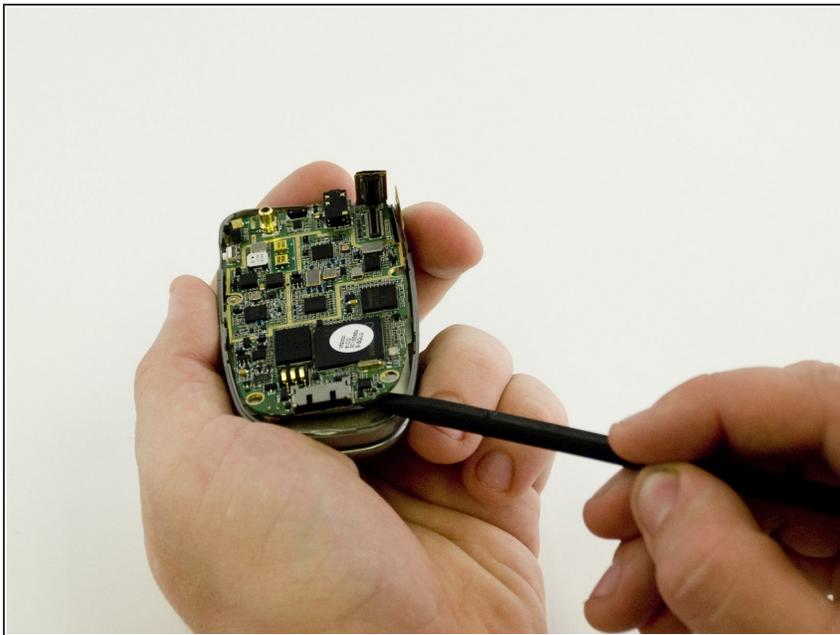

- Carefully pry the logic board from the case with the spudger.

## Step 9 — Keypad



- Once the logic board has been removed, peel the keypad up.

To reassemble your device, follow these instructions in reverse order.