



Nerf N-Strike Elite Hail-Fire Inner Plastic Components Replacement

Remove the inner plastic components from your Nerf N-Strike Elite Hail-Fire.

Written By: sage



INTRODUCTION


Use this guide to remove the inner plastic components.




TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Left Shell

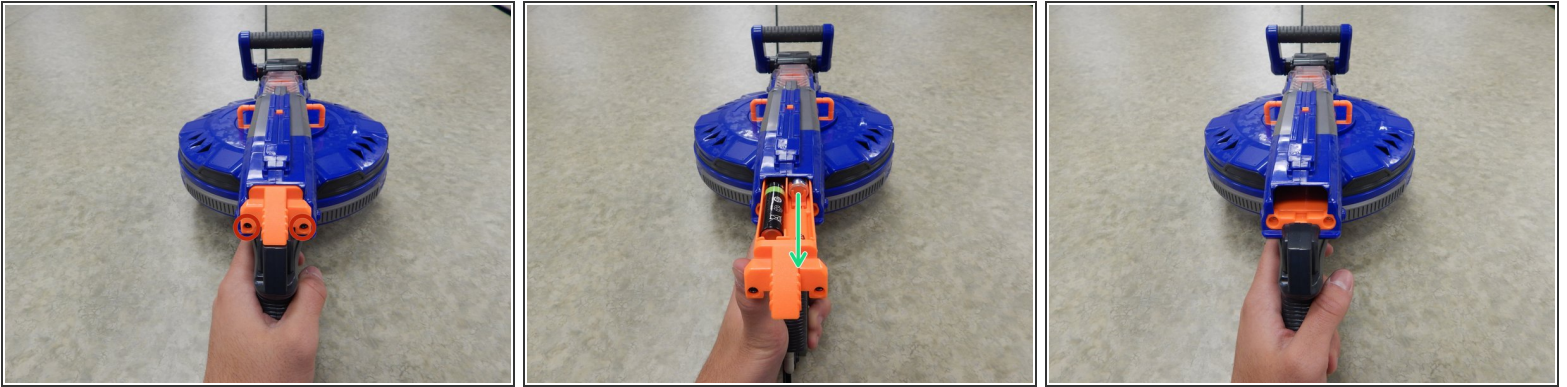

 Before disassembling your Nerf Hail-Fire, be sure to remove the batteries.



- Remove the two 9.0 mm Phillips screws securing the battery compartment.
- Slide the battery compartment out.

Step 2




- Remove the five 9.0 mm Phillips screws securing the trigger.

Step 3

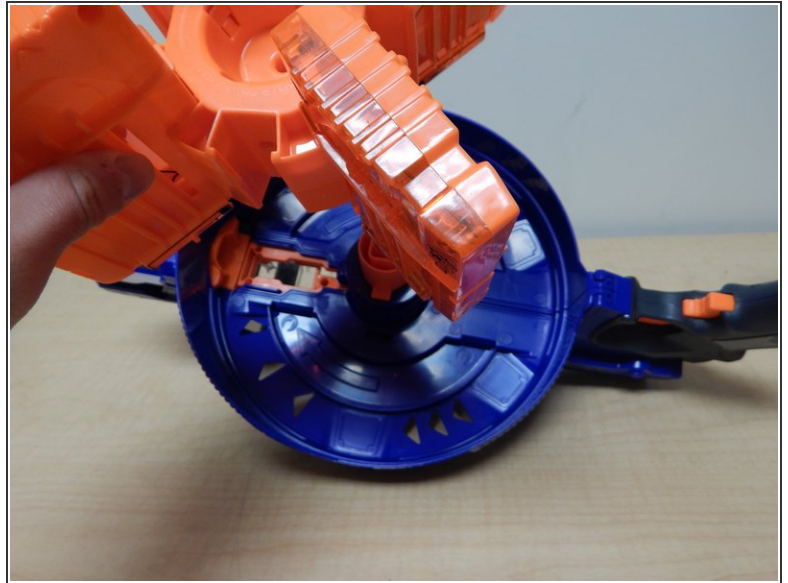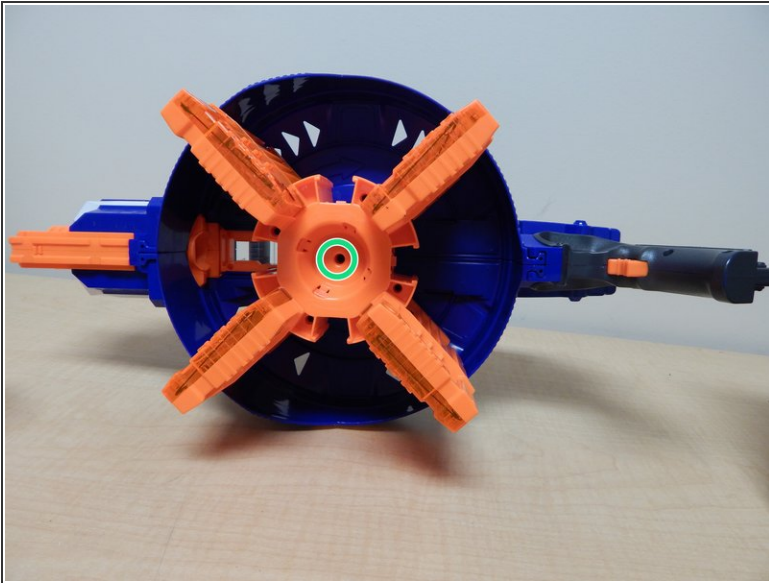

- Remove the single 11.0 mm Phillips screw securing the magazine cartridge chambers.
- Pull the entire chamber upwards to separate it from the rest of the Nerf Gun.


Step 4

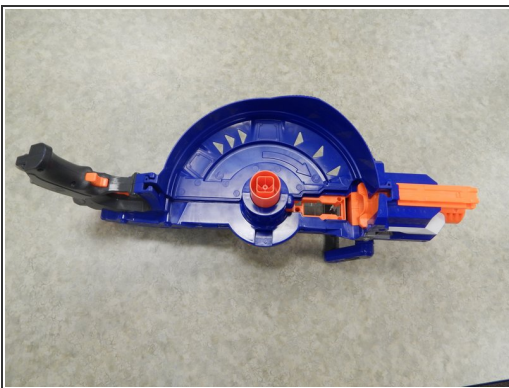

- Remove both halves of the ring by tugging on it upwards until the lock gets freed.

⚠ This requires quite a bit of force and if you are not careful, you may break the plastic lock.

Step 5

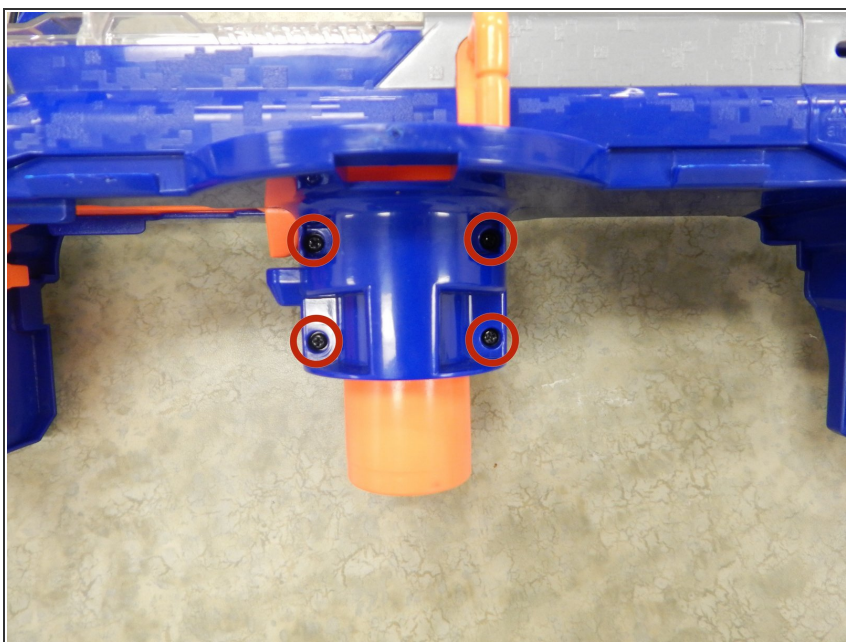

- Remove the four 9.0 mm Phillips screws from the newly revealed cylinder.

Step 6



- Remove the three 9.0 mm Phillips screws holding the top latch of the Nerf Gun together.

Step 7




- Remove the three 9.0 mm Phillips screws holding together the firing chamber.
- Remove the single 7.0 mm Phillips screw below the barrel.
- Remove the two 14.0 mm Phillips screws using a screwdriver with a length of approximately 4.0 inches and a diameter of approximately 0.2 cm.

Step 8




- Remove the single 14.0 mm Phillips screw holding together the handle and the Nerf Gun.

Step 9

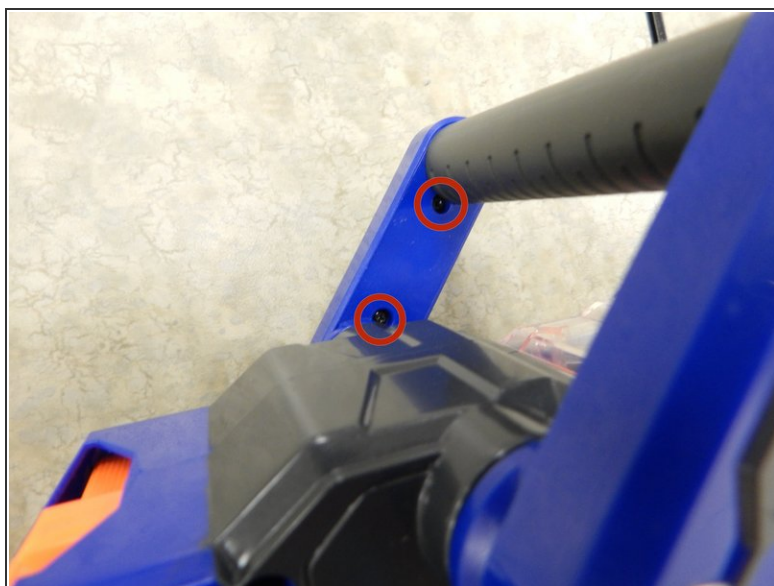

- Remove the two 9.0 mm Phillips screws holding together the handle.
- Remove the plastic cover of the handle.

Step 10

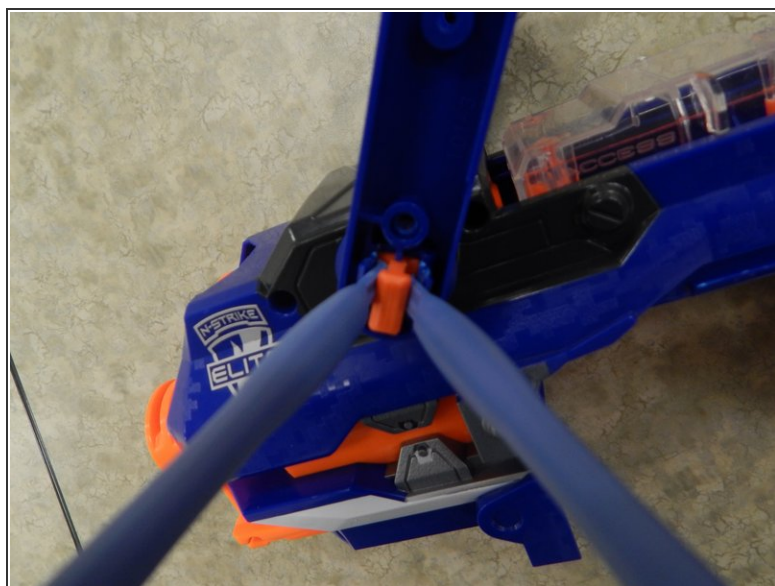

- Insert one plastic opening tool inside one side of the orange part depicted in the picture.
- Insert a second plastic opening tool to the other side of the orange part and gradually pull the piece out, freeing it from the handle.

Step 11



- Pull one end of the handle away from the orange latch.
- Repeat the procedure on the other side to completely remove the handle from the rest of the Nerf Gun.

Step 12



⚠ Lift the entire left shell slowly. The process should be easy and if there is any resistance, there is something wrong. You may have forgotten a screw.

- Completely remove the left shell from the rest of the Nerf Gun.

Step 13 — Inner Plastic Components



- Remove the cartridge support.

Step 14



- Remove the handle crank.

Step 15



- Remove the clear plastic barrel cover.

Step 16



- Remove the firing pin.

To reassemble your device, follow these instructions in reverse order.