



Garmin Nuvi 255W Logic Board Replacement

Written By: Anjelica



INTRODUCTION

Removing the logic board from the Garmin Nuvi 200

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Casing



- Peel off the sticker from the bottom of the device to reveal two screws.

Step 2




- Remove two T5 Torx screws.

Step 3




- Insert a plastic opening tool in the gap between the front and rear casing.
- Carefully work the tool around the gap, separating the two halves of the case.
- ⓘ Keep the power switch in place while removing the rear case.

Step 4 — Logic Board

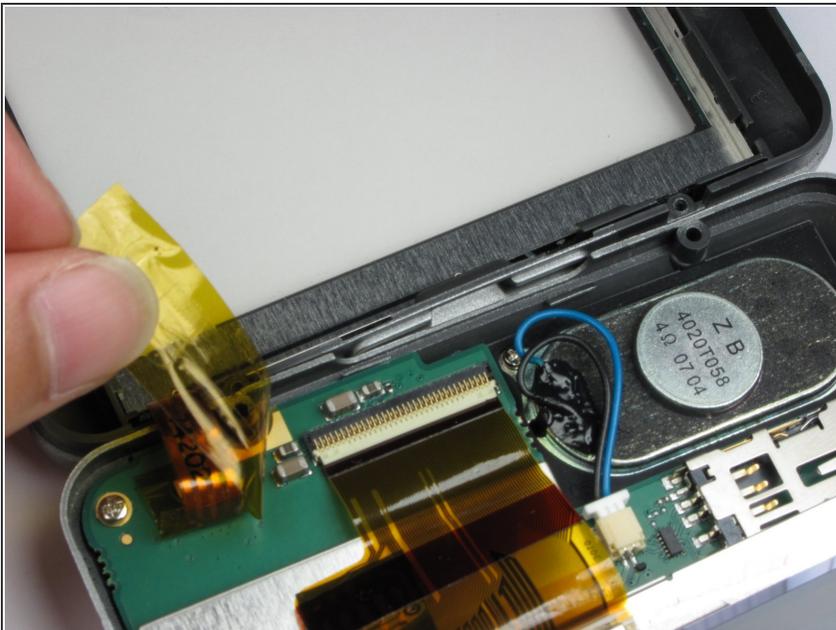


- Peel away the tape holding the ribbon cable in place.
- Disconnect the ribbon cable by using a spudger to flip up the retaining flap on its [ZIF-style connector](#). Then gently remove the cable.

Step 5

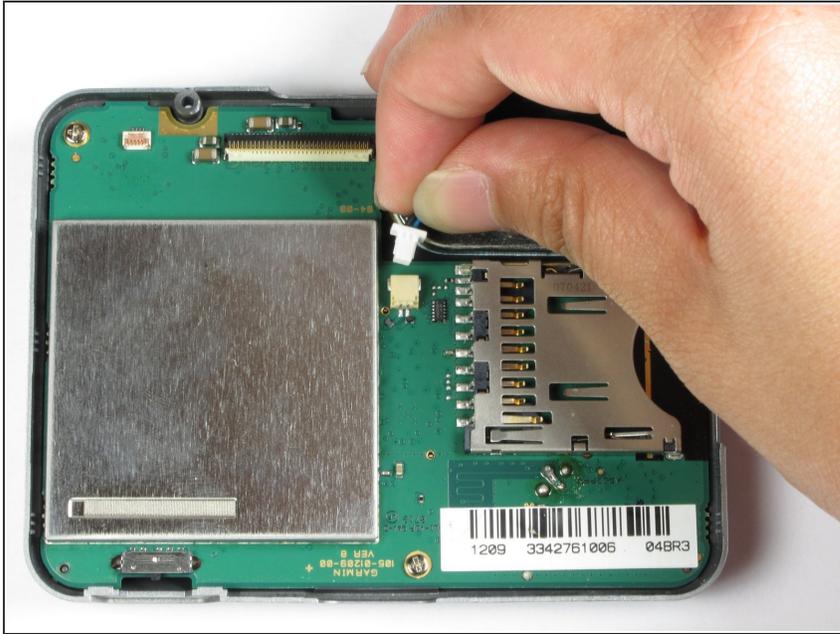


- Pull out the cable between the logic board and the speaker to disconnect them.

Step 6

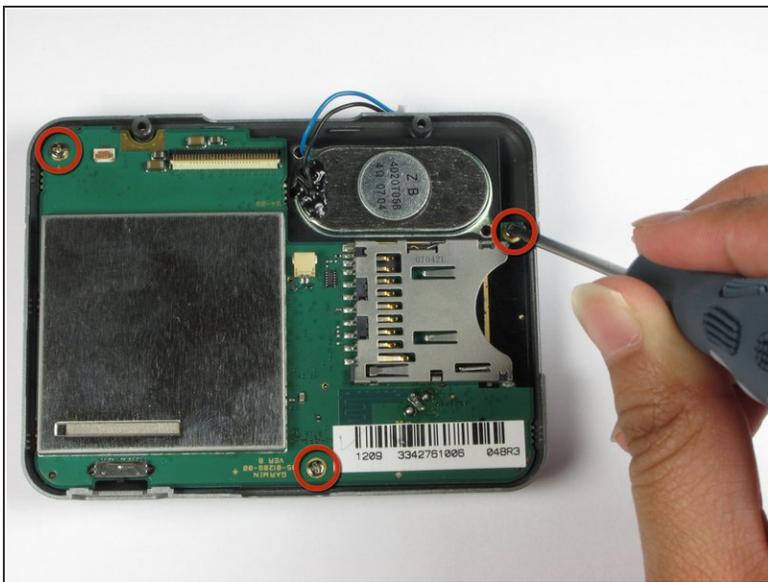

- Remove the three screws from the logic board using the #00 Phillips screwdriver.
- Lift the board away from the case but do not pull the logic board completely off, as it is still attached to the battery by a cable.

Step 7

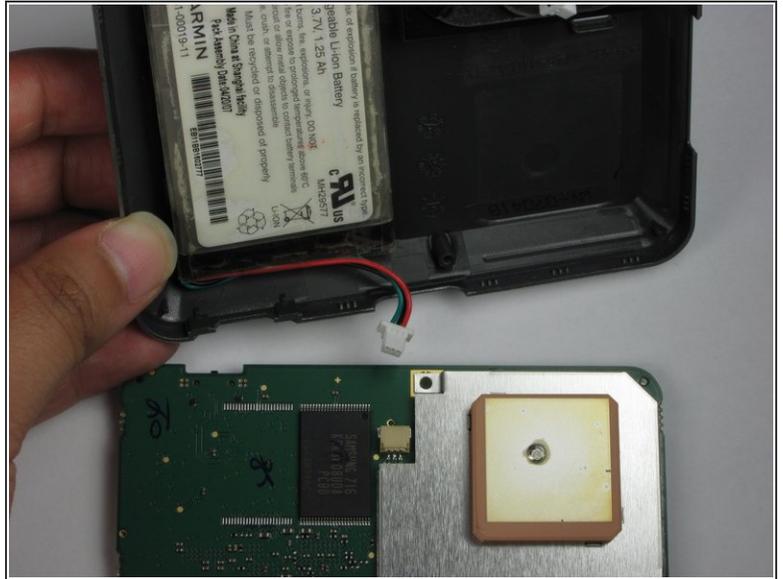

- Detach the logic board from the battery by pulling out the cable.

To reassemble your device, follow these instructions in reverse order.