



# Kodak EasyShare C713 Batteries Replacement

How to replace Kodak EasyShare C713 batteries.

Written By: Carl Petterson



## INTRODUCTION

Use this guide to replace your batteries.

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2



- Remove the old batteries.

To reassemble your device, follow these instructions in reverse order.