



Adjusting Right/Left Speaker Balance

Written By: Jan Vazquez



INTRODUCTION



Get familiar with the Volume Balance knob to solve unequal volume problems.

Step 1 — Adjusting Right/Left Speaker Balance



- The balance knob is the rightmost knob on the front panel.

Step 2

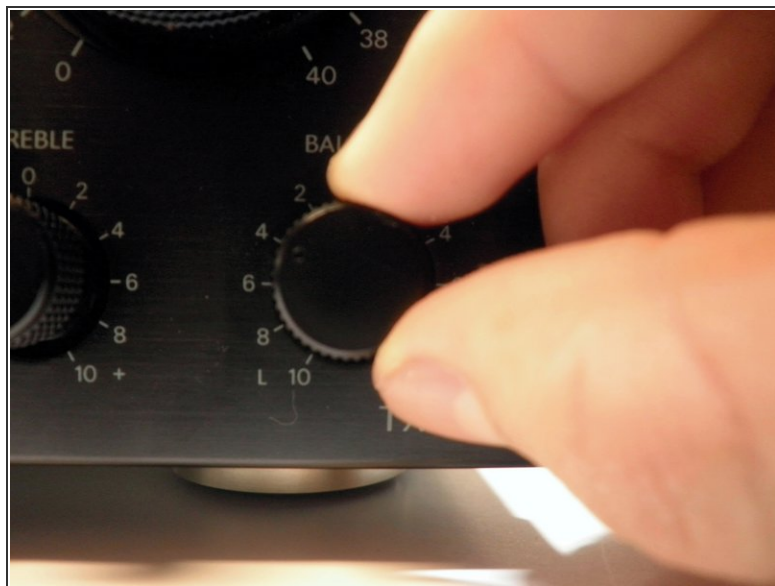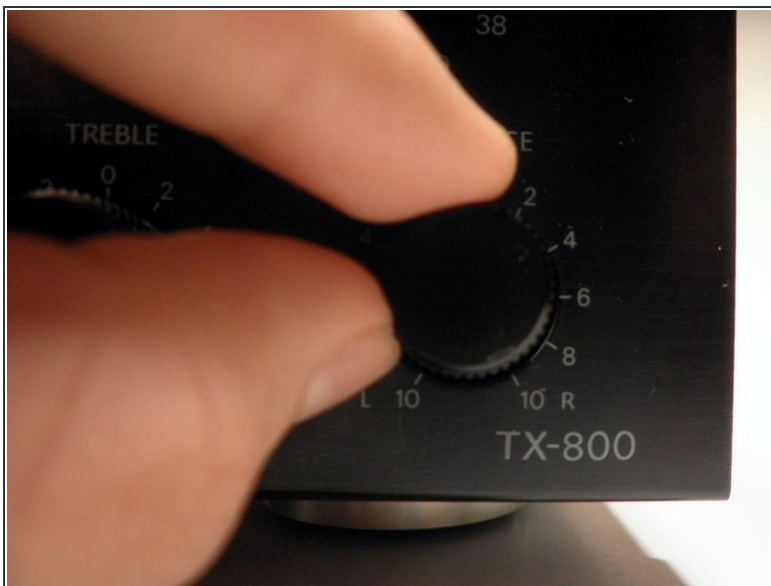

- Turning the balance knob to the right increases the sound played by the right speaker.
- Turning the knob left will increase the sound played by the left speaker.

Step 3



- Turning the knob all the way to the right will make the right speaker play all the sound.
- Turning the knob all the way to the left will make the left speaker play all the sound.

Step 4



- The default position is center, which should play the sound equally by both speakers.
- If this position does not play the sound equally by both speakers, experiment with different knob positions until the speakers play the sound equally.

