

INTRODUCTION


Replacing the front cover of a Nikon Coolpix 3500.

TOOLS:

Phillips #00 Screwdriver (1)


Spudger (1)

Step 1 — Battery

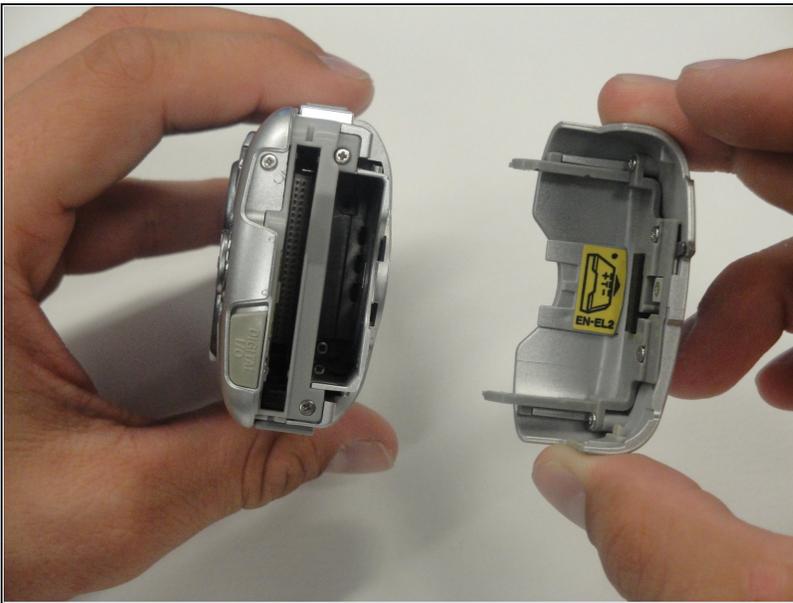


- Unlatch the battery cover and slide the cover out. Place cover to the side, it will not be needed for the next few steps.
- Remove the battery.
- Remove the battery cover without using excessive force. Keep in mind this cover is fragile.

Step 2 — Front Cover

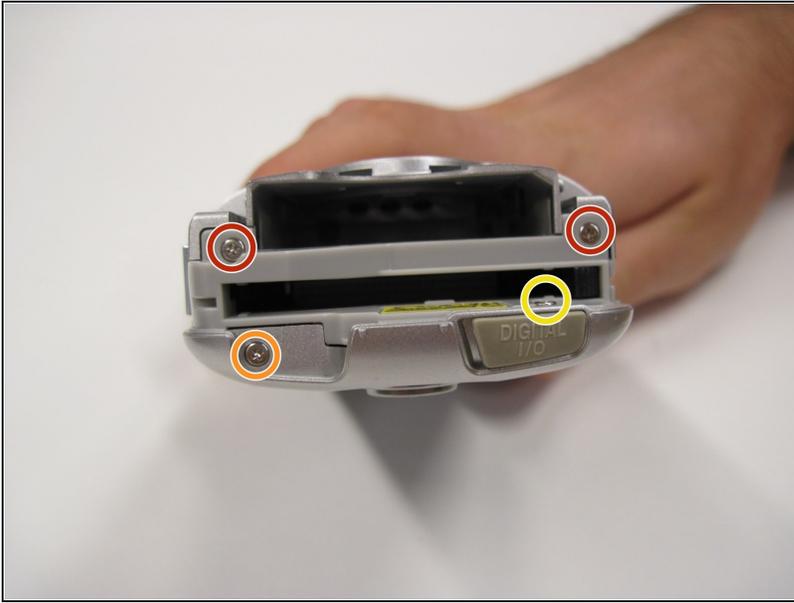

- Remove the two 4.5 mm screws that sit next to the battery slot.
- Remove the 3 mm screw that sits below the CF card slot.
- Remove the 4.5 mm screw that sits above the digital I/O cover.

Step 3

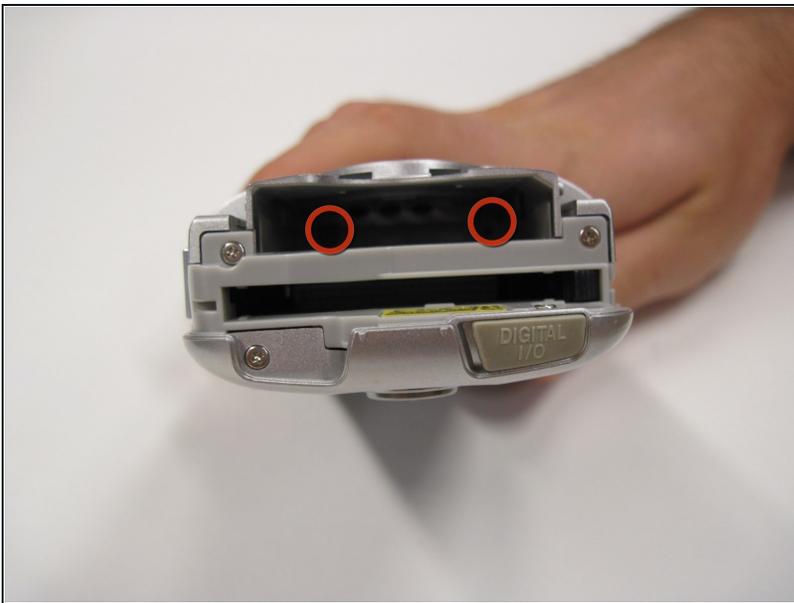

- Remove the two 4.5 mm screws that sit inside the battery slot.

Step 4



- Remove the two 5 mm screws that sit near the camera strap eyelet.
- Remove the camera strap eyelet.

Step 5




- Remove the 5 mm screw and cap that were underneath the camera strap eyelet.

Step 6



- Remove the five 3.5 mm screws that sit at the bottom of the camera.
 - Remove the grey plastic piece, which the five screws held in place, by gently detaching the front cover.
- ⚠ Do not apply too much force; two wires still connect the front cover to the motherboard.

Step 7

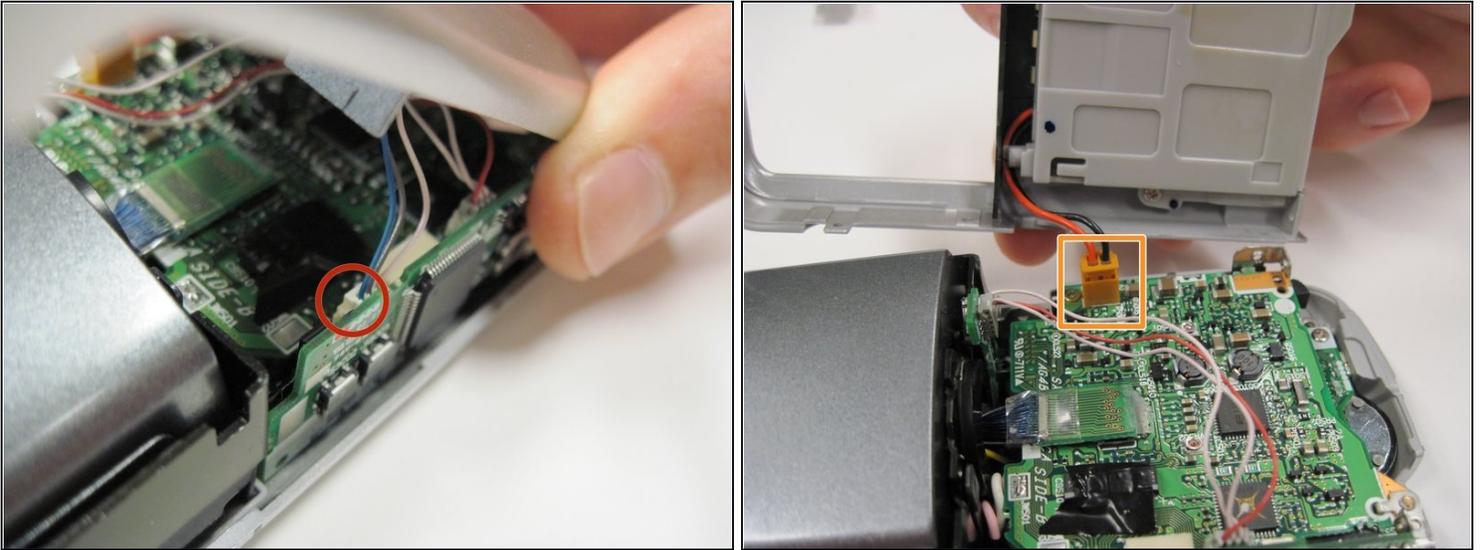

- Using a spudger, detach the white-capped wire.
- Using a spudger, detach the orange-capped wire and set the front cover aside.

To reassemble your device, follow these instructions in reverse order.