



# Nikon D3200 Memory Card Replacement

This guide will show the user how to replace the memory card for the Nikon D3200.

Written By: Irene Huang



## INTRODUCTION

Confirm with your [user's manual](#) for appropriate memory cards.

## Step 1 — Memory Card



- Locate the memory card compartment on the right side of the LCD screen.

## Step 2



- Gently press and slide the grooved compartment door to the left.
- Let go of the compartment door and it will swing open.
- Insert the memory card imitating the diagram pictured outside the compartment door.
- ☑ Make sure to push down once the memory card is inserted to lock it in place.

To reassemble your device, follow these instructions in reverse order.