




Sony CFS-204 Radio Cassette-Corder Batteries Replacement

Replacing the batteries will allow you to listen to your radio wherever you like.

Written By: Daniel

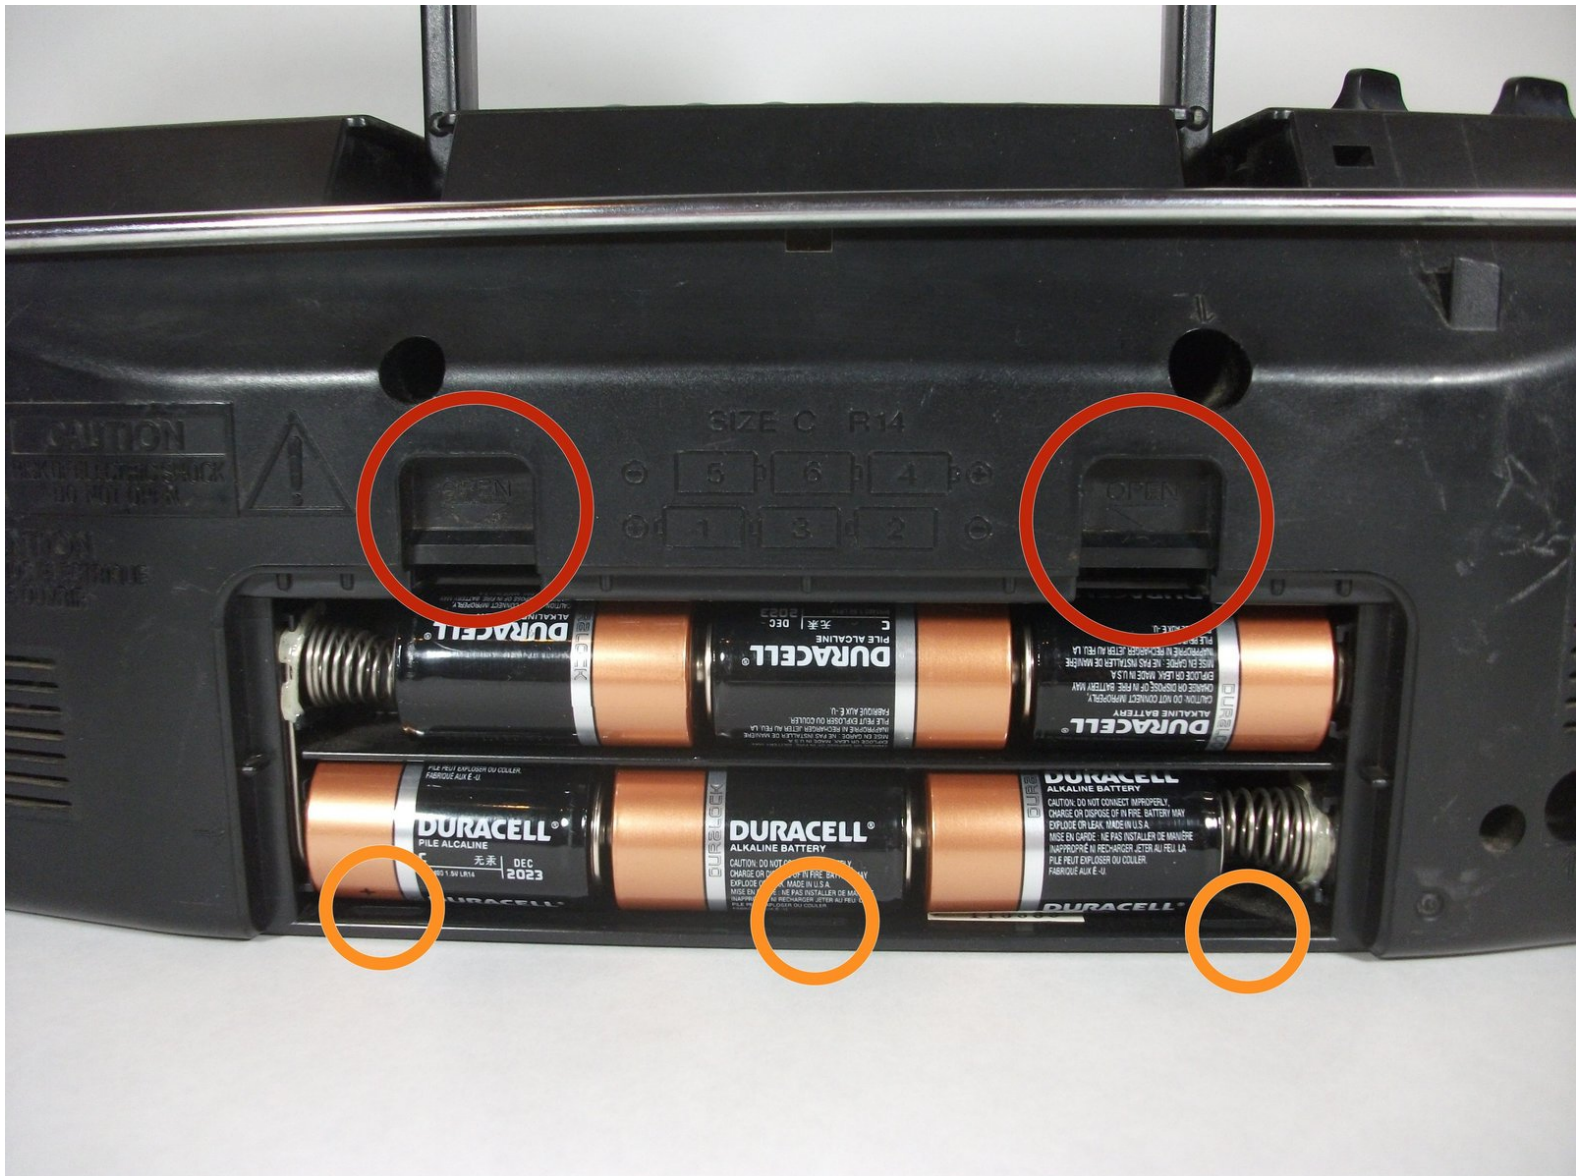

INTRODUCTION

This guide will demonstrate how to replace the batteries for your radio.



PARTS:

- [Batteries](#) (6)
Size C
-

Step 1 — Batteries



- Press down on the two tabs at the top of the door.
 - Rotate the door away from the radio, towards you.
 - Lift the door out of the three smaller tabs on the bottom.
- ⚠ Ensure the radio is turned off to avoid the possibility of electric shock.
- ⓘ The battery compartment door is not shown.

Step 2 — Batteries



- Push the batteries against the spring and pull out using your finger to remove them.
- ☑ To insert the new batteries, push the negative end of the 1st battery against a spring and follow the diagram pictured to insert the batteries in the correct orientation.

To reassemble your device, follow these instructions in reverse order.