



HTC One Mini LCD Display Replacement

Guide to replace LCD Screen of HTC One Mini.

Written By: Chris Jose



INTRODUCTION

Use this guide to successfully remove your HTC One Mini's front speaker grill and then remove your LCD Screen so that it may be replaced.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [iOpener](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — iOpener Heating




- Use the iOpener to melt the glue off of the top and bottom speaker grills.

Step 2 — Remove Speaker Grills



- Use the blue plastic opening tool to pry and remove the bottom speaker grill.

Step 3 — Remove Screw

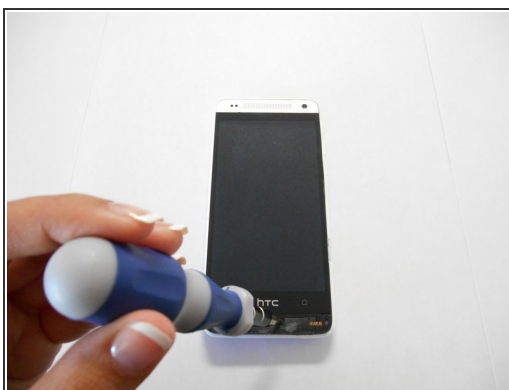


- Remove the screw under speaker grill using a T6 Torx screwdriver.

Step 4




- Wedge the plastic opening tool between the screen and the edge of the case.
- Use force to pry and separate the rear panel.

Step 5 — Separate Rear Case

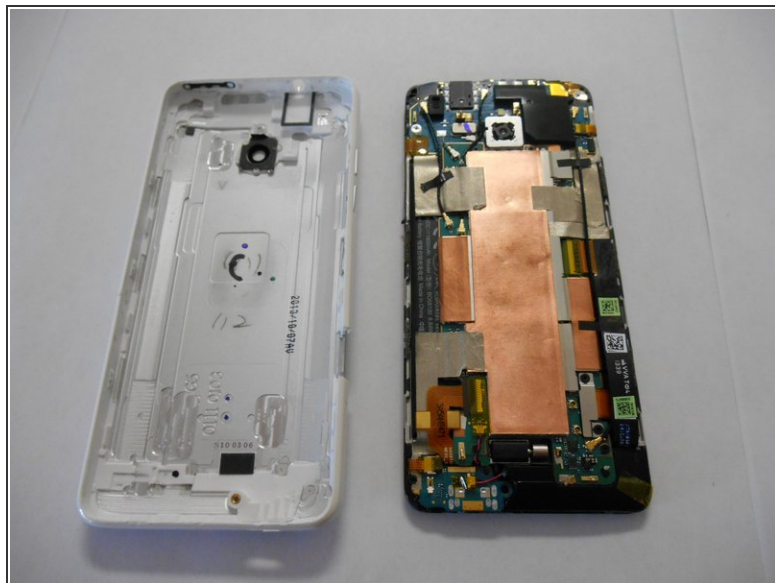


- Separate the rear panel from the phone.

Step 6

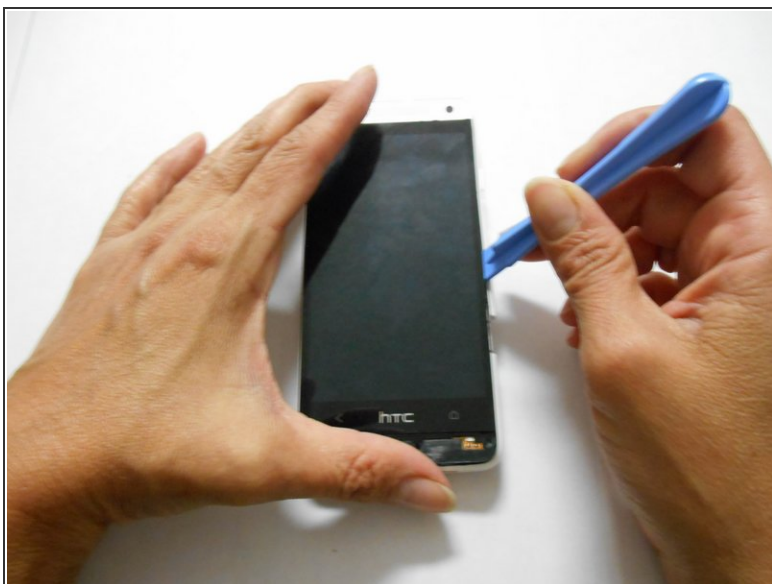

- Using the plastic opening tool, pry on the screen to separate it from the adhesive holding it.

Step 7 — Separate LCD Screen

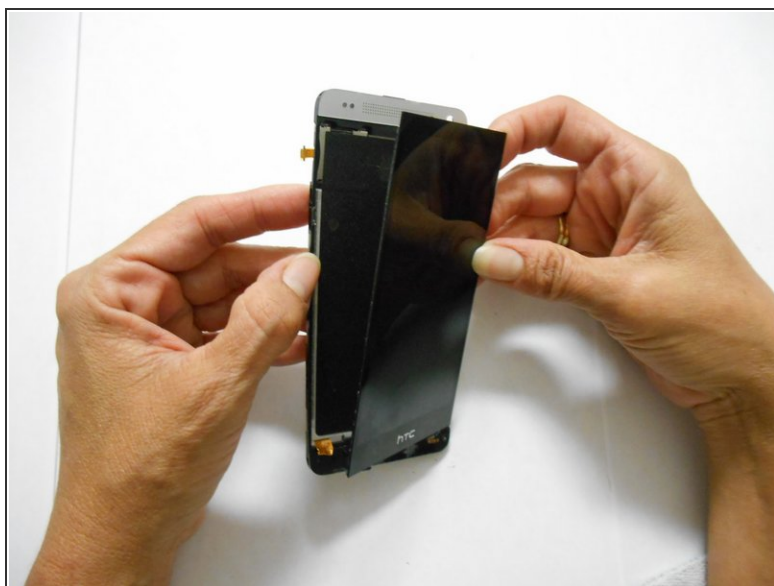

- After you have used the opening tool to pry, use some force to separate the LCD screen from the glue.

To reassemble your device, follow these instructions in reverse order.