


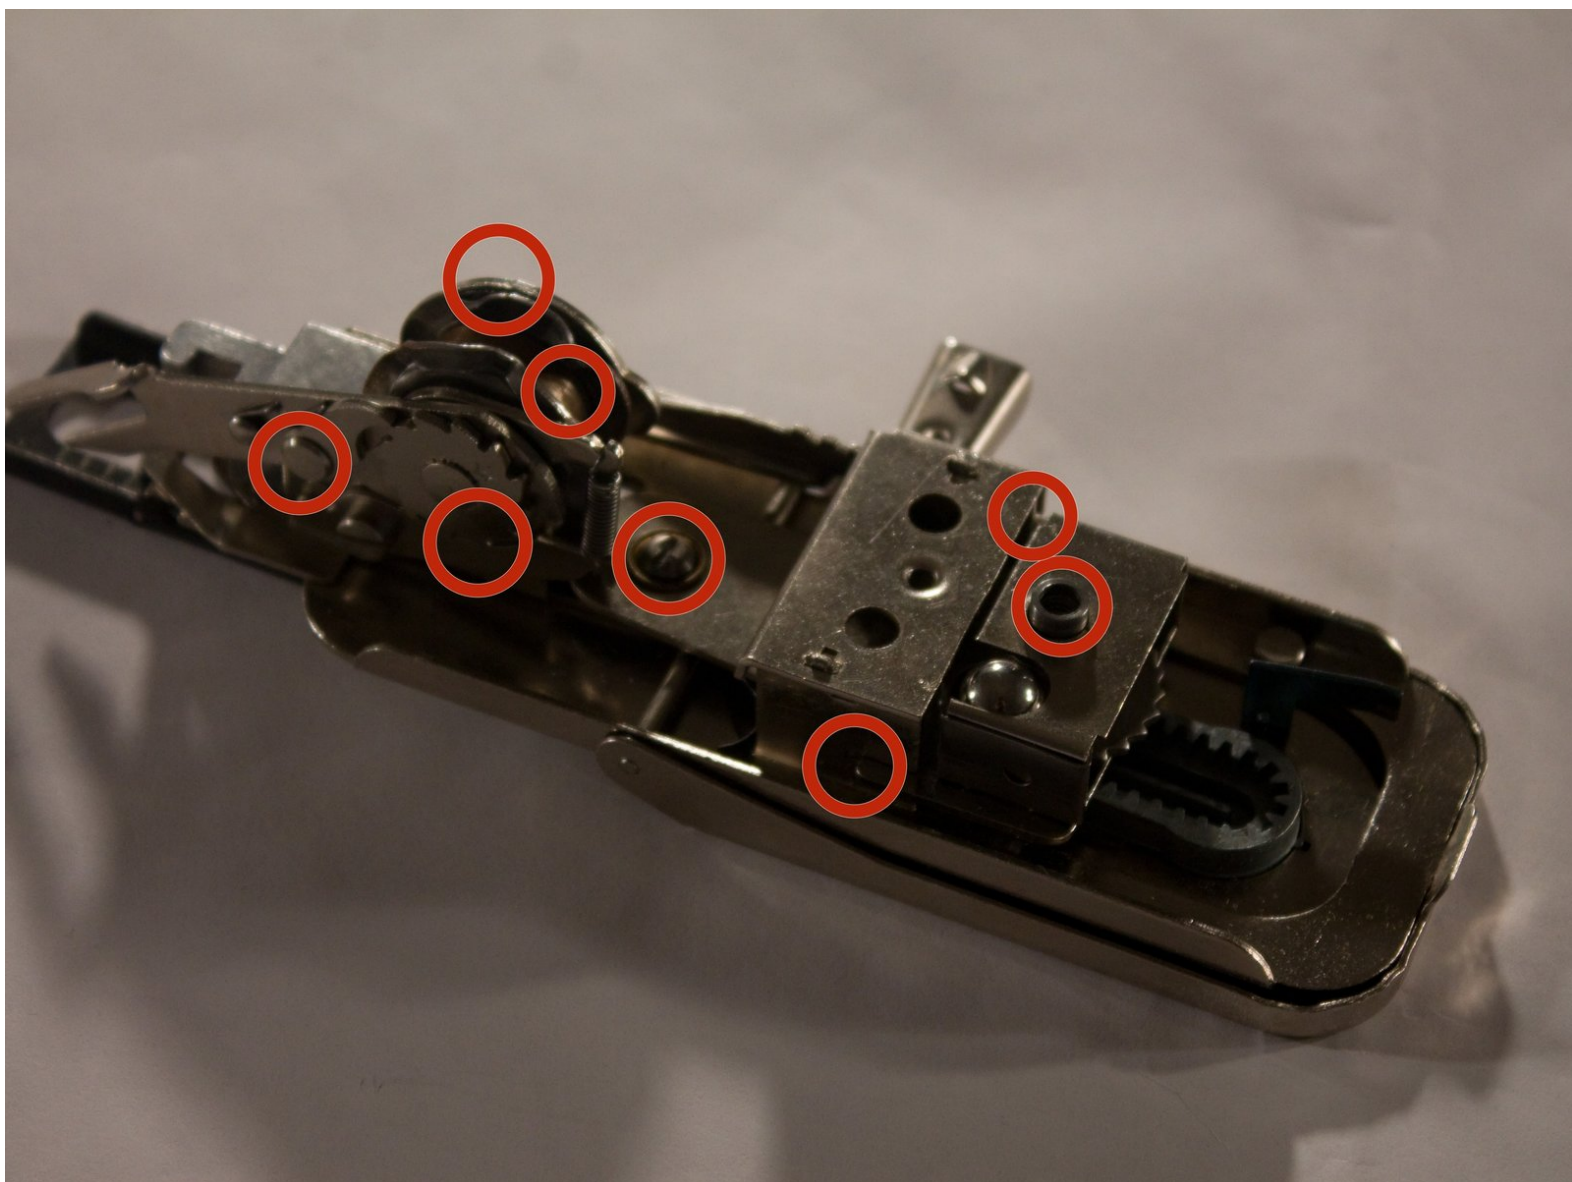

How to lubricate Greist Buttonholer

In order to properly maintain the Buttonholer, apply oil to these specific areas.


Written By: Michael Sykes



INTRODUCTION

In this guide, we will show you how to properly maintain the buttonholer. To ensure it works properly, you will need to lubricate certain points of the machine.

Step 1 — Adding the oil

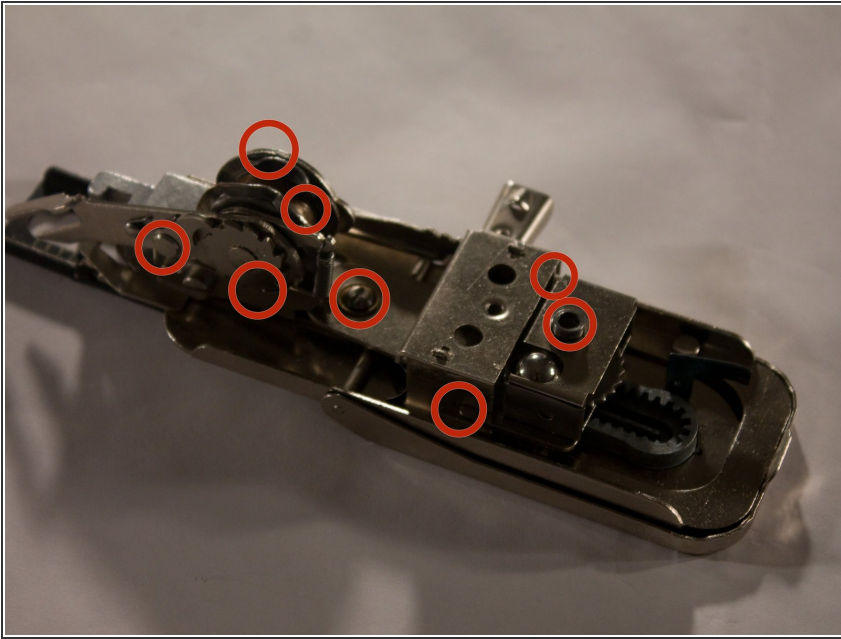


- Apply a drop of lubricant at each of the points indicated here.

Step 2 — Wipe off the excess lubricant



- This is to prevent soiling the work.

Step 3 — Apply Lubricant to the Back

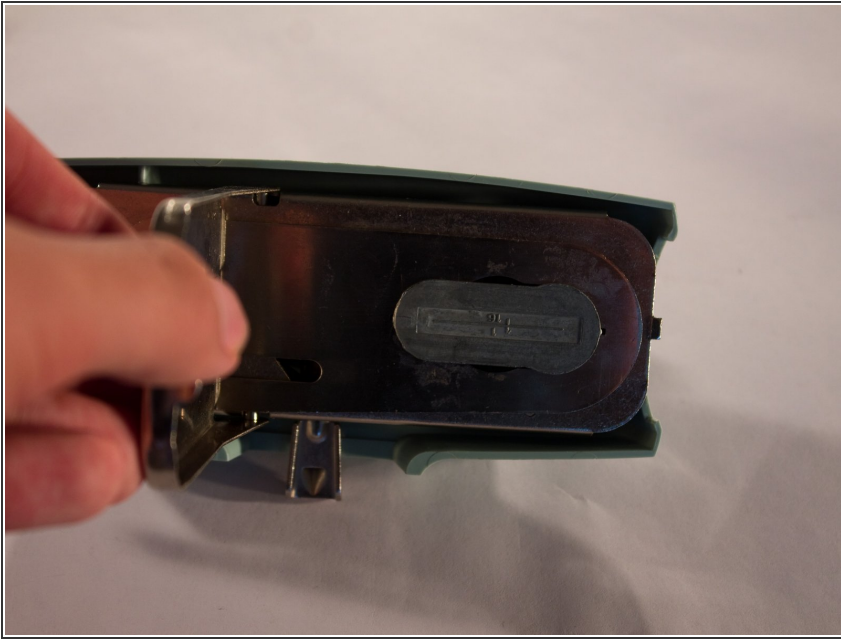

- Turn the Buttonholer over.
- Open the template retainer plate, and remove the template.
- Apply a drop of lubricant to the area indicated.

To reassemble your device, follow these instructions in reverse order.