



Greist Buttonholer Cover Plate Replacement

Written By: Michael Sykes



INTRODUCTION

In order to properly maintain and repair the Buttonholer, you will need to know how to remove the cover.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Remove the Adjusting Knob




- Press down on the adjusting knob, and turn it to the left until the knob is unscrewed.

Step 2 — Remove the Cover Screw



- Using the phillips screwdriver, unscrew the cover screw.

Step 3 — Take Off the Cover Plate

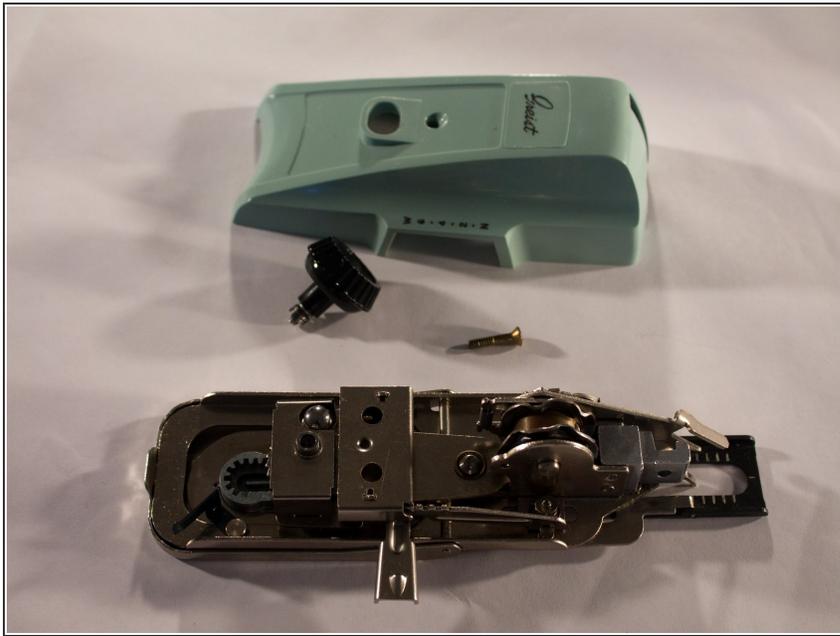

- You can now remove the cover from The Buttonholer

To reassemble your device, follow these instructions in reverse order.