




Samsung HMX-W300 Battery Replacement

The battery is located inside the camera. To...

Written By: Robert

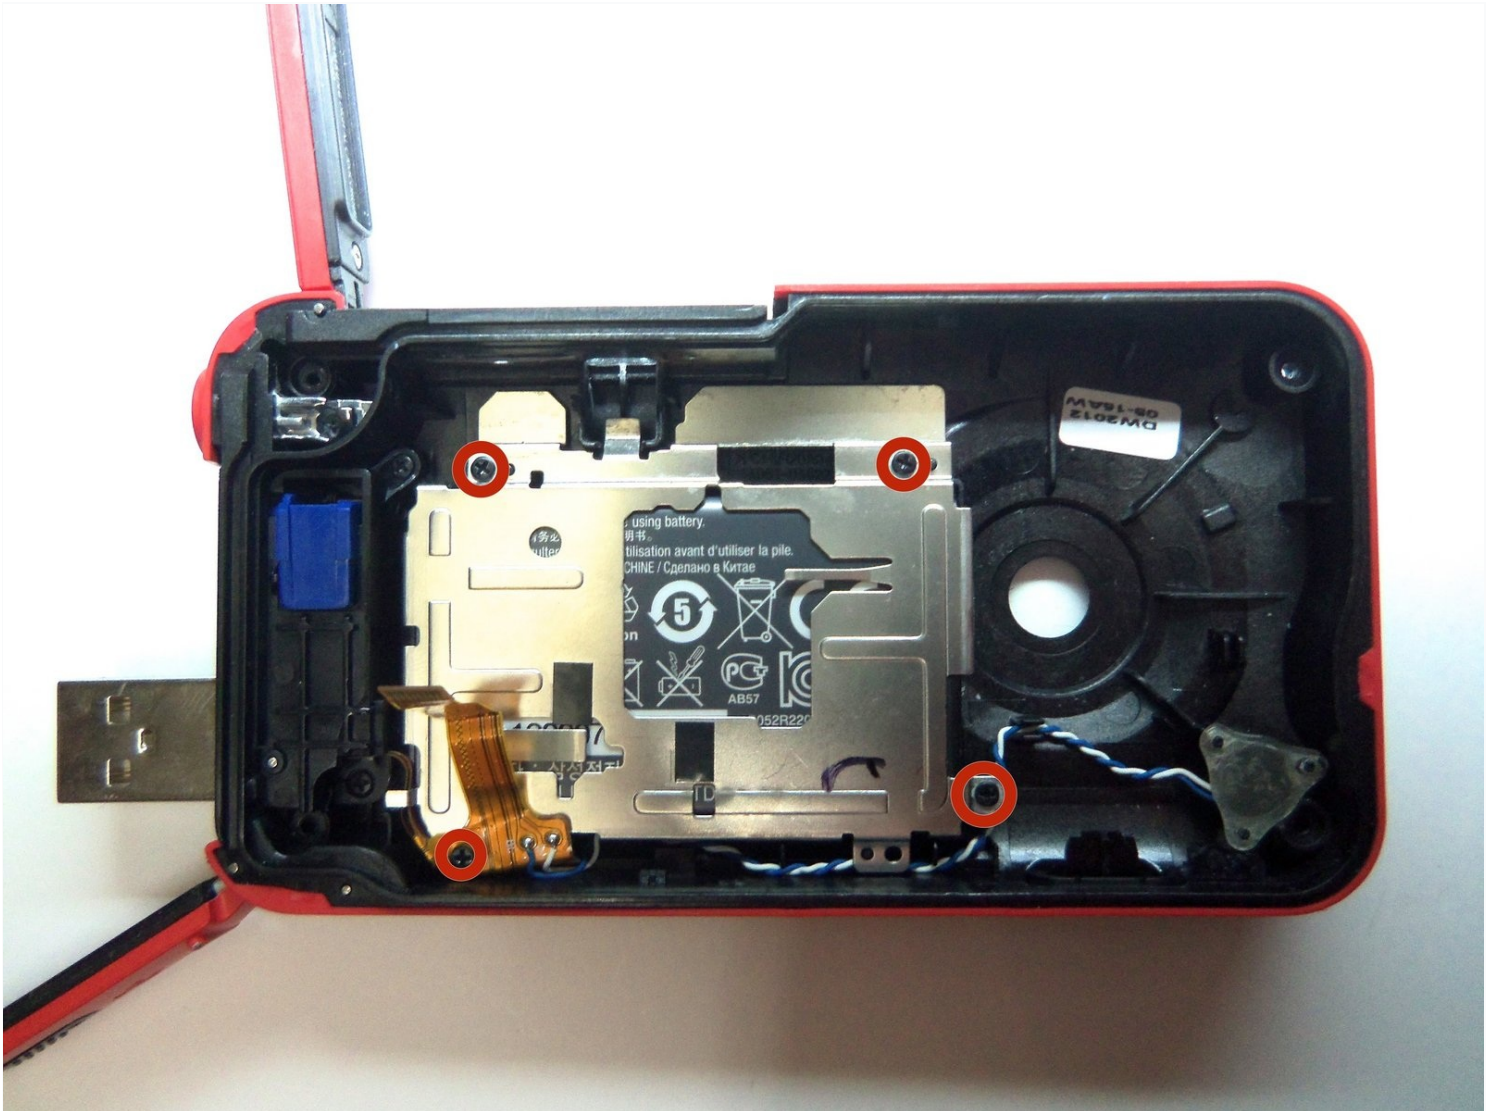

INTRODUCTION

The battery is located inside the camera. To remove the battery, it will require uninstalling the battery housing. This can be done in a few steps found below.


TOOLS:

[1.5mm Hex Screwdriver](#) (1)

[Phillips #00 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Disassembling Samsung HMX-W300

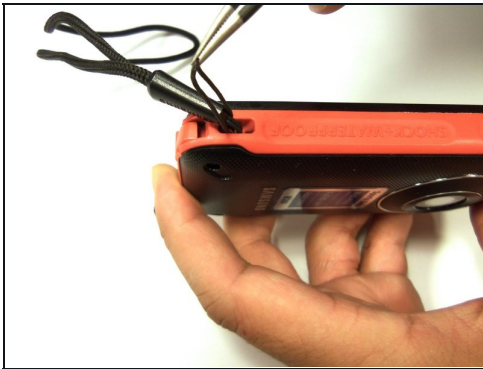

- To remove the wristband of the device, grab the middle loop and pull the band through.

Step 2

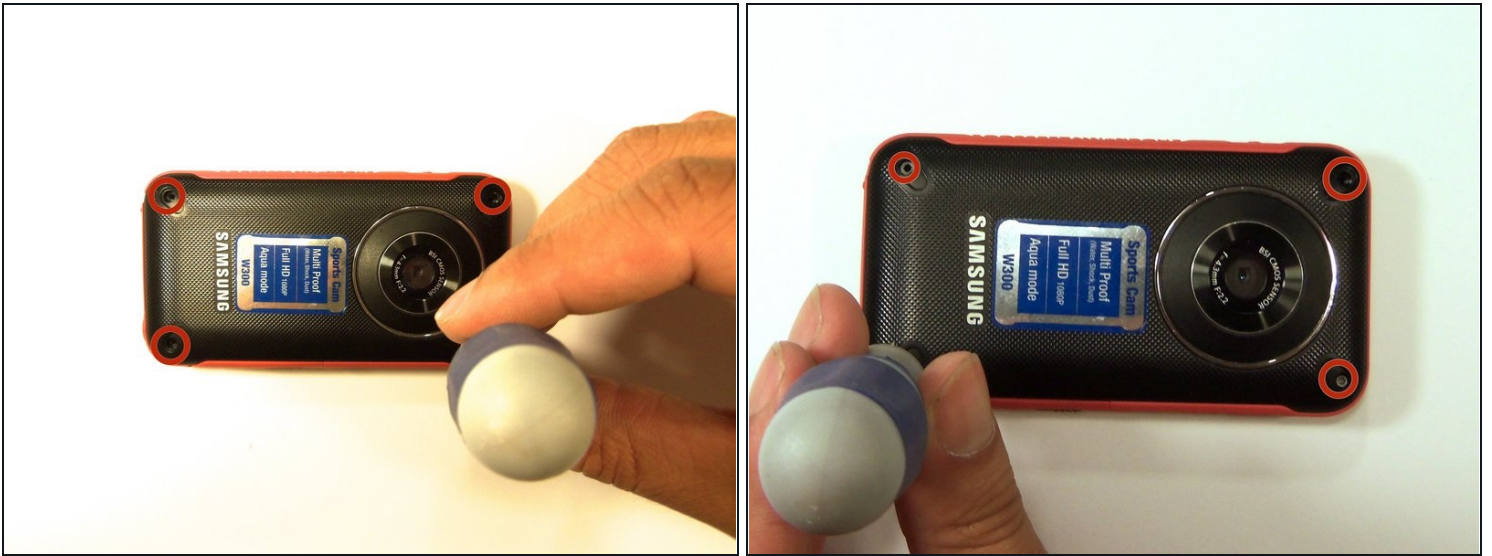


- Remove four screws with a Hex 1.5 mm screwdriver.

Step 3



- Open the HDMI door on the side of the camera.
- Remove the single screw using a Phillips #00 screwdriver.


Step 4

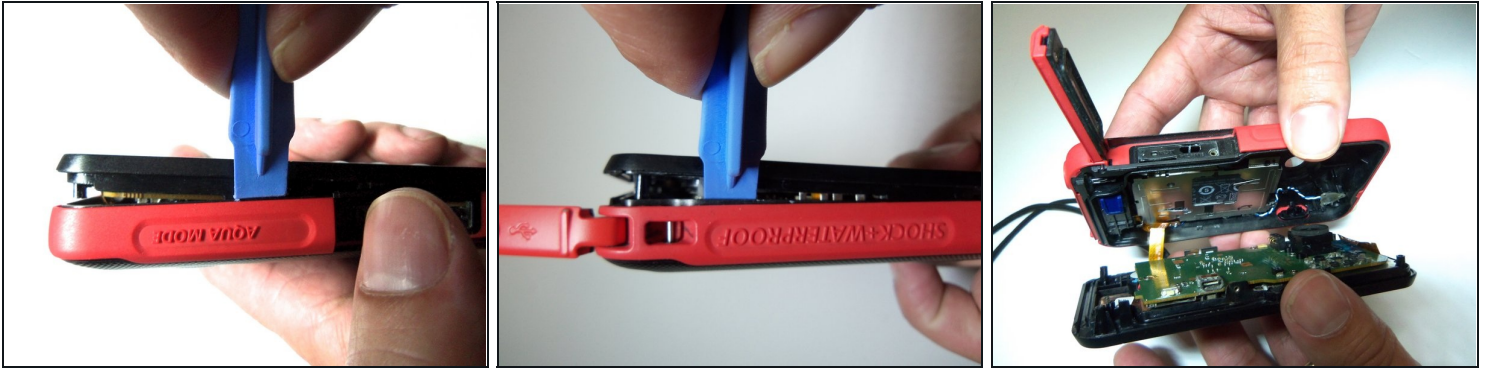

- Use the iFixit opening tool on both sides on the device. Pry apart both sections with light force.



⚠ Do not apply too much force. There is a wire that attaches the front case with the rear case that can be damaged.

Step 5

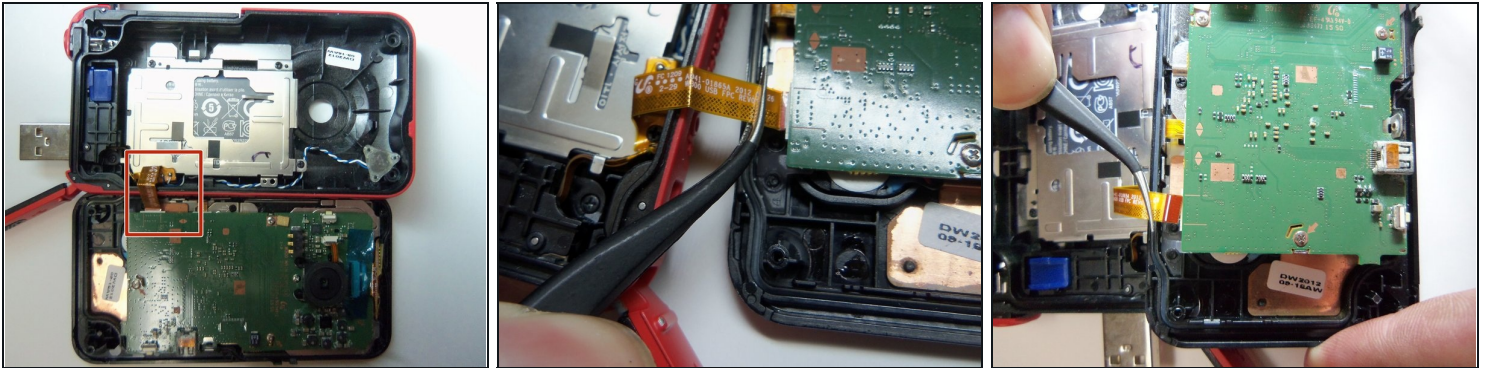


- Pull the wire ribbon out with a pair of [tweezers](#).

Step 6 — Battery

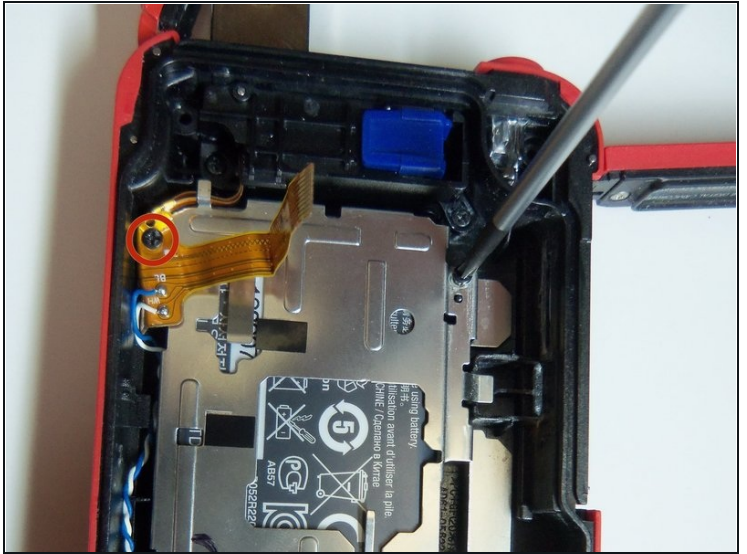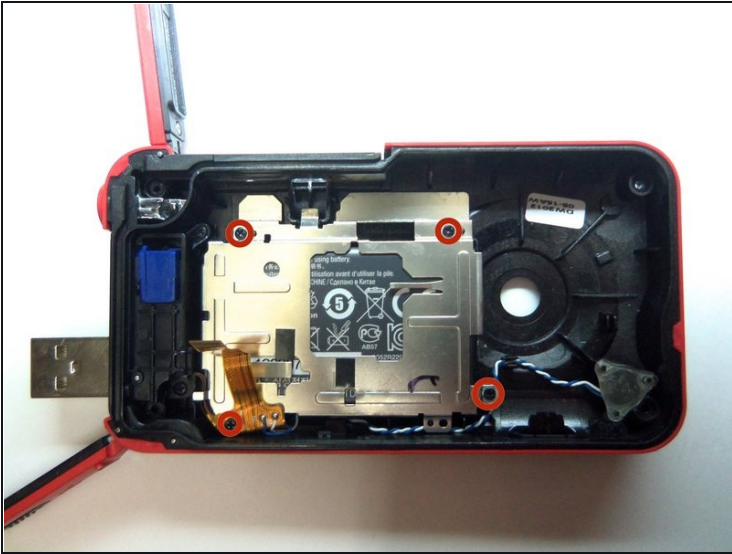



- Remove the four screws from the battery housing using a Phillips #00 screwdriver.

Step 7

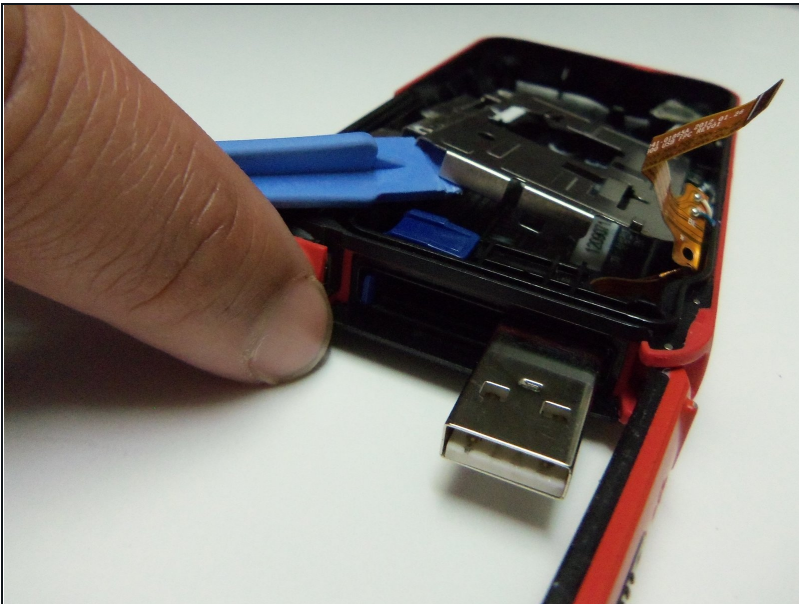

- Use the iFixit opening tool to pry the battery housing open.

Step 8

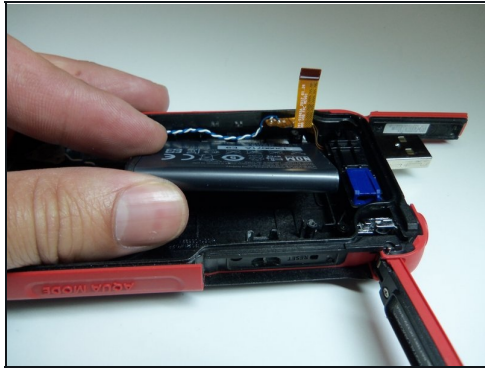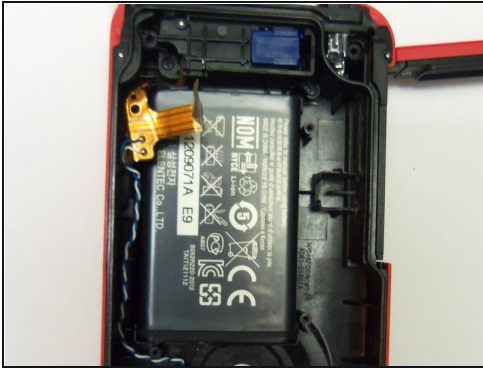

- After removing the battery housing, take the battery out.

To reassemble your device, follow these instructions in reverse order.