


# Samsung HMX-W300 USB Port Replacement

To replace USB port, remove battery first and...

Written By: Robert

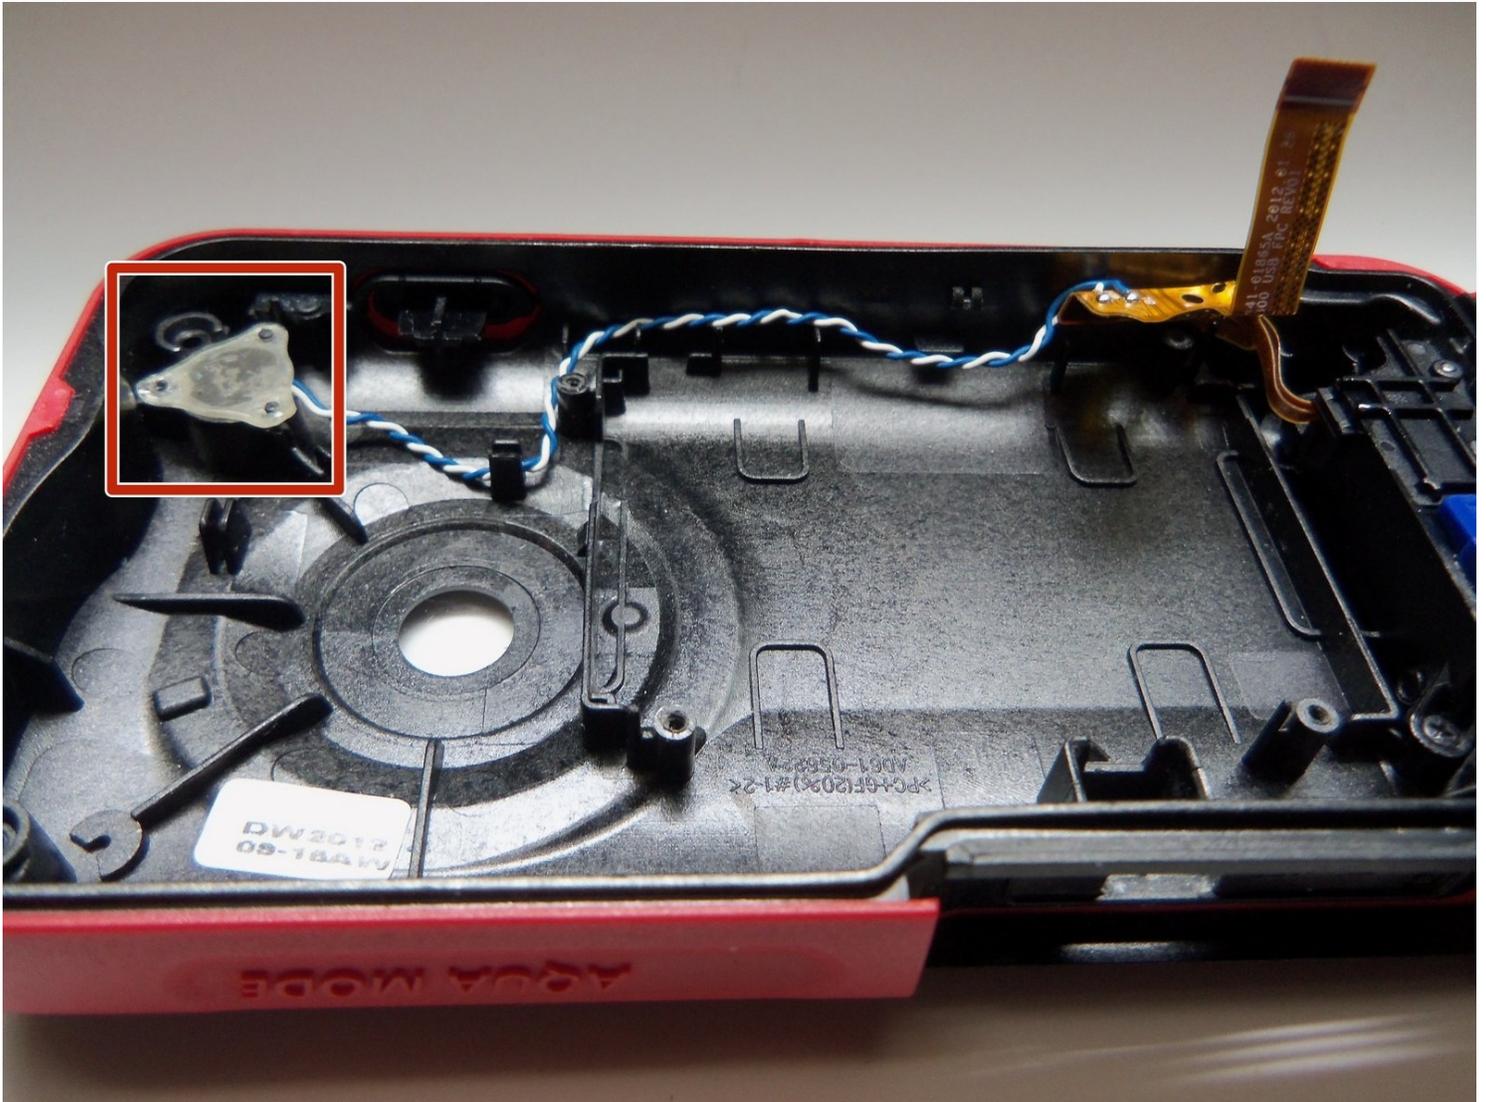

## INTRODUCTION

To replace USB port, remove battery first and then remove the USB port while connected to a wire.

### TOOLS:

1.5mm Hex Screwdriver (1)

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)

### Step 1 — Disassembling Samsung HMX-W300



- To remove the wristband of the device, grab the middle loop and pull the band through.

## Step 2



- Remove four screws with a Hex 1.5 mm screwdriver.

## Step 3



- Open the HDMI door on the side of the camera.
- Remove the single screw using a Phillips #00 screwdriver.


## Step 4



- Use the iFixit opening tool on both sides on the device. Pry apart both sections with light force.



⚠ Do not apply too much force. There is a wire that attaches the front case with the rear case that can be damaged.

## Step 5

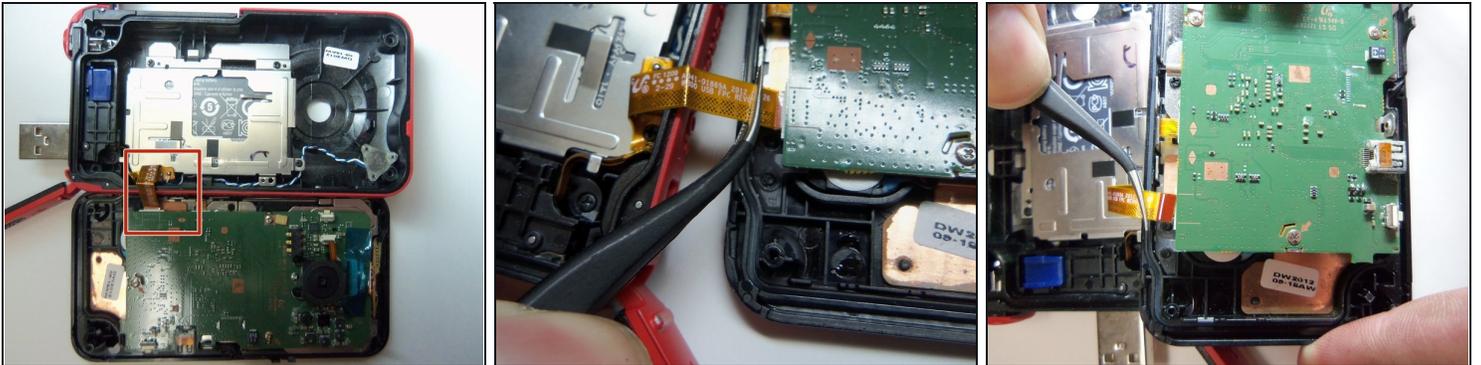


- Pull the wire ribbon out with a pair of [tweezers](#).

## Step 6 — Battery

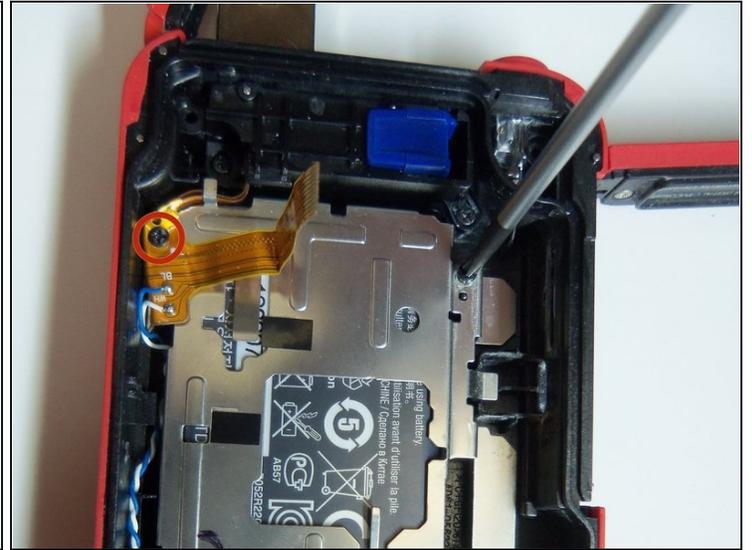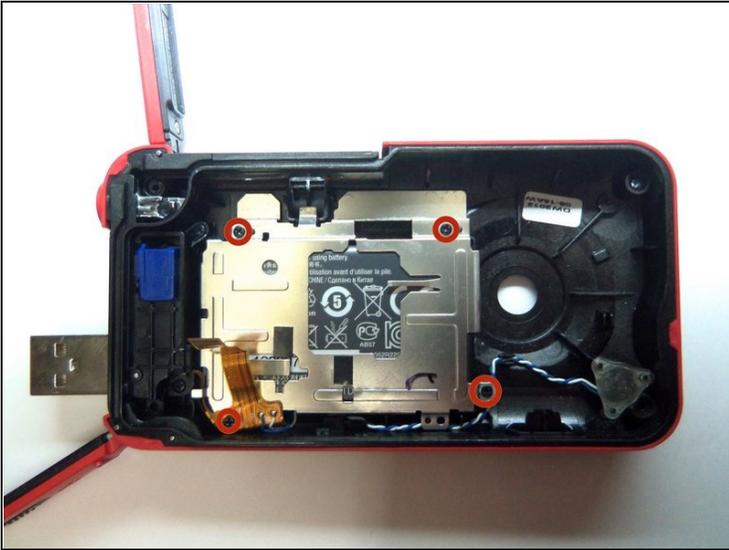

- Remove the four screws from the battery housing using a Phillips #00 screwdriver.

## Step 7

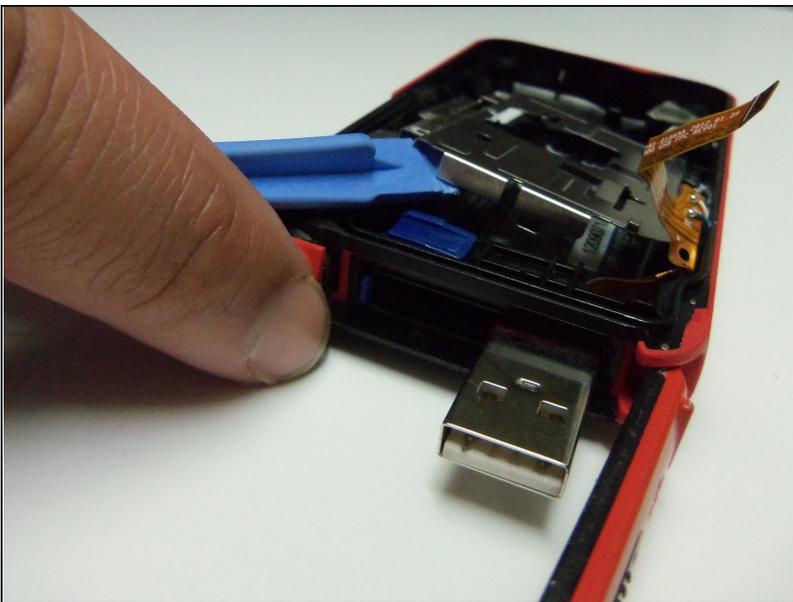


- Use the iFixit opening tool to pry the battery housing open.

## Step 8



- After removing the battery housing, take the battery out.

## Step 9 — USB Port

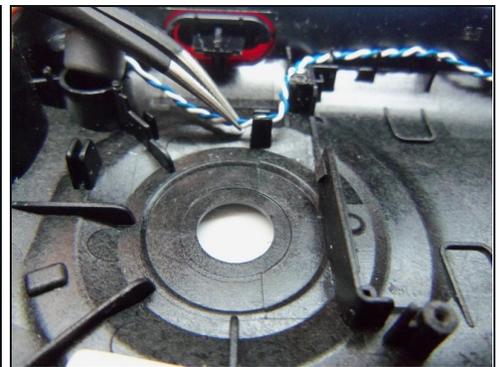


- Use an iFixit opening tool to pry up the plastic cover.
- Use [tweezers](#) to remove the wire from the slots.

## Step 10



- Remove both screws from the USB port using a Phillips #00 screwdriver.

## Step 11

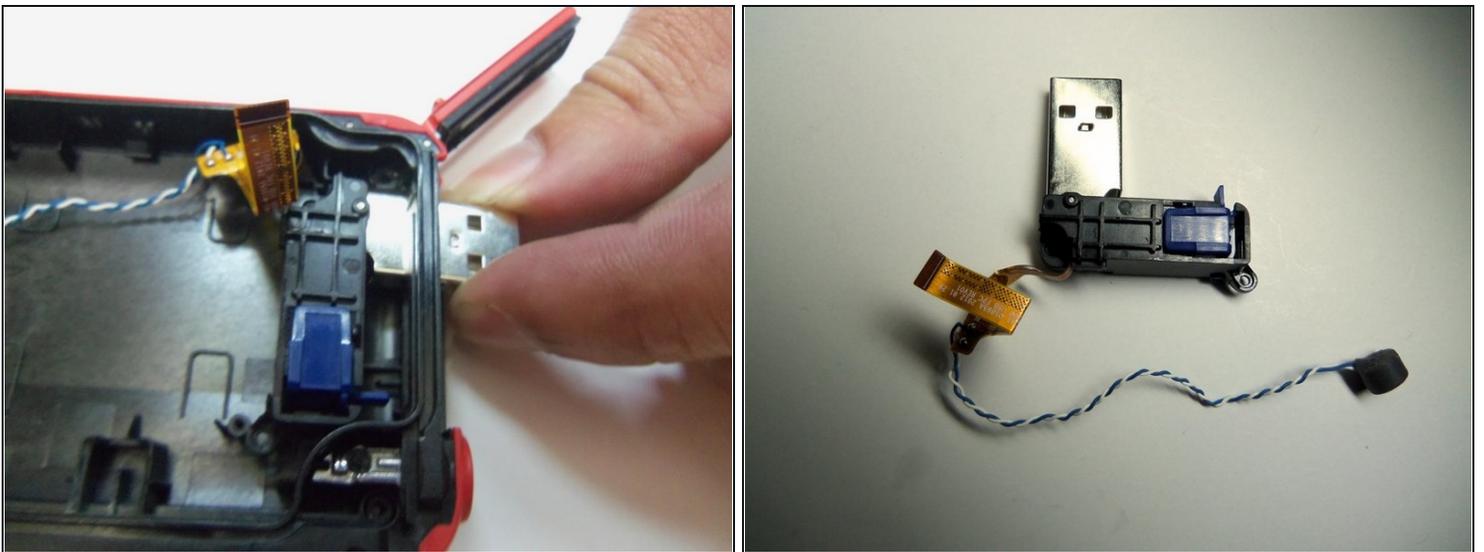

- Push the USB port inside the case to remove it from the device.

---

To reassemble your device, follow these instructions in reverse order.