



# Canon PowerShot A590 IS Memory Card Replacement

This guide will instruct the user on how to replace the memory card in the Canon A590 IS.

Written By: Zach



## INTRODUCTION

This guide will instruct the user on how to open the bottom hatch to access the batteries and memory card, and to remove and replace the memory card.


## Step 1 — Open the Battery Hatch



 Be gentle with the hatch, it is fragile.

- \*See [battery replacement](#) guide for help opening the hatch.

## Step 2 — Locate Memory Card

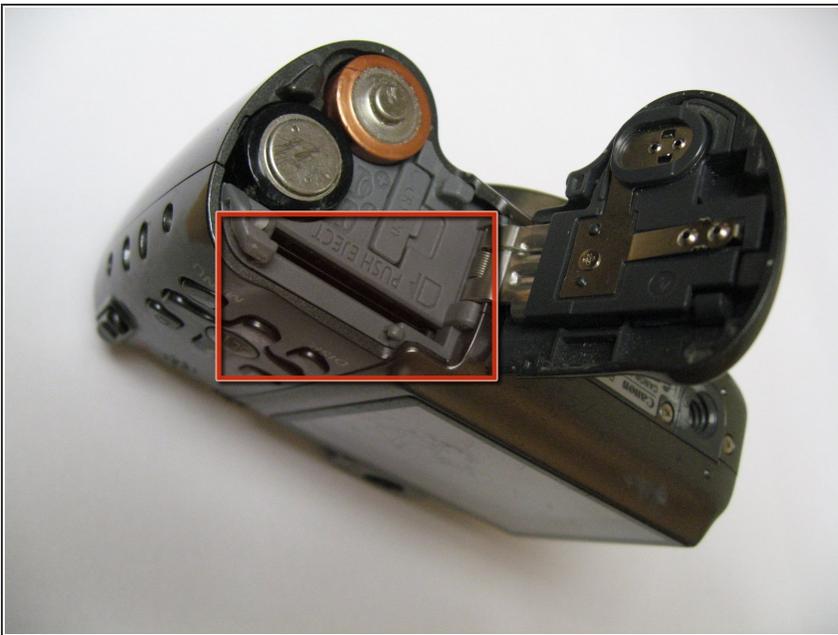

- The memory card slot is shown here in the red rectangle.

### Step 3 — Remove Memory Card



- To eject your memory card, simply press it into the camera gently, and it will spring out.
- After it has been released from the camera, just pull it out.

### Step 4 — Replace Memory Card



- To replace the memory card, make sure it is oriented with the label facing towards the front of the

---

camera, with the contacts going in first, facing the back of the camera.

- Push the card into the slot gently until you hear a 'click'. It will then be locked into place in the camera.

---

To reassemble your device, follow these instructions in reverse order.