


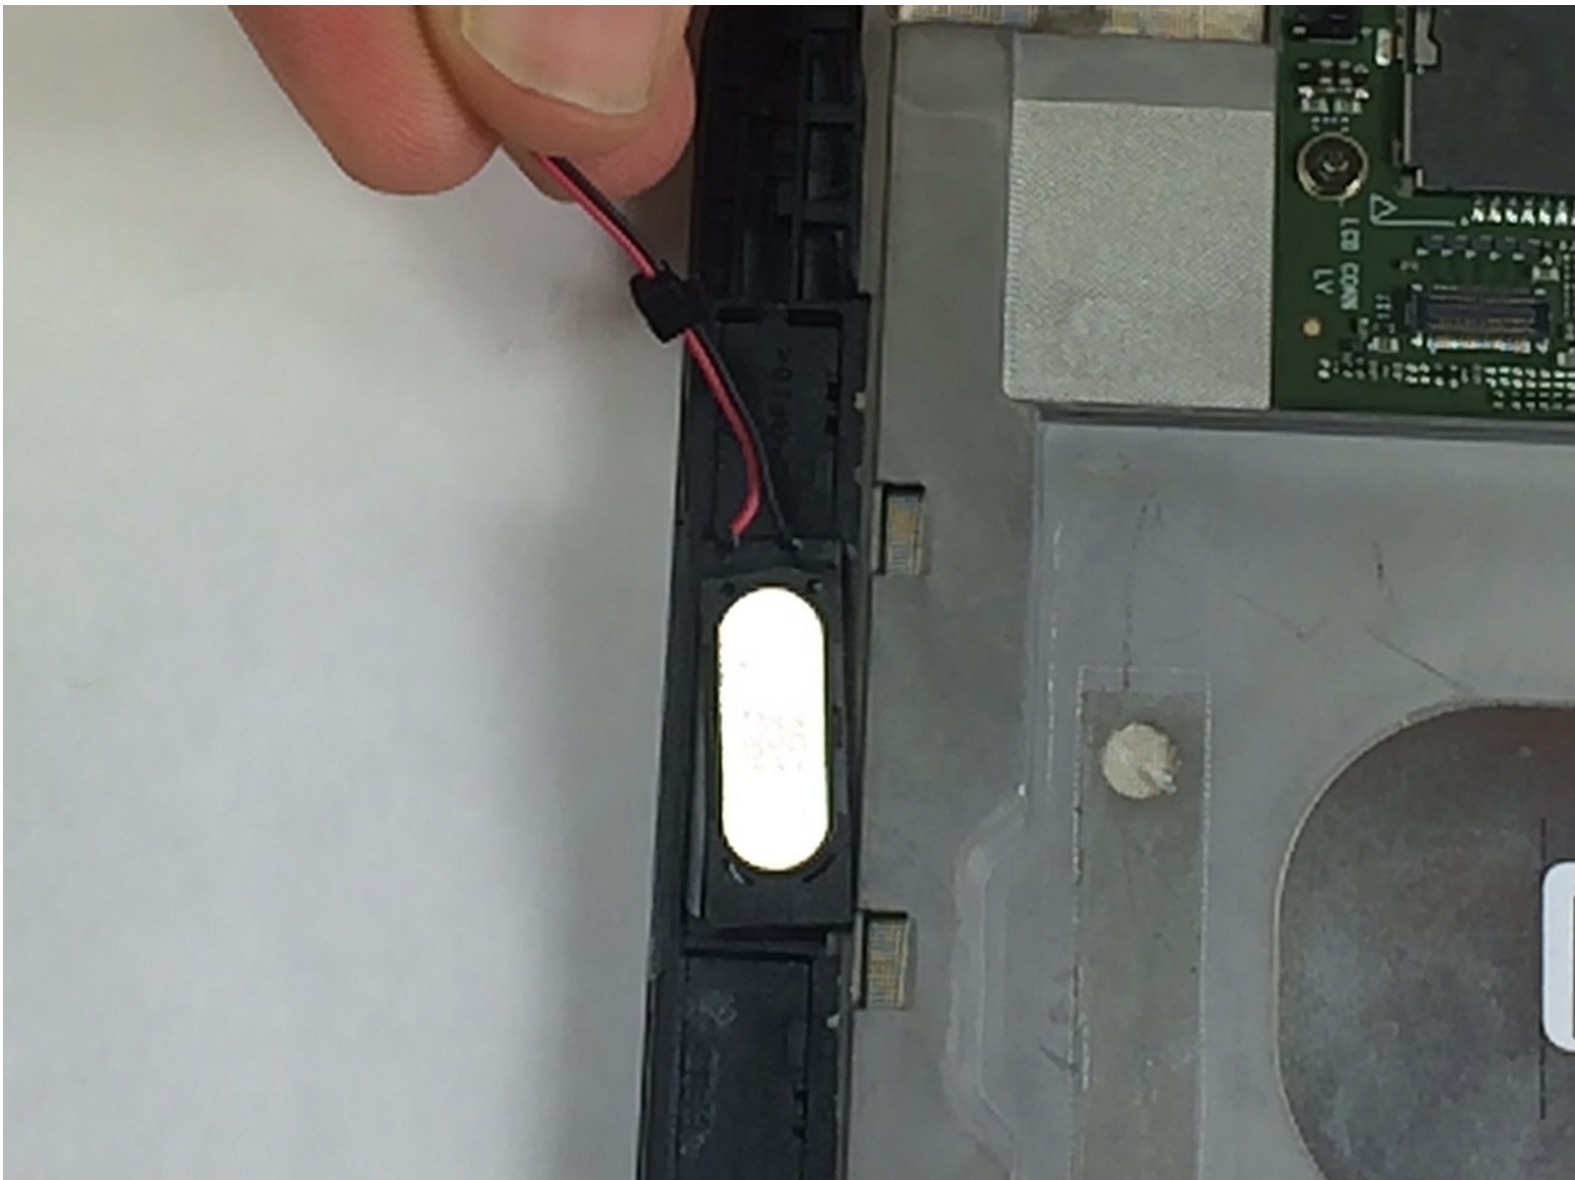

# Dell Venue 7 Speaker Replacement

This guide will show you how to replace the Dell Venue 7 internal speaker.

Written By: Stephen Rousseau



---

## INTRODUCTION

If you want to replace the speaker you must first get a new one. Once you do, then you are ready to follow these easy steps.



### TOOLS:

- [Spudger](#) (1)
-


## Step 1 — Rear Case



- Use a spudger or your fingers to pry off the back case.

⚠ If your case is badly damaged, use caution because the fragments may be sharp.

## Step 2 — Battery

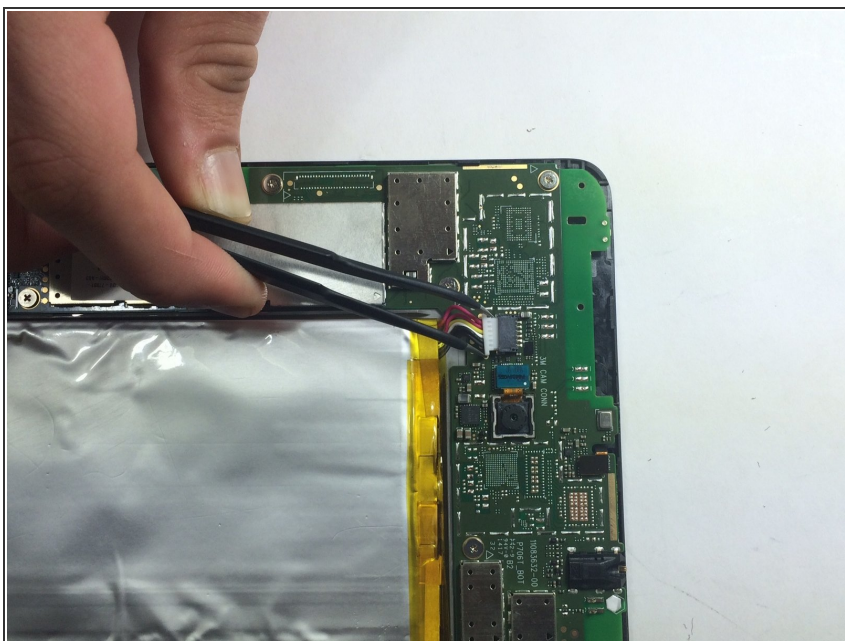

- Gently disconnect the battery from the motherboard using your fingers or a pair of tweezers.



### Step 3





- Remove the battery by pulling it from the edges and carefully peeling it off of the base.
- ⓘ There is adhesive keeping the battery in place, so don't be afraid to use a little extra force.
- ⚠ Do not bend or warp the battery in any way as it can be a fire hazard.

### Step 4 — Speaker




- Use a spudger to remove the ribbon cable that is around the speaker wire.

## Step 5

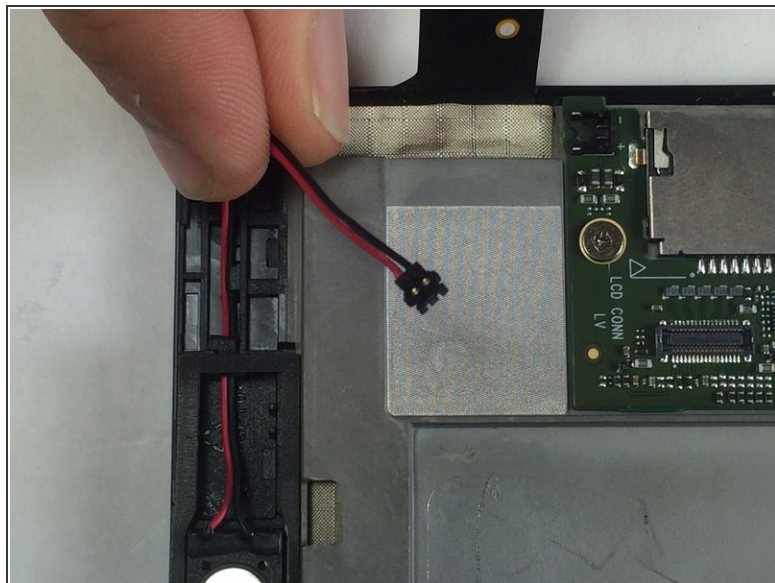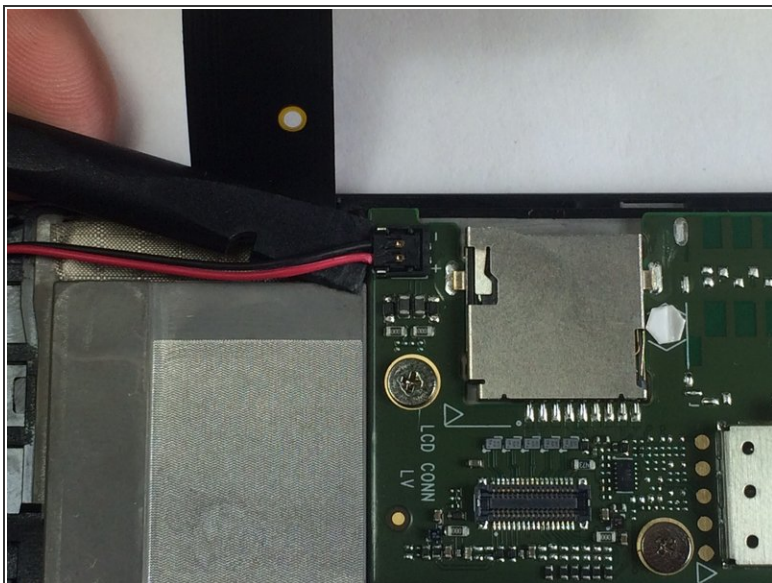


- Disconnect the speaker wire from the motherboard by prying the connector upwards with the spudger.

## Step 6

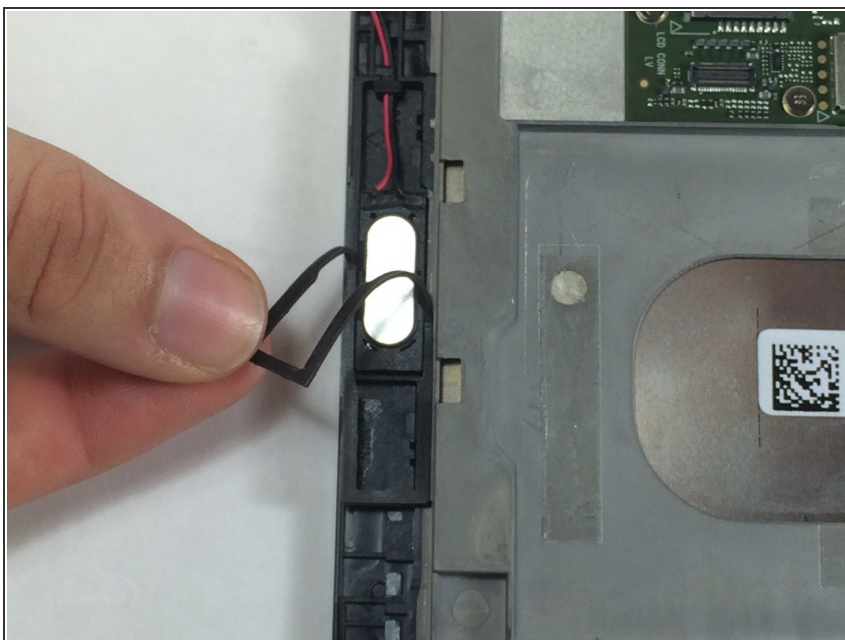

- Remove the plastic covering on the speaker.

## Step 7

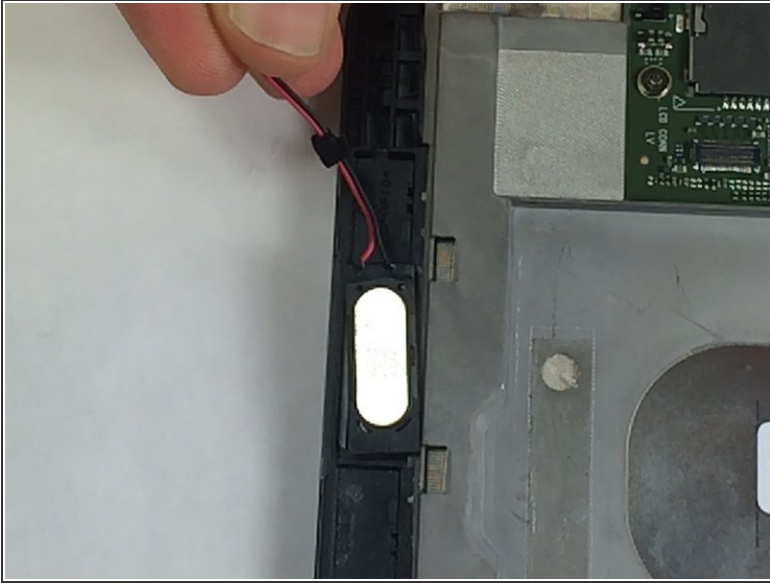

- Gently pull on the wire and remove the speaker.

To reassemble your device, follow these instructions in reverse order.