



Audiovox CDM-8910 LCD Screen Replacement

This guide will instruct the reader on how to replace the LCD screen of the Audiovox CDM-8910.

Written By: Kevin Jafarey



INTRODUCTION

The LCD screen is the main display of the Audiovox CDM-8910.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — LCD Screen




- With phone in the flipped-open position, use a spudger to remove the four (4) rubber pads (one shown in red circle) located near the corners of the face with the LCD screen.

Step 2




- Use a small Phillips head screwdriver to remove the four (4) screws exposed by removed rubber pads.

Step 3

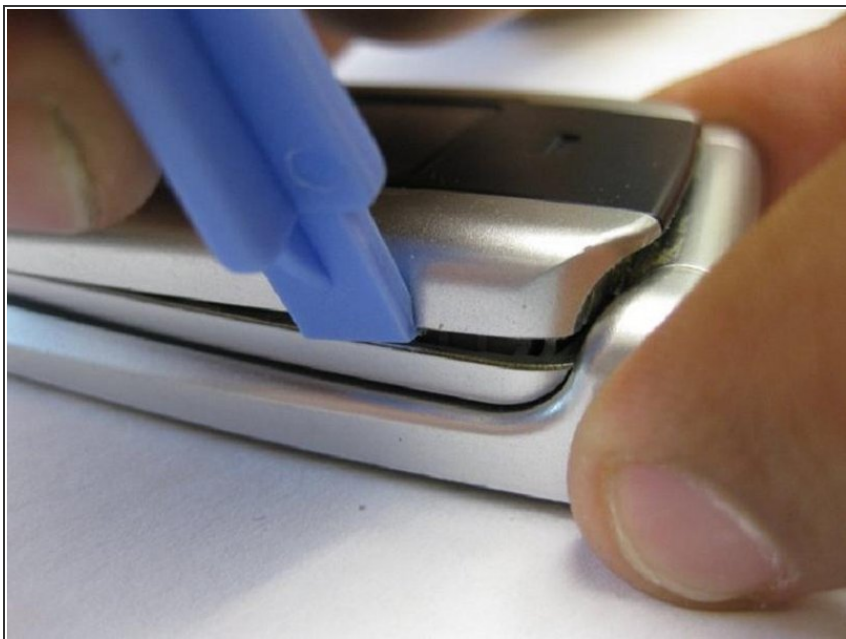

- Use a spudger to pry the front cover off of the phone, gradually working your way around the front face.

Step 4

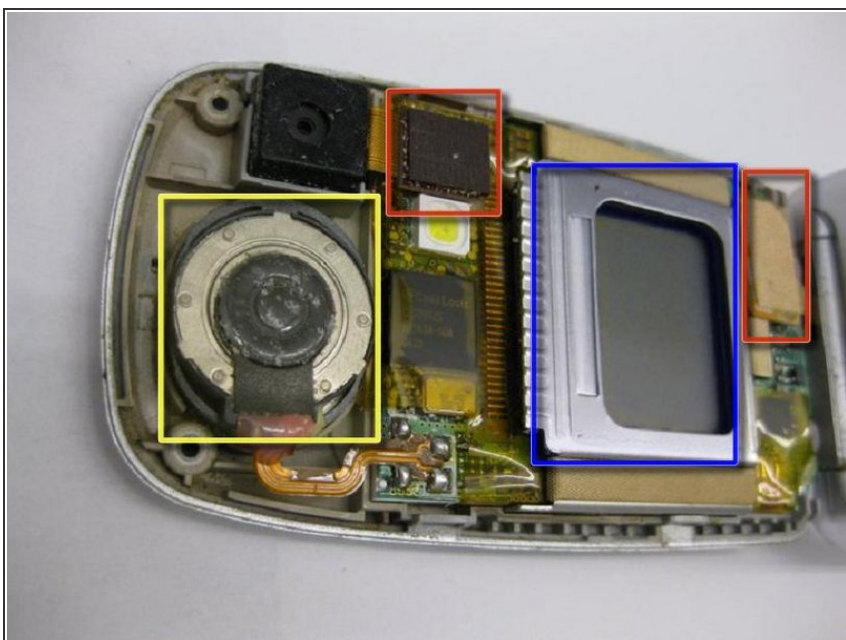


- Use a spudger to lift away and remove the metallic frame (in blue).
- Use the spudger to lift away the two electrical contacts (in red).
- Use the spudger to lift away the speaker (in yellow).

Step 5



- This is what the rear of the LCD screen should look like before proceeding. Note all necessary connections are undone.

Step 6

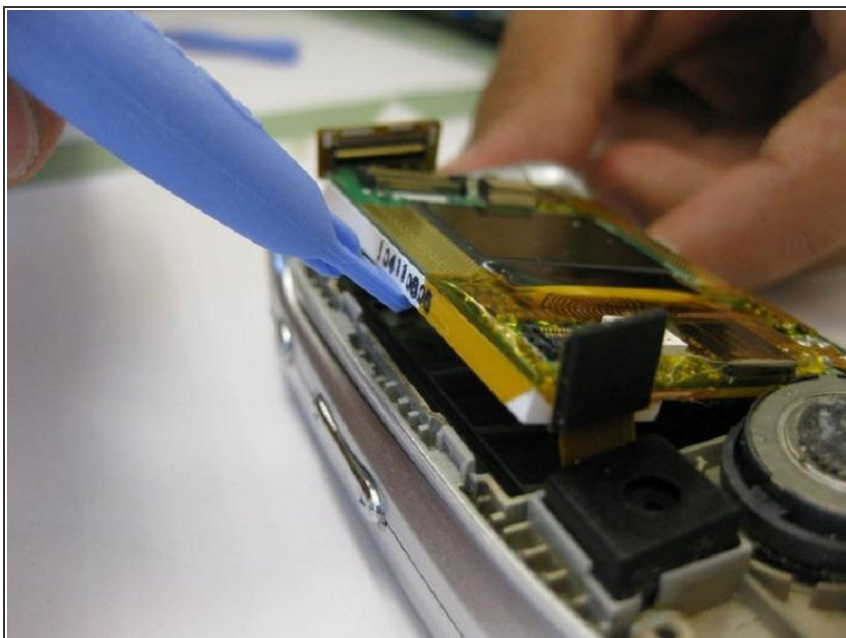

- Use a spudger to lift away the LCD screen.

Step 7



- LCD screen successfully removed!

To reassemble your device, follow these instructions in reverse order.