

XQ-673H Water Tubes Replacement

This guide will show the owner how to take apart the device and show the owner how to replace the water tubes.

Written By: Sean Perry



INTRODUCTION

This guide will help the owner of a Kitchen Gourmet XQ-673H replace the water tubes.

TOOLS:

- Small Needle Nose Pliers (1)
- Phillips #1 Screwdriver (1)

Step 1 — Water Tubes




- Make sure the device is unplugged before continuing.
 - Turn the Kitchen Gourmet upside down.

Step 2



- Using a Phillips #1 screwdriver, remove the six 10mm screws found on the bottom of the device.
- Remove the bottom cover.


Step 3

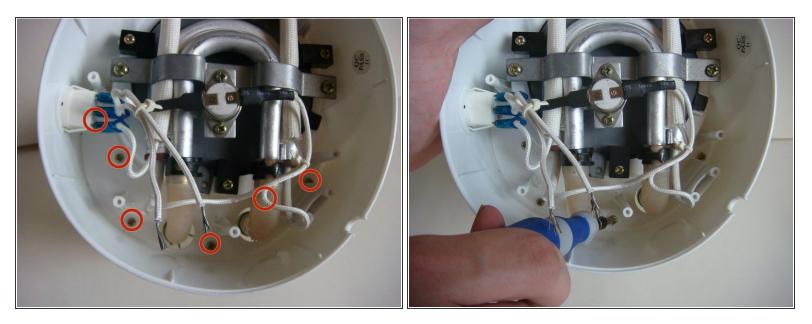

• Using a Phillips #1 screwdriver, remove the six 12mm screws.


(i) Some screws are not visible from this photo, but their location is highlighted by the circles.

Step 4

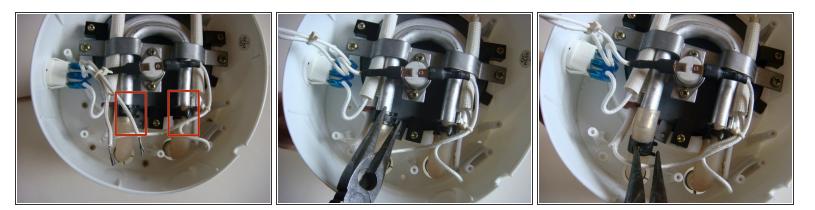

- Using small needle nose pliers, squeeze the metal that is covering the tube.
- Carefully slide down the metal covering.
- Repeat this step for the other tube.

Step 5

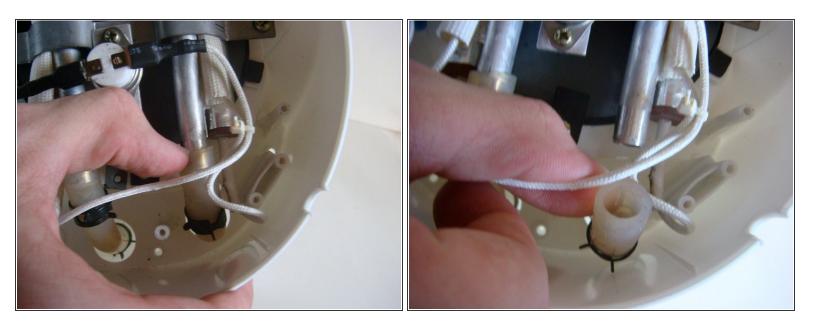


• Using your fingers, gently slide off the Water Tubes.

Step 6



• Carefully lift the bottom section off the device.

Step 7

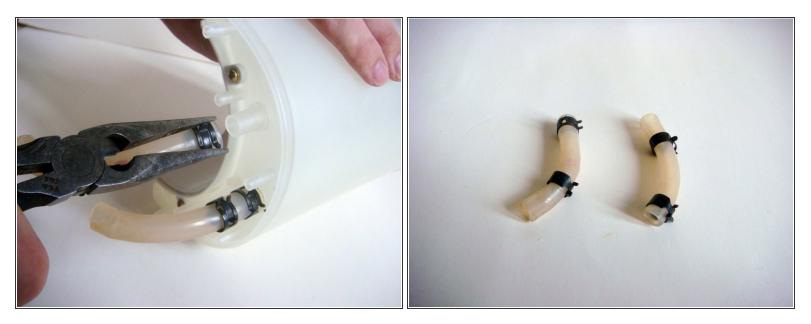

- Using small needle nose pliers, squeeze the metal that is covering the tube.
- Carefully slide down the metal covering.
- Repeat this step for the other tube.
- Remove both of the Water Tubes completely.

To reassemble your device, follow these instructions in reverse order.