


Gateway MD2614u RAM Replacement

You are going to remove the back cover, locate...

Written By: Toni Pipes

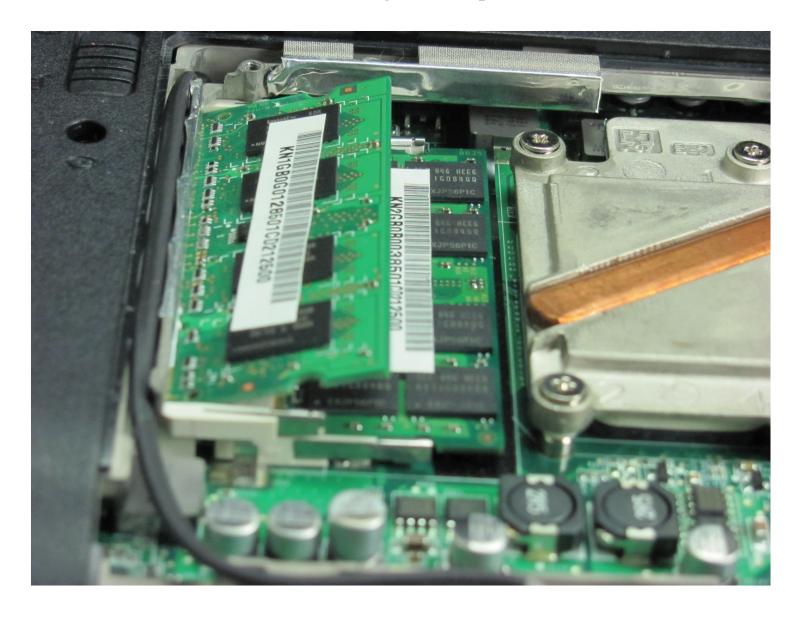

INTRODUCTION

You are going to remove the back cover, locate the RAM, take out the RAM, and either replace it or reinstall it.



Phillips #00 Screwdriver (1)

PARTS:

PC2-5300 1 GB RAM Chip (1)
PC2-5300 2 GB RAM Chip (1)

Step 1 — Back Cover



 Place the laptop so the back cover is facing up.

Step 2



 Remove the 8 screws from the back cover using the Phillips #00 screwdriver.

Step 3



• Lift off the cover.

Step 4 — RAM



 Identify the RAM, which is a stack of two green cards in the upper left-hand corner.

Step 5




 There are silver tabs on both sides of the ram.
 Simultaneously push the silver tabs outward.

Step 6



- The card pops up 20 degrees and is loose enough to remove with your hand.
- Carefully pull the card to the right horizontally.

Step 7

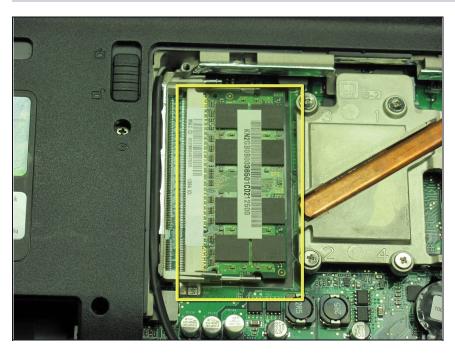

• Follow the same steps for the second RAM card, which is under the one you just removed.

To reassemble your device, follow these instructions in reverse order.