

HP Pavilion dv5000 Battery Replacement

How to replace your battery.

Written By: Farid Khoshnevissan



INTRODUCTION

How to replace your battery.

PARTS:

HP Pavilion dv5000 Battery Replacment (1)

Step 1 — Battery



Turn off the computer, and unplug it from all external power sources.

- Lay the computer face-down on a flat surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image by the red rectangle. Slide the switch from right to left, and remove the battery.

To reassemble your device, follow these instructions in reverse order.