


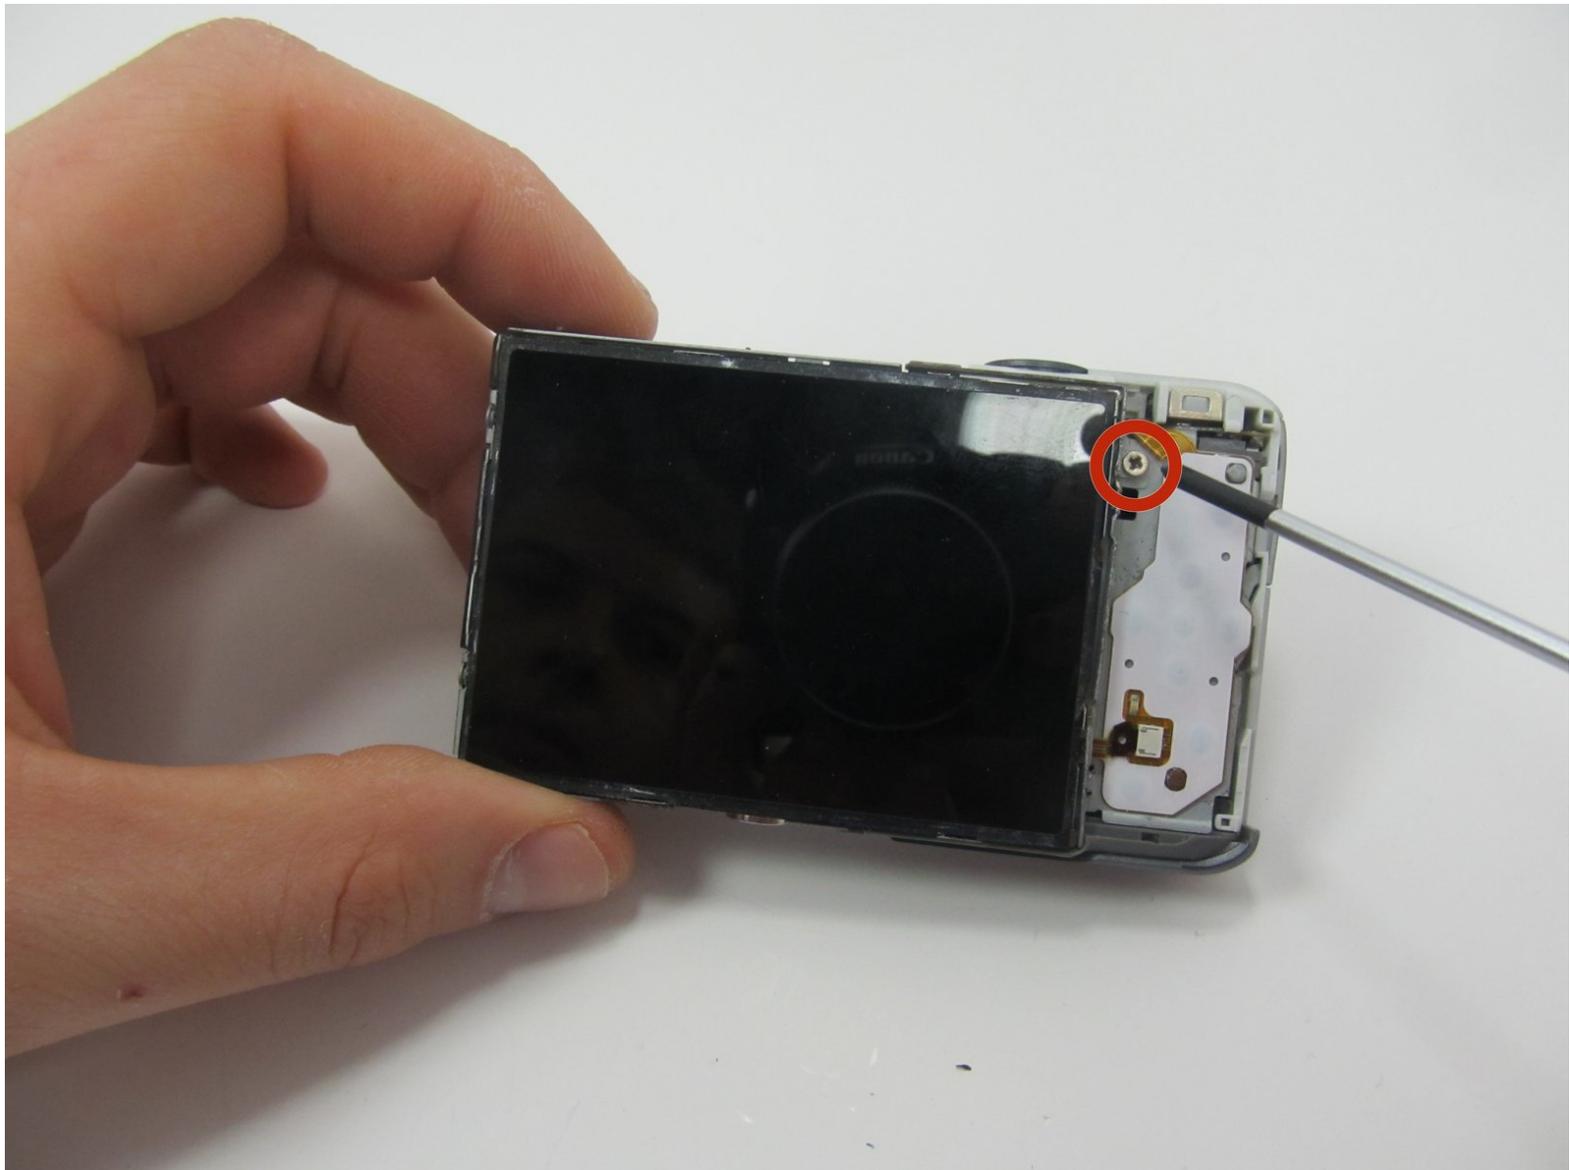

# Canon Powershot ELPH 100 HS LCD Display Replacement

This guide will teach you how to replace a damaged LCD screen.

Written By: Jacob



## INTRODUCTION

A common issue with this camera is a cracked display screen or the screen not showing the picture, meaning it is damaged. This guide will walk you through the process of replacing the screen.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [Canon PowerShot ELPH 100 HS Screen](#) (1)

## Step 1 — Battery




- Locate the battery cover on the bottom of your camera.
- Slide the tab to the right to open the battery cover.

## Step 2



- Flip the battery cover open.
- Using your fingers, slide the battery out of the camera.
- ⓘ This was not the original battery that came the camera, so yours may look different.

### Step 3 — Memory Card

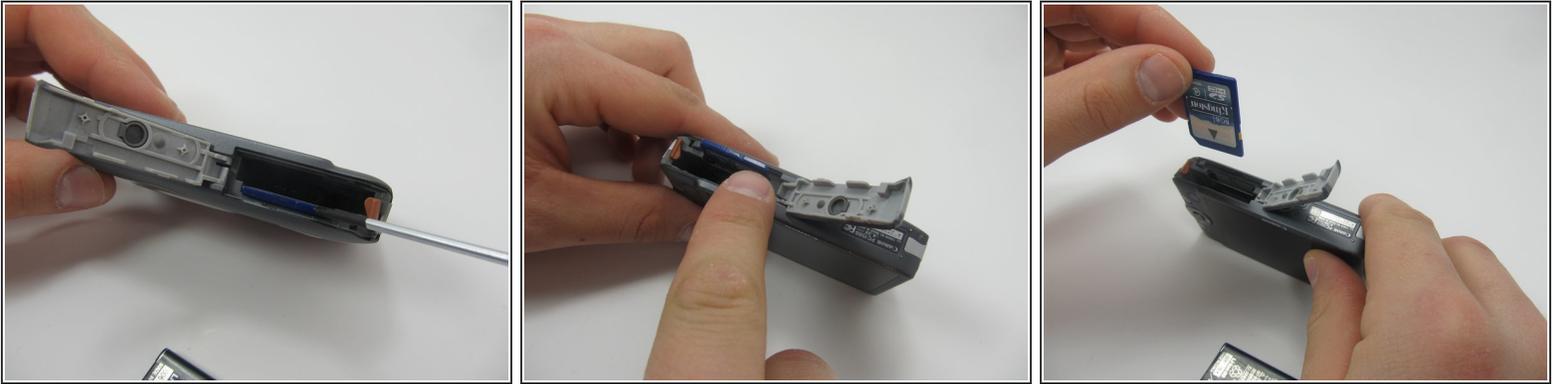

- Push down on the memory card until it clicks and releases.
- Pull up on the memory card to remove it.

### Step 4 — Outer Case



- Using the Phillips #00 screwdriver, remove the two 3.1mm screws from the bottom of the camera.
- ☑ Keep track of all the screws that are being taken out from the outer case.
- ⓘ The display screen of the camera should be facing towards you.

## Step 5



- Ensure that the screen is facing you, and then rotate it till you see the screws on the side of the camera.
- Use the Phillips #00 screwdriver to remove the two 3.1 mm screws.

## Step 6





- With the screen still facing you, rotate the camera 180 degrees.
-  The side with the charging port should now be facing up.

## Step 7




- Use the Philips #00 screwdriver to pry open the charging port cover.
  - Once you pry open the charging port cover, rotate the cover so that you have access to the screw underneath. Which is seen in the next image.
  - Remove both 3.1 mm screws using the Phillips #00 screwdriver.
- i** The image still shows the screw from step 3 in place.

## Step 8

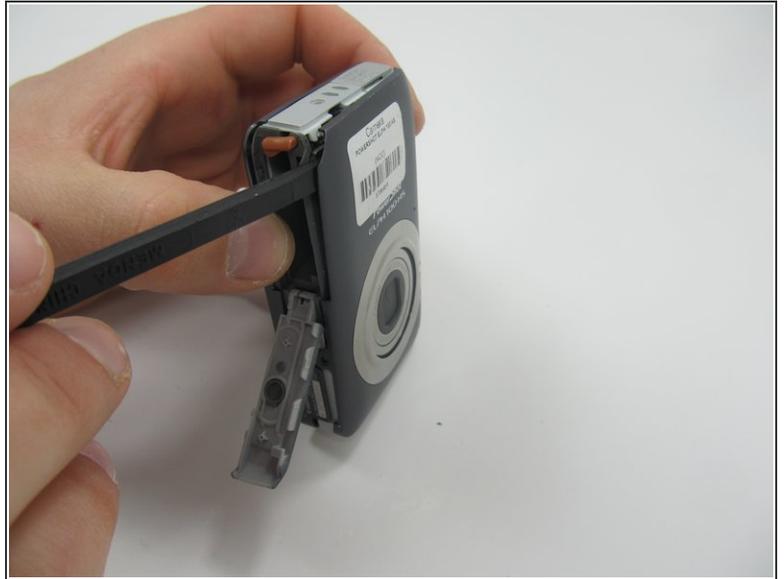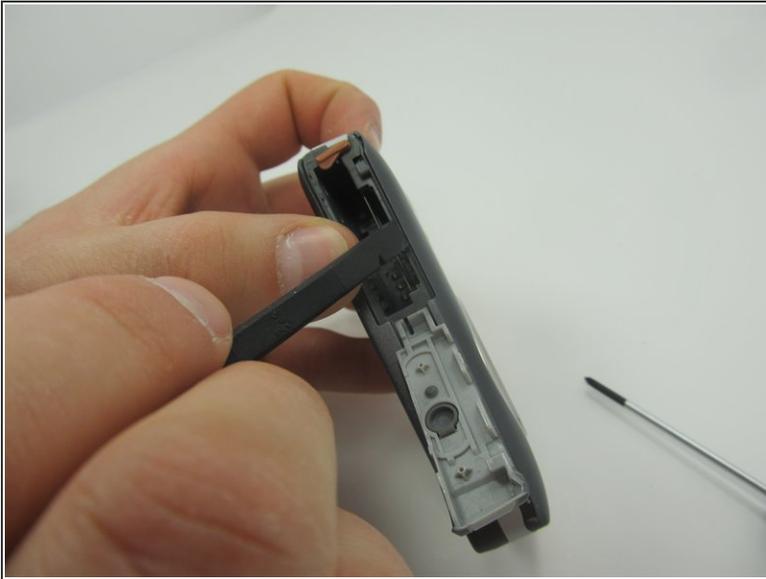


- Turn the camera so the bottom is once again facing up.
- With the battery door still open, use a spudger to remove the cover from the front of the camera.
- ⓘ Carefully go around all of the edges until the cover is released.

## Step 9

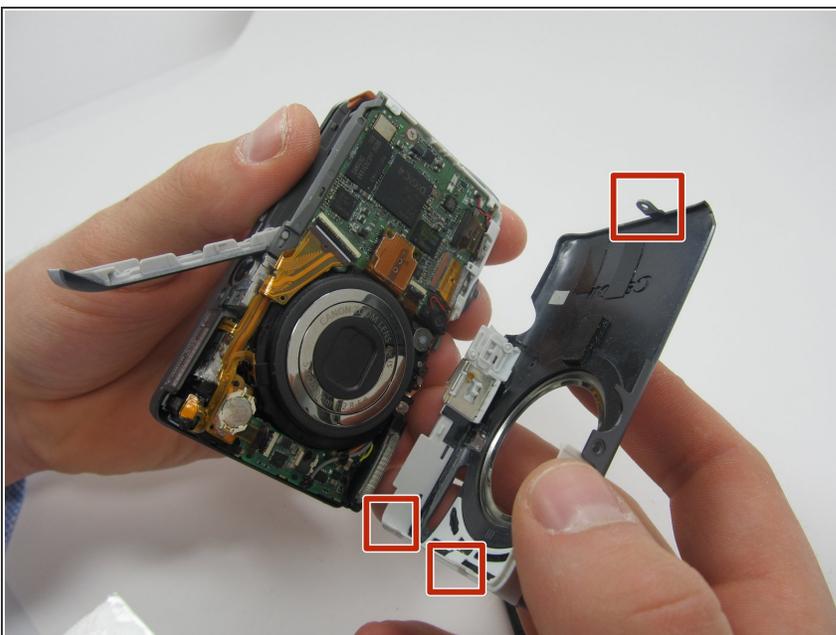


- Once the entire front cover has been released carefully pull it off.
- ⚠ Be careful not to break the tabs that hold it in place.

## Step 10

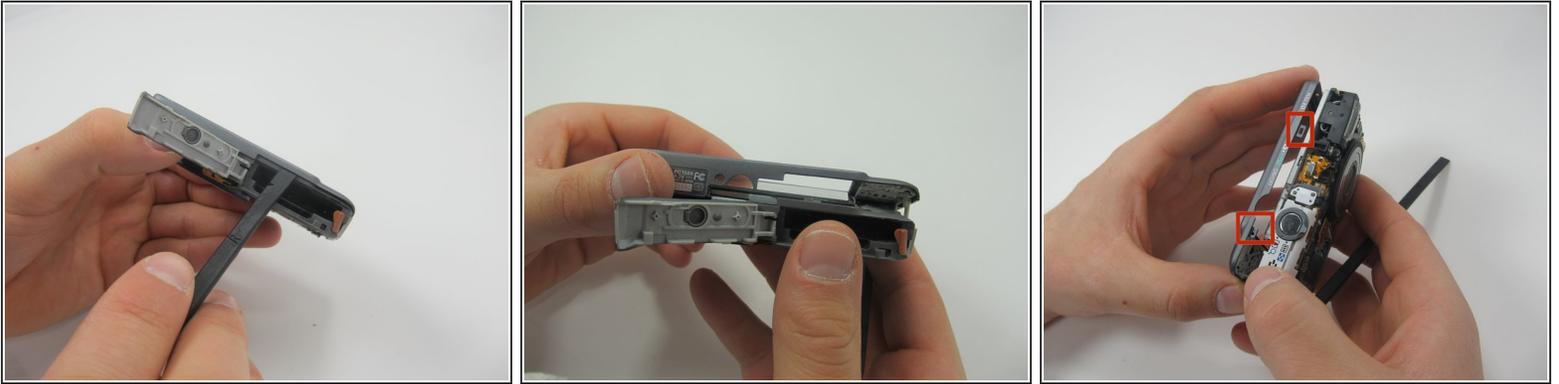


- Just like Step 4-6 , carefully use the Spudger to remove the back cover.
- ⓘ Go along all the borders of the back cover so that it releases from the camera safely.
- ⚠ Be careful not to break the tabs.

## Step 11 — LCD Display

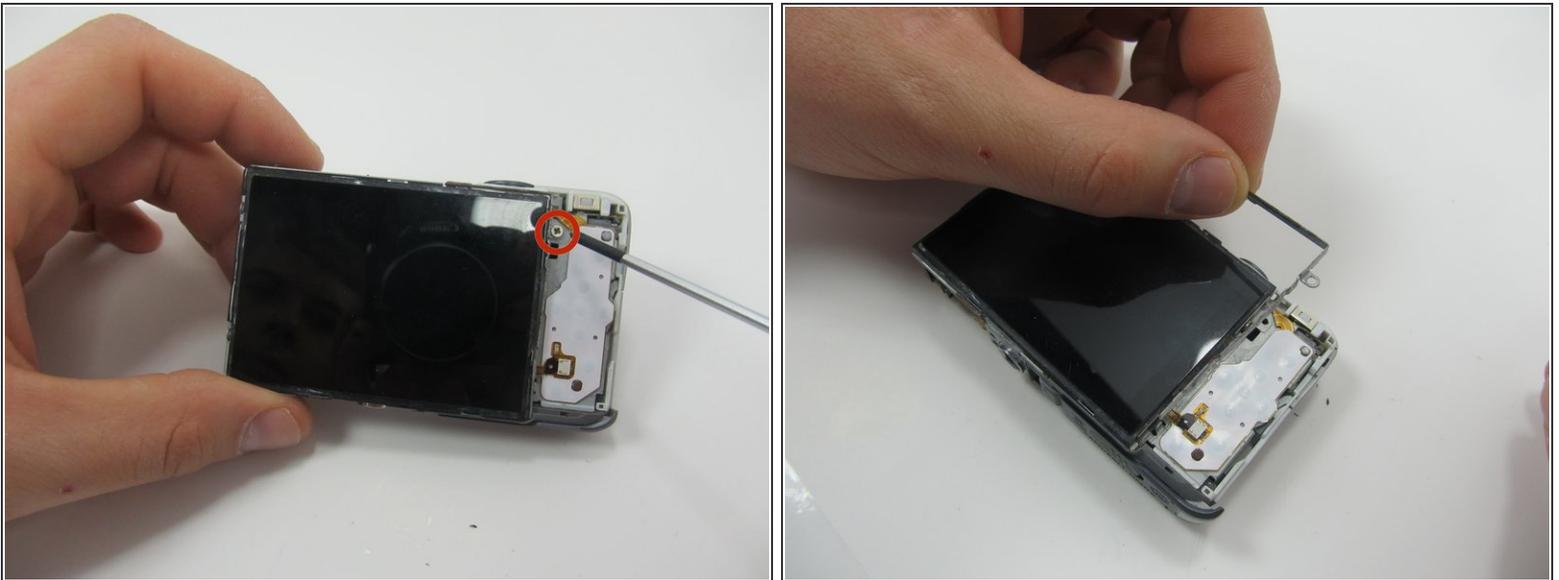


- Remove the 3.1mm screw on the top-right side of the LCD display screen.

## Step 12

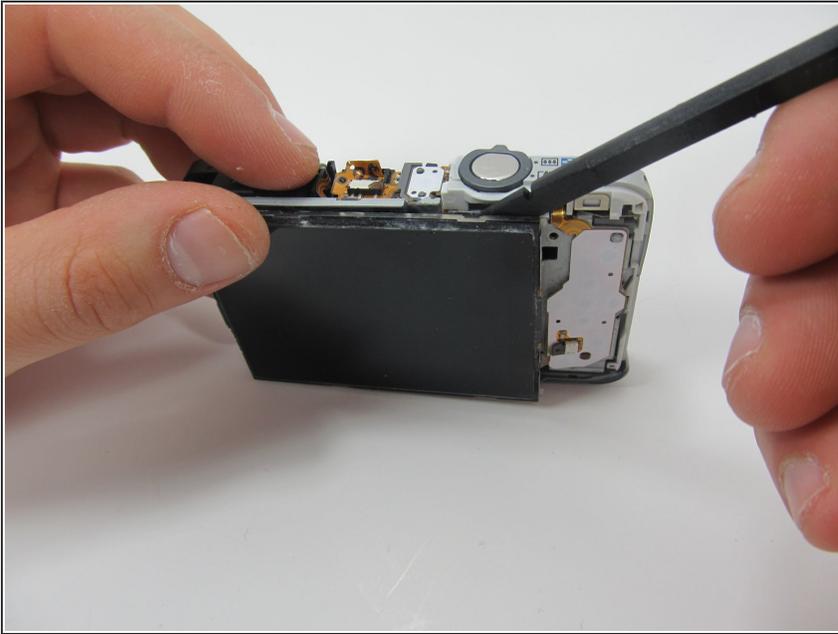



- Use the spudger to carefully separate the screen from the frame.

## Step 13

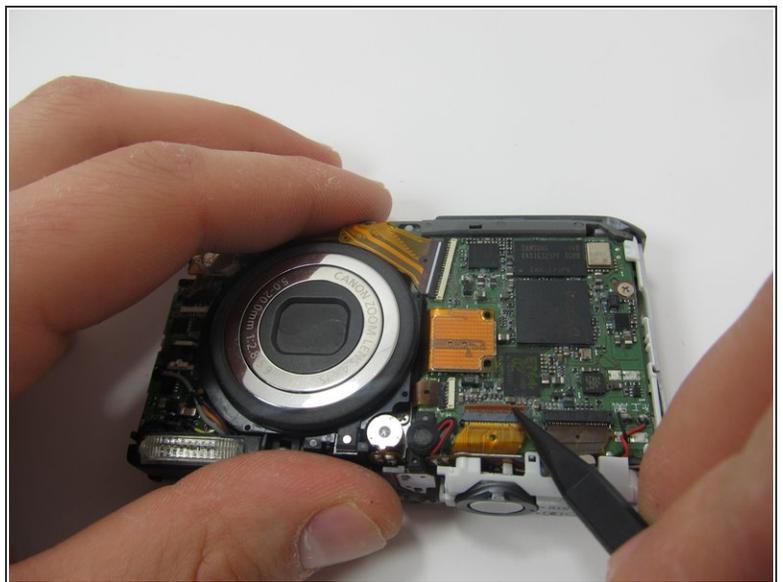


- Use the spudger to lift up the latch on the zero insertion force connector (ZIF).
- Slide the now free ribbon cable from the connector.

## Step 14

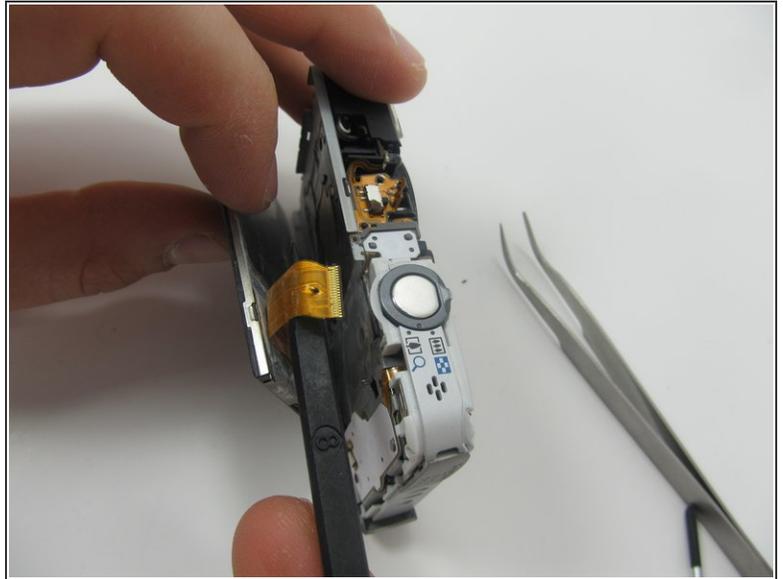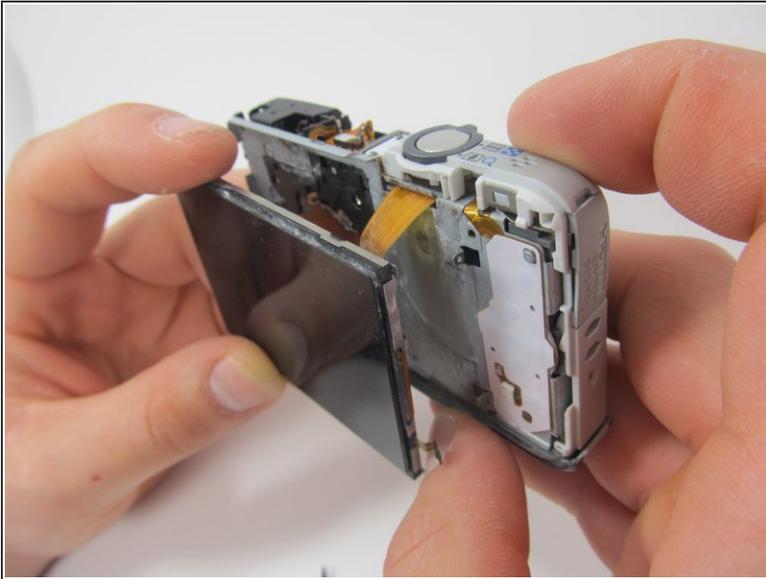


- Holding the display screen, gently pull the ribbon cable out through the frame of the camera.

## Step 15

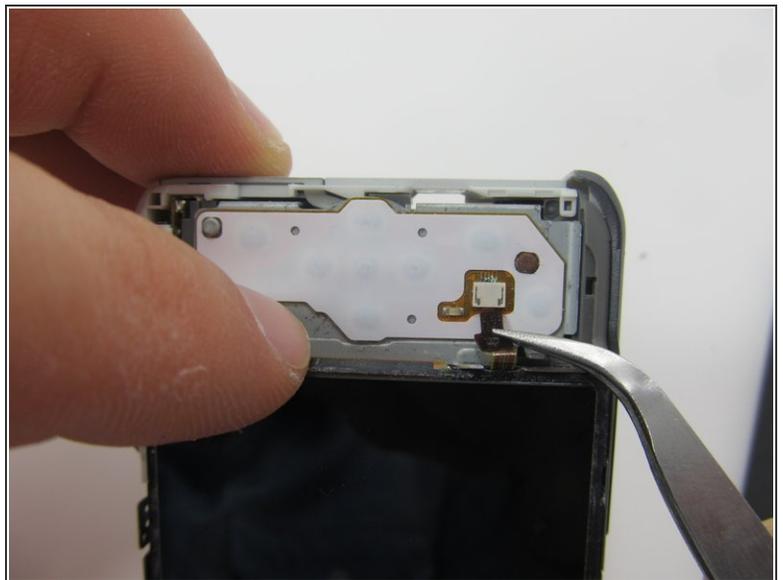

- Using tweezers, carefully remove the ribbon cable from the connector shown.

## Step 16

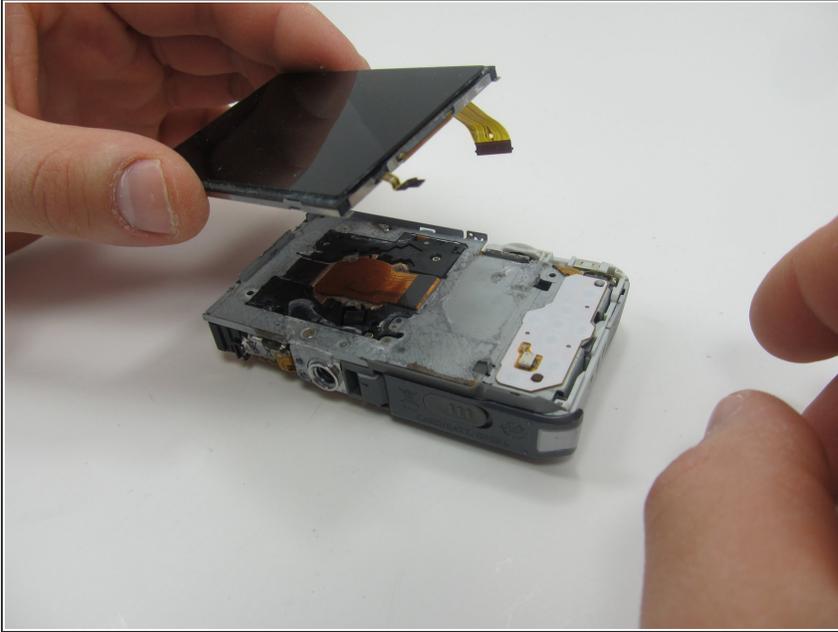

- The display screen should now be free.

To reassemble your device, follow these instructions in reverse order.