




Samsung DV300F Back LCD Screen Replacement

This guide will serve as a replacement guide for the Back LCD for the Samsung DV300F.

Written By: Timothy Gordon

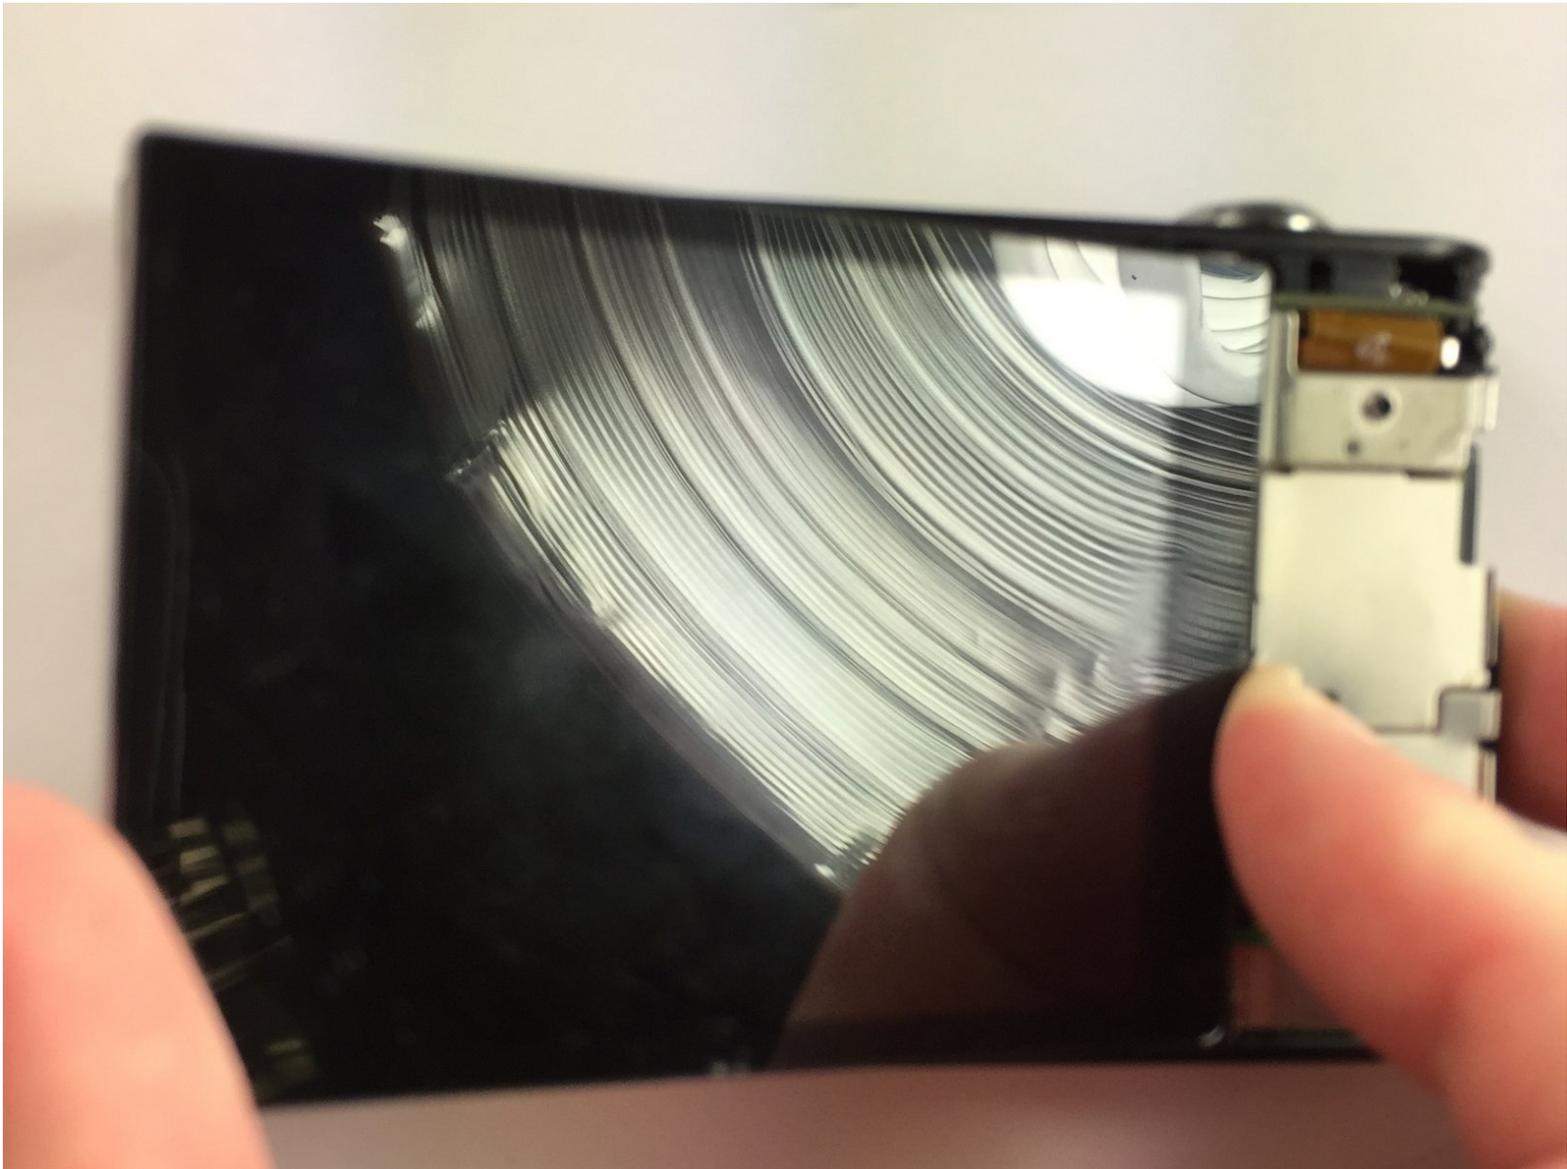

INTRODUCTION

This guide will show how to remove the Back LCD Screen.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Rear Casing




- Remove the two black 4.2 mm screws on the right side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the left side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the bottom of the camera using a Phillips #0 screwdriver.

Step 2



- Remove the back case of the camera carefully.

Step 3

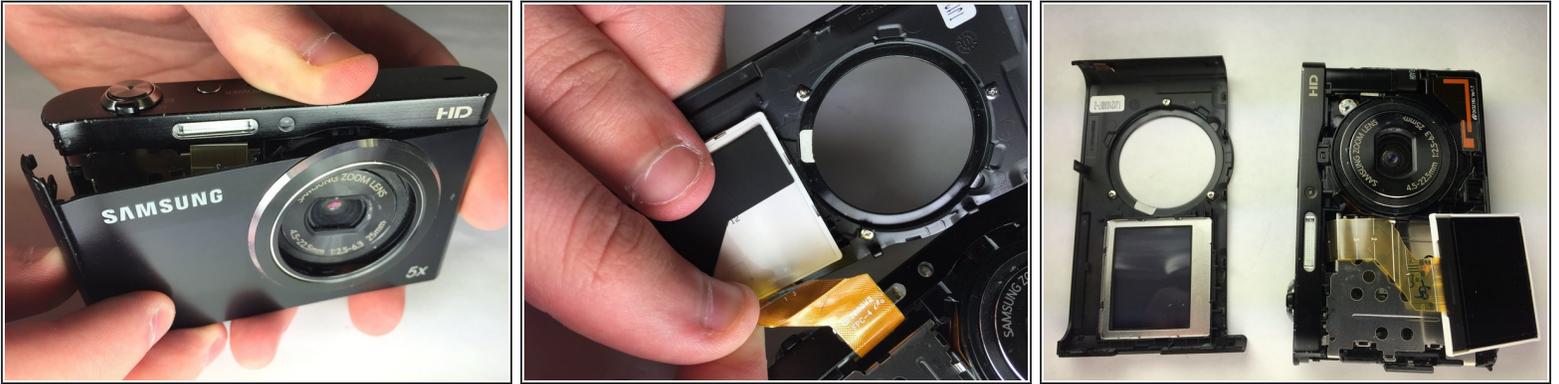


- Remove the front case of the camera.
- Remove the front LCD screen from the front case next to the lens.

Step 4 — Back LCD Screen



- Remove the back LCD screen from its place carefully.

Step 5

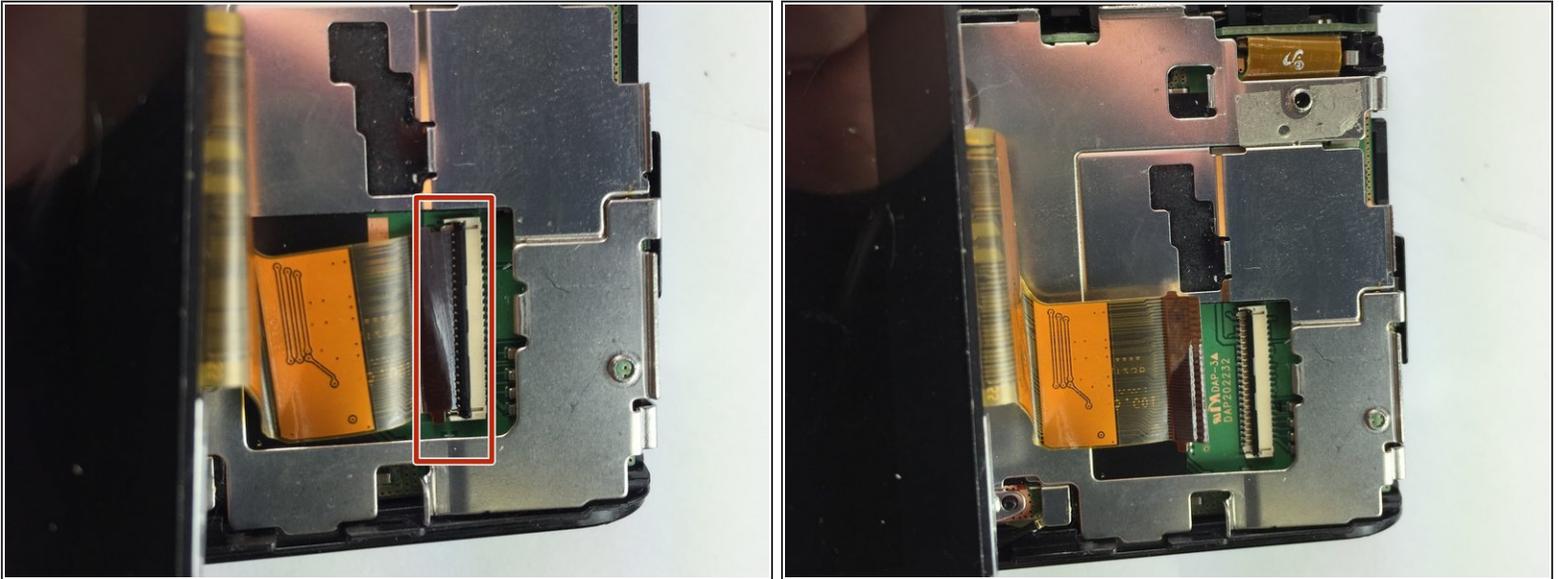

- Flip the black tab where the back LCD screen connects to the circuit board.
- Pull the tape connection to disconnect the back LCD screen from the circuit board.

To reassemble your device, follow these instructions in reverse order.