 




Polaroid S10 Speaker Dissassembly

prerequisite only

Written By: Christofer

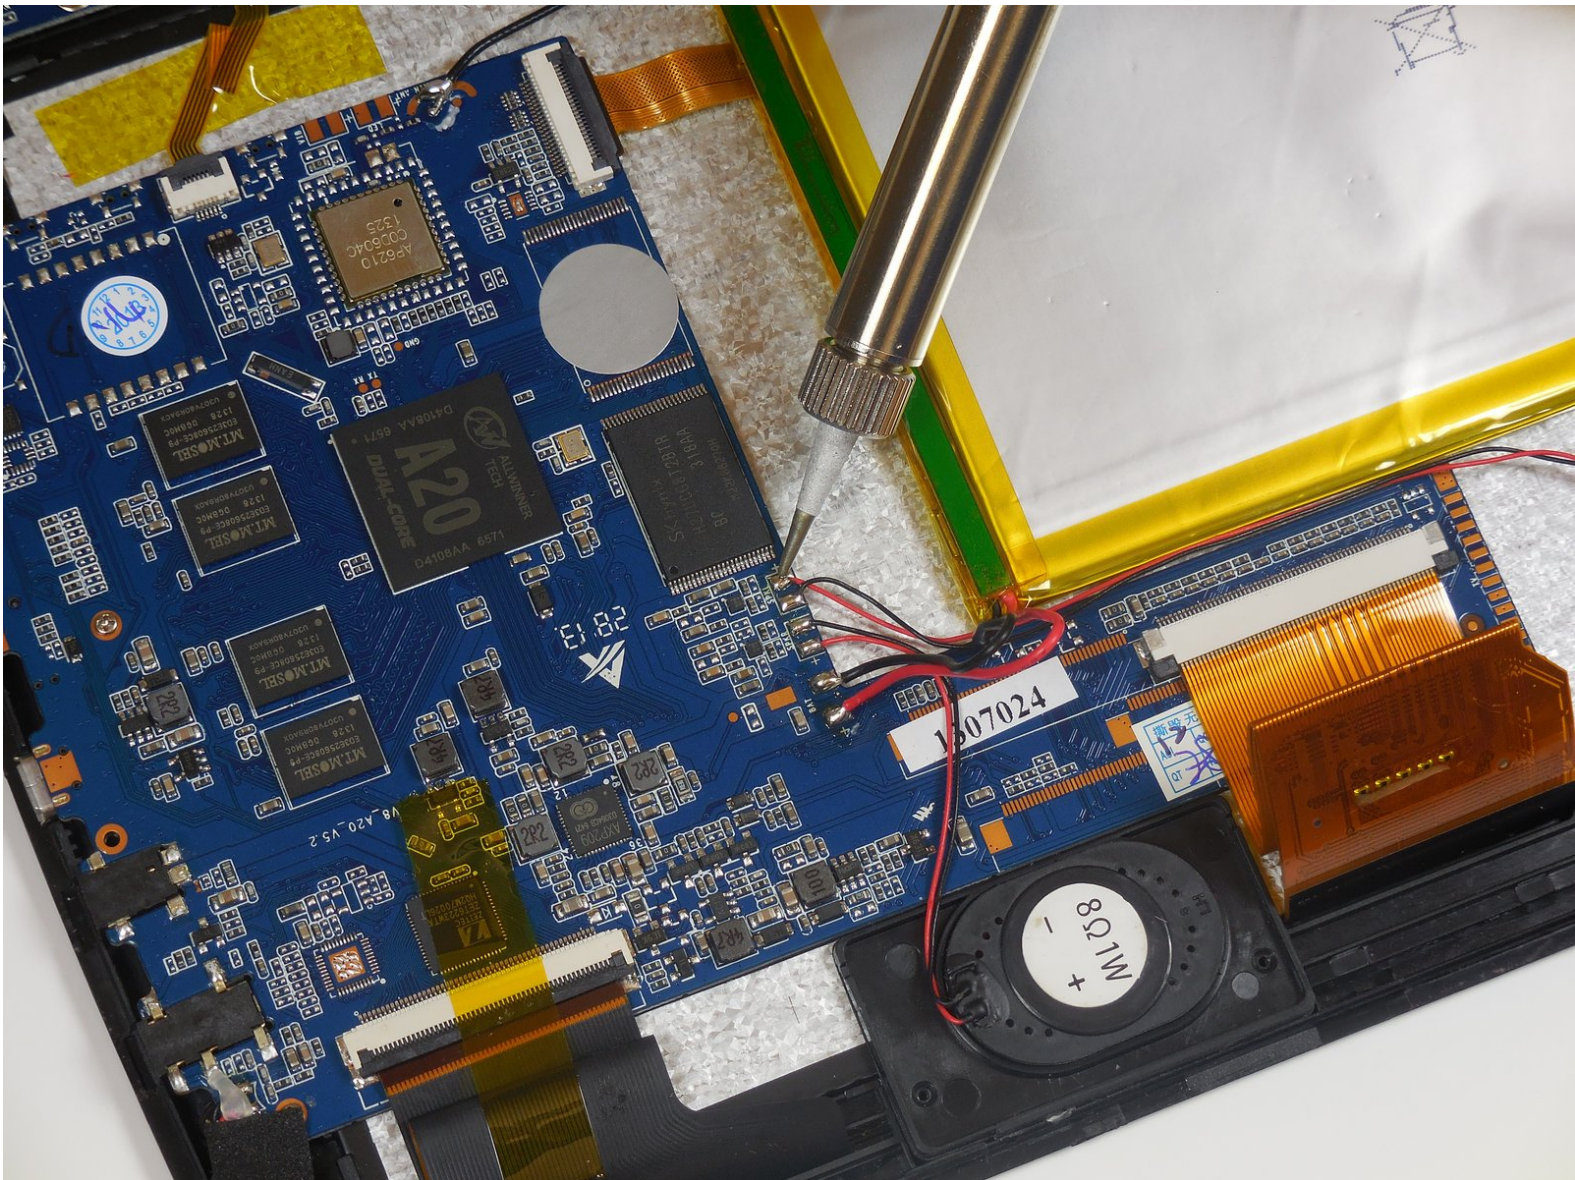




TOOLS:

- [Soldering Iron](#) (1)
-

Step 1 — Desoldering the Speakers

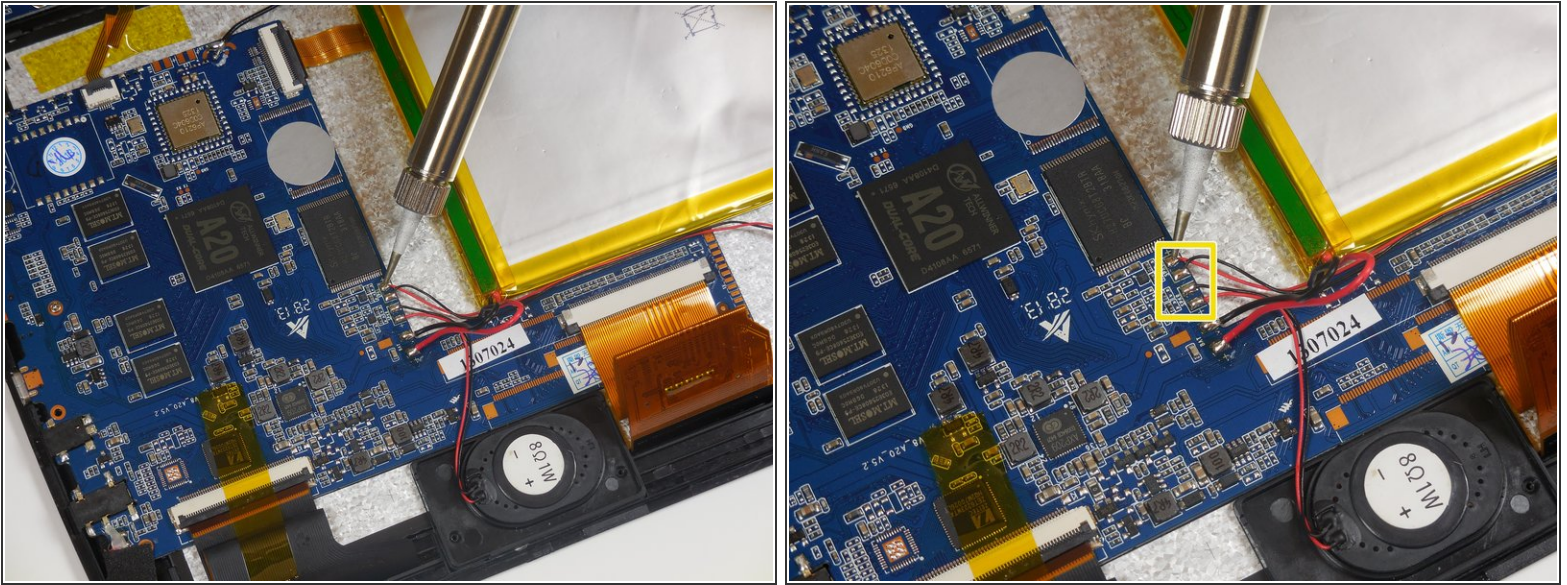

- Carefully desolder the 4 connections of the speakers.

⚠ Do not touch the soldering iron to the motherboard or LCD screen.

To reassemble your device, follow these instructions in reverse order.