 




Polaroid S10 Volume and Power Button Replacement

Prerequisite only.

Written By: Christofer

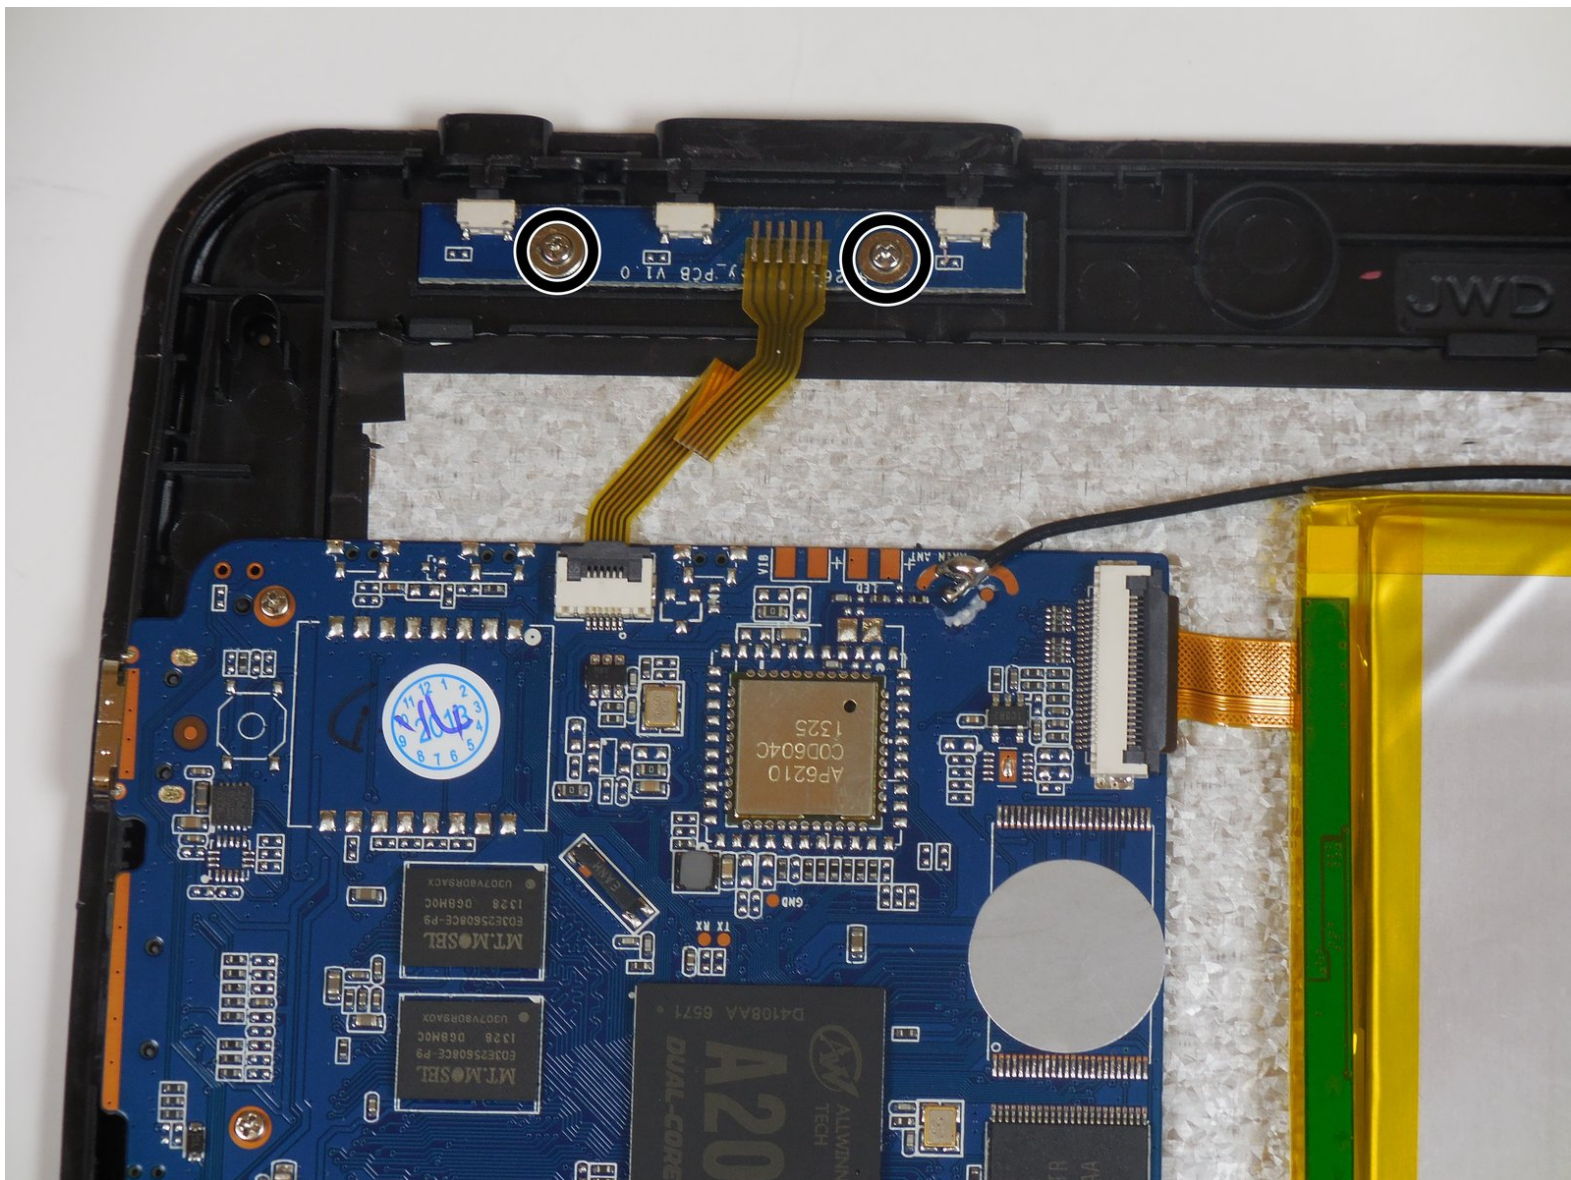

INTRODUCTION


Prerequisite only.



TOOLS:



- [iFixit Opening Picks set of 6](#) (1)
 - [Metal Spudger Set](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Removing the backcover

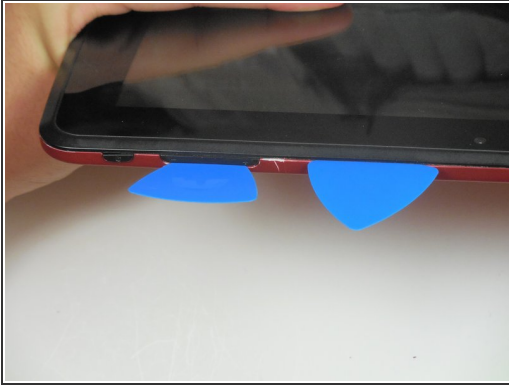

- Place an opening pick between the volume button and the back cover.
- ⓘ More than one pick may be needed, but avoid placing more than two picks in the same space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully remove the back cover using the metal spudger.
- ⓘ It is normal to hear a snapping noise due to the plastic tabs on the back cover.

  Step 2 — Volume and Power Button Board

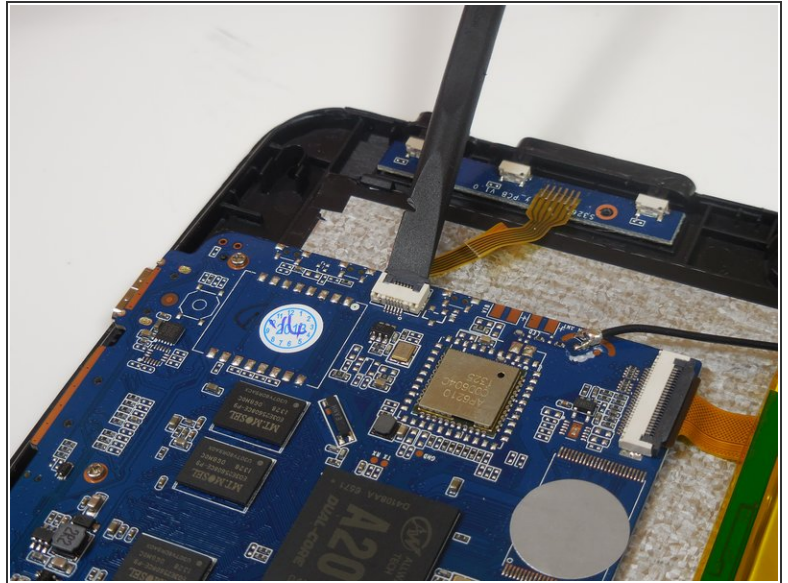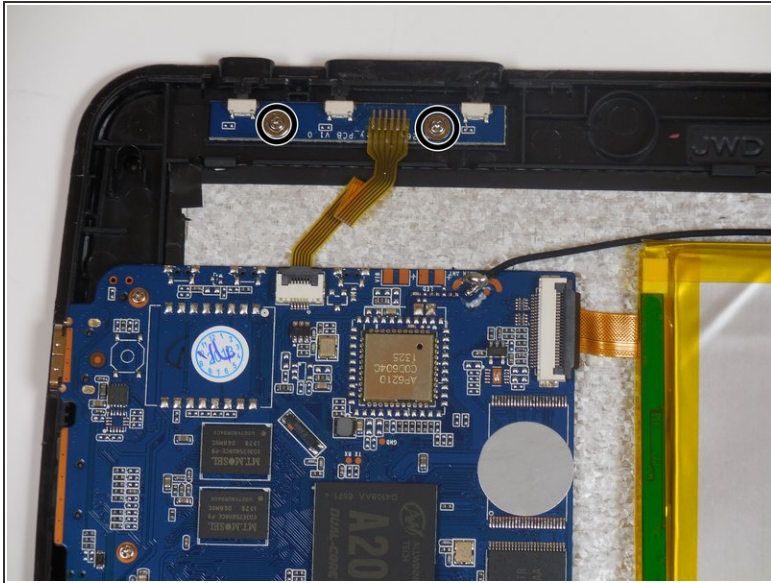

- Use the spudger to remove the tape.
- Remove the 2 J000 4 mm screws using a J000 screwdriver.
- Carefully disconnect the connector port.

To reassemble your device, follow these instructions in reverse order.