



HP Compaq 6710b Wireless Card Replacement

Take out your wireless adaptor!

Written By: Khulan Orgil



INTRODUCTION


Make sure your computer is off and battery is out before attempting to replace your wireless adaptor.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

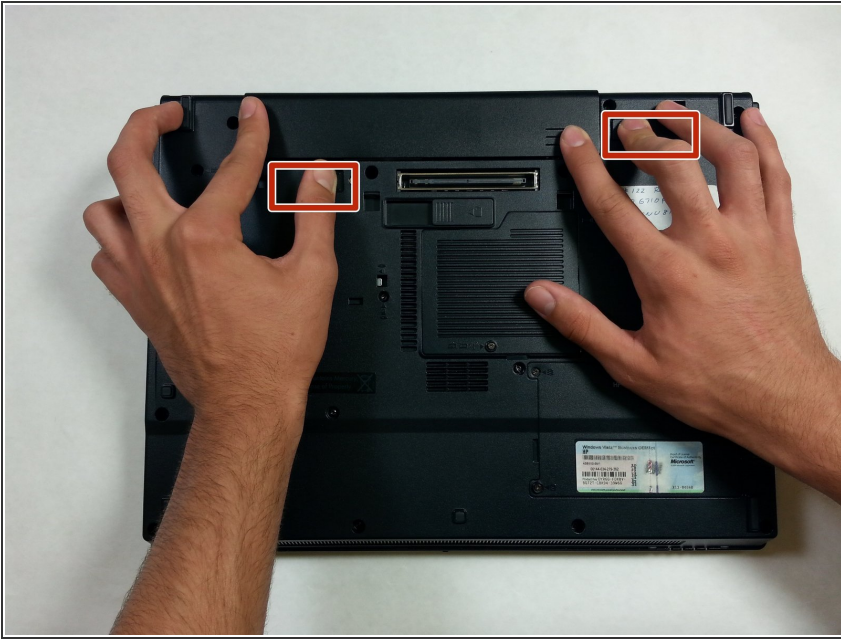

 Turn off your computer! Taking out the battery while it's still on is dangerous!

- Flip the laptop over to the back.
- Using two hands, push on the tabs while gently taking out the battery.

Step 2 — Wireless Card



Make sure the computer is off.

- Using a Phillips #1, unscrew the 5mm screw on the bottom of the laptop
- Remove the back cover plate.
- ⓘ The cover has popping tabs so it might require a small amount of force to remove.

Step 3



- Using a blue plastic prying tool, gently pry off the 2 connectors.
- ☑ The black cable goes on the connection closer to where the cables originate, while the white cable goes on the farther connection.

Step 4



- Using the Phillips #1 screwdriver, unscrew the 2 3mm screws.
- ❗ Adaptor is spring-loaded.
- You can now take out the adaptor.

To reassemble your device, follow these instructions in reverse order.