


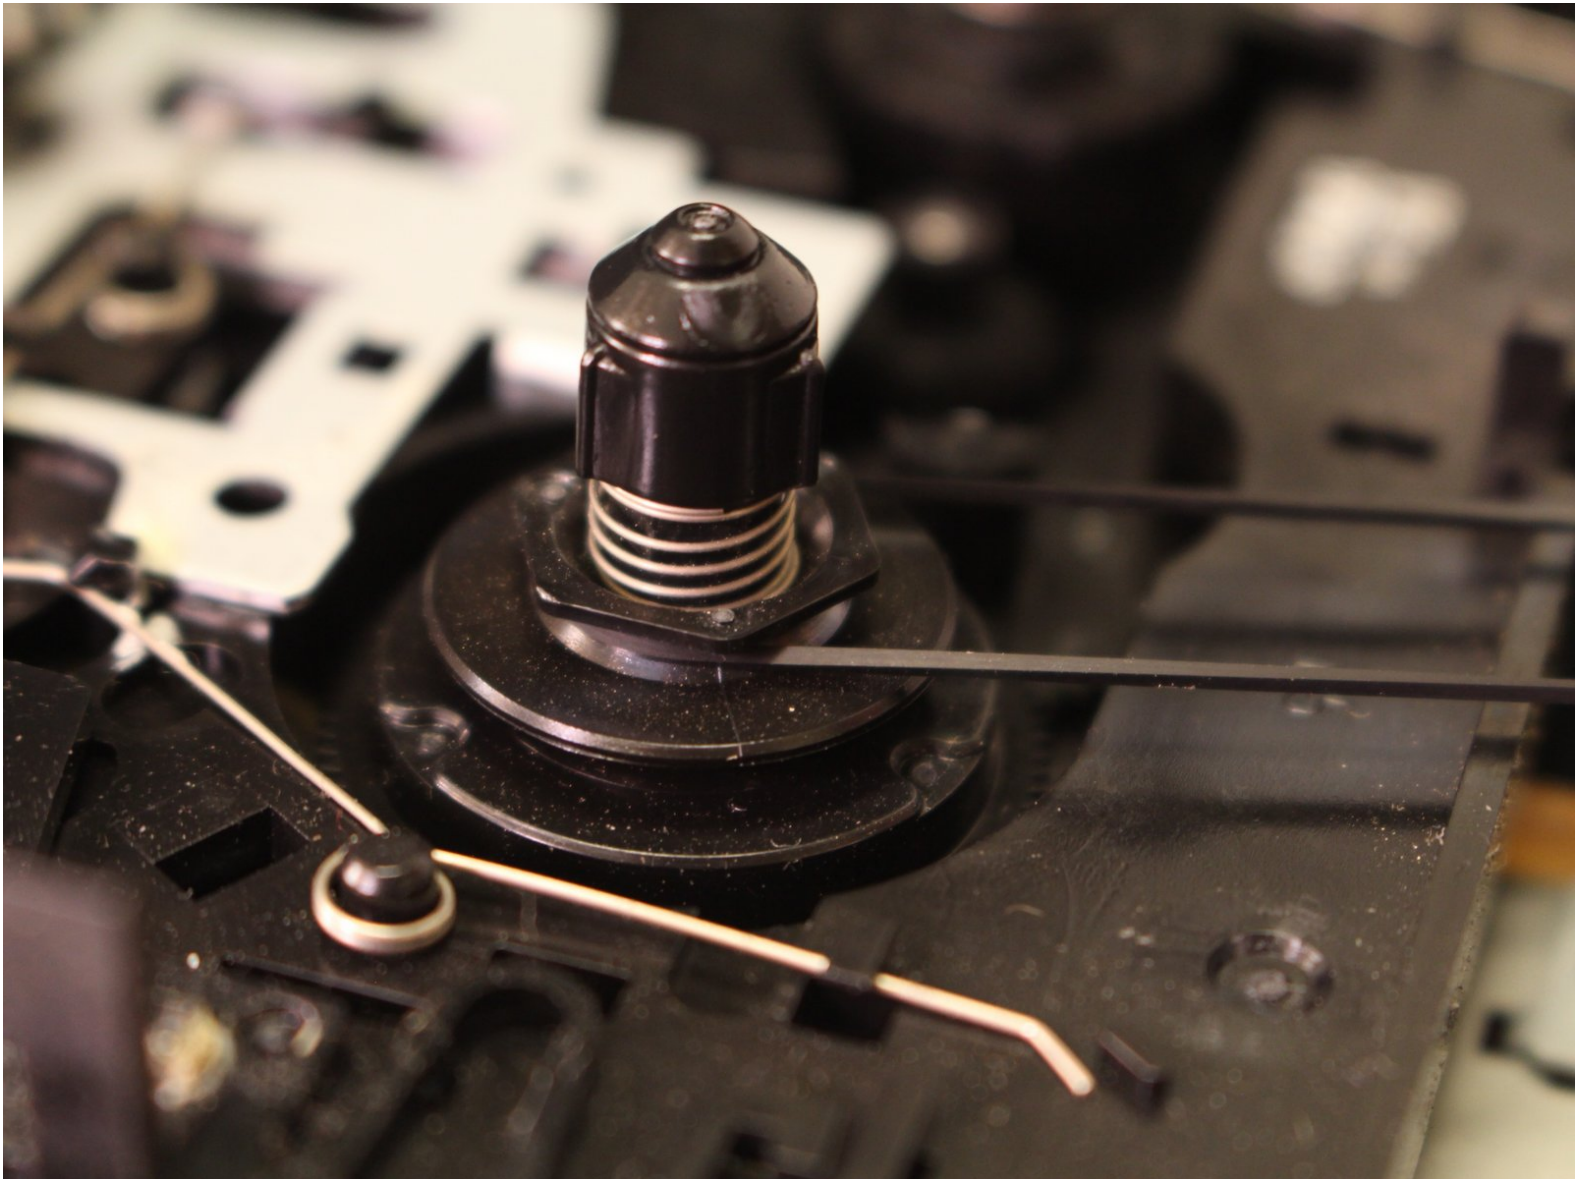

# Panasonic RQ-2102 Band on Three Digit Counter Replacement

This guide will show one how to replace the band on the three digit counter on this device

Written By: Dmitriy Borisjuk



---

## INTRODUCTION

In this guide, you will learn how to replace the band that runs the 3-digit cassette counter on this device. If you find that the counter is not running while cassettes are being played, it is quite possible that the small rubber band has become worn out from frequent use. This guide will show you what you need to do to get your device counting again.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Band on Three Digit Counter



- Remove the three screws from the back of the device body.
- Remove both of the screws from the battery compartment.
- Remove the back of the device.
- Make sure not to pull apart the cords that hold the device together.


## Step 2

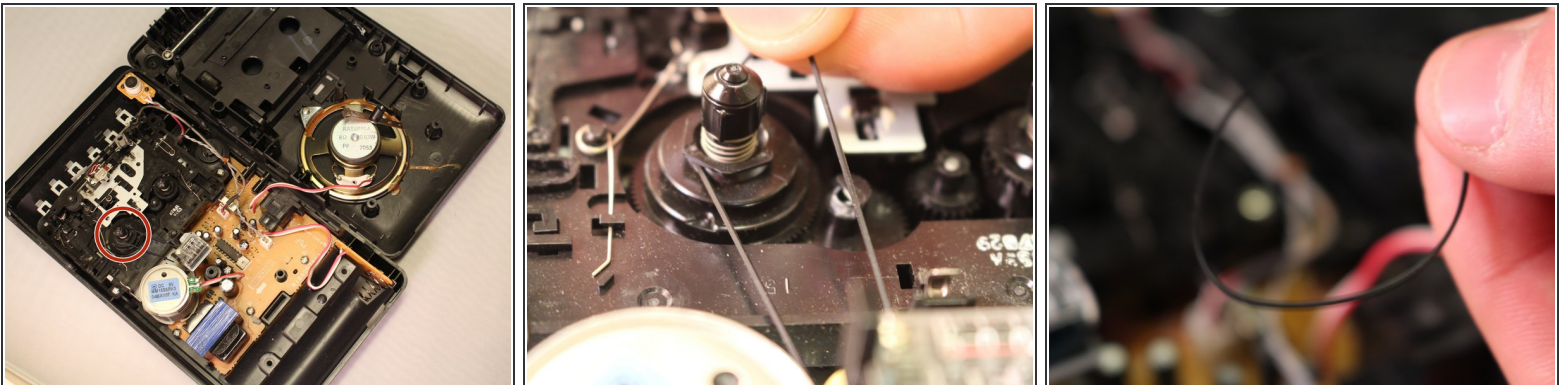

- Carefully remove the band from the gear spindle.
- Dispose of the old, broken band.



## Step 3

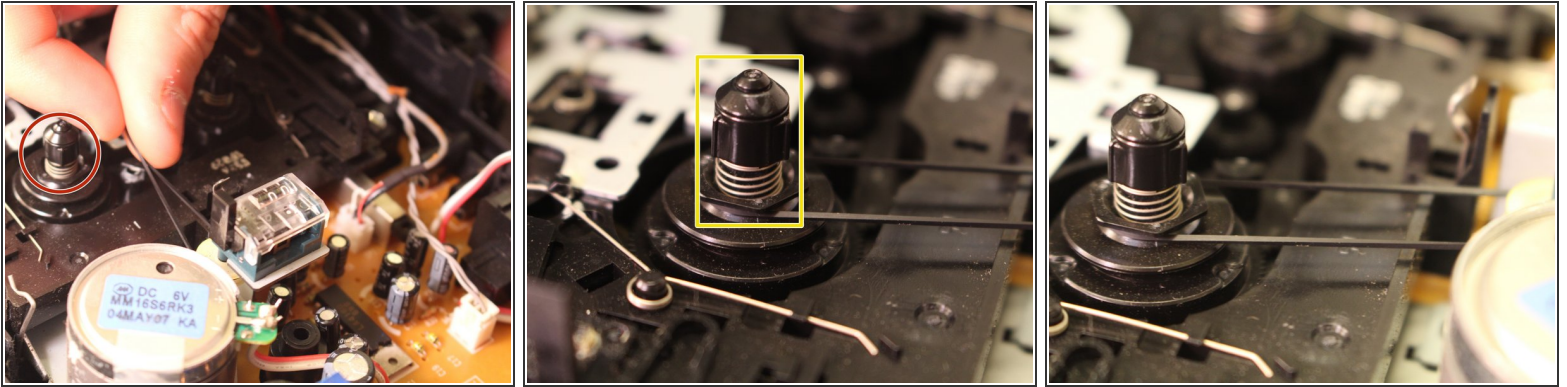

- Insert the new band into the gear spindle.
- Twist the black spindle to make sure the counter works.
- ⓘ If the counter does not work, ensure the band is not broken due to installation.

To reassemble your device, follow these instructions in reverse order.