




Canon Powershot SX30 IS LCD Panel Rear Cover Replacement

A guide for the replacement of the Back Panel that houses the LCD.

Written By: Ellis DeVoe

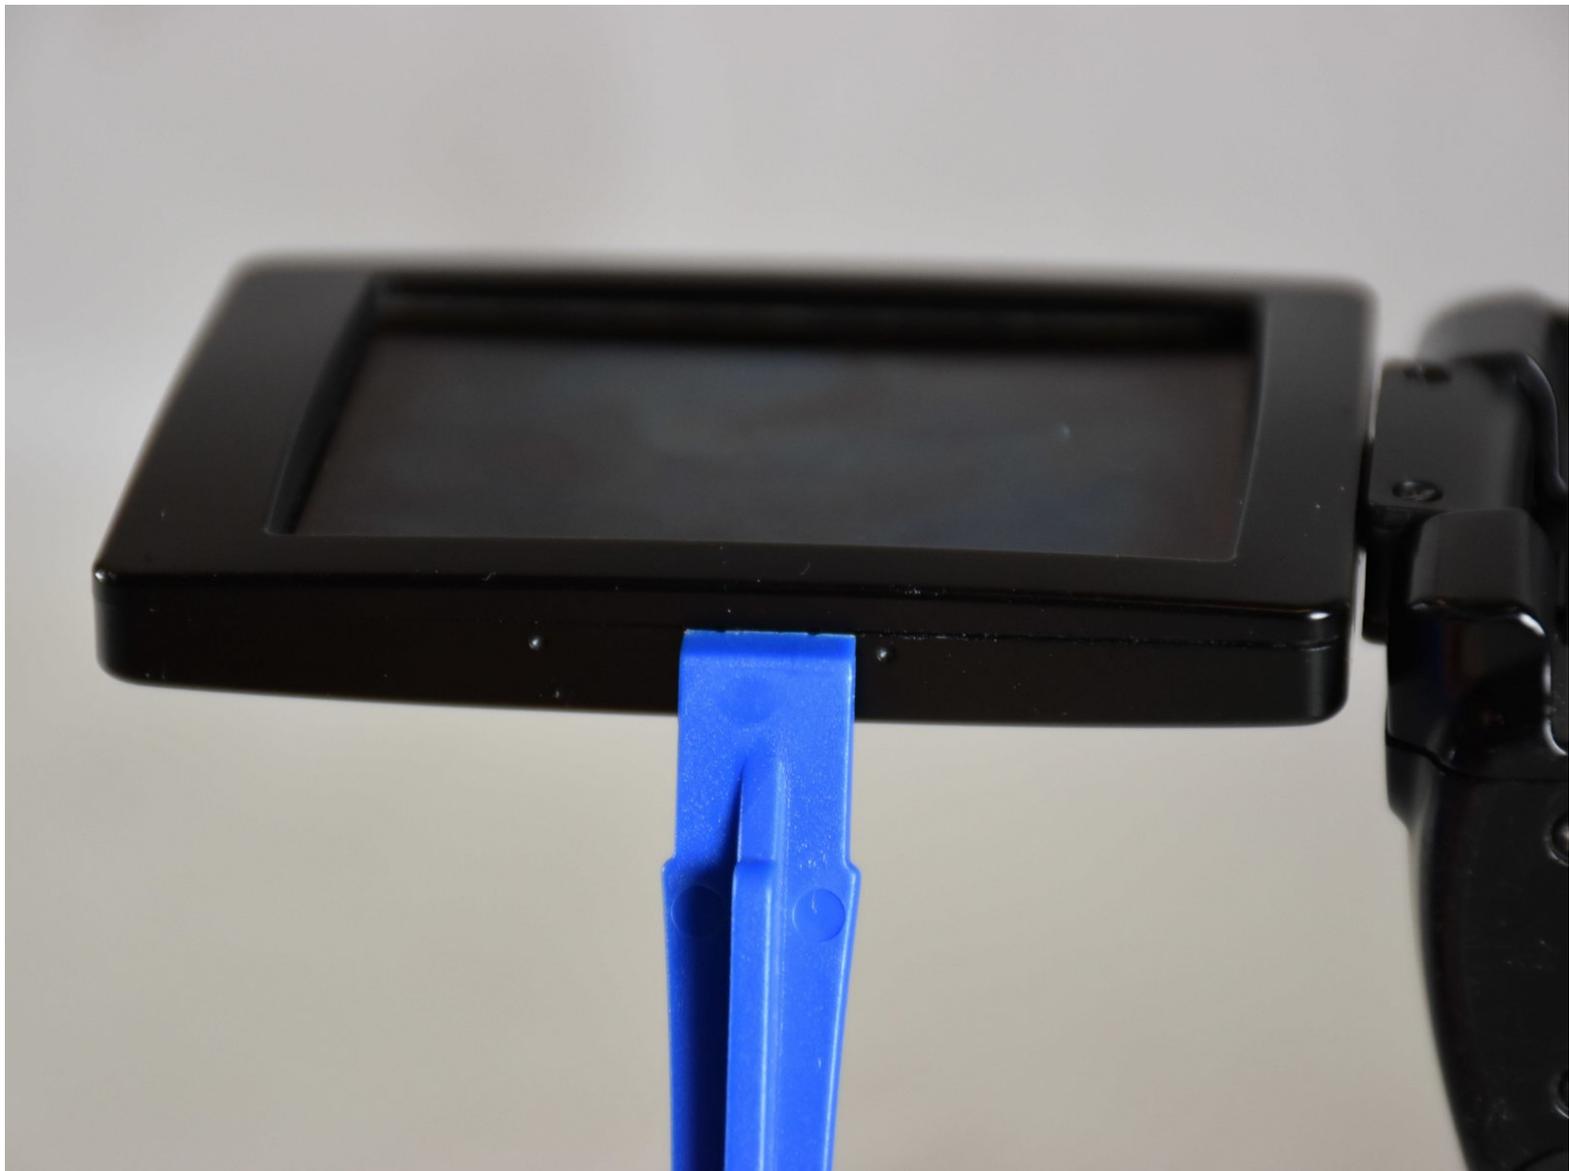

 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Panel Rear Cover



- Turn the camera so the back of it is facing you.
- Pull the LCD screen towards you in order to open it,

Step 2



- Unscrew the two 3 mm screws shown on the left side of the LCD screen panel using a Phillips screwdriver.

Step 3




- Unscrew the two 3 mm screws shown on the right side of the LCD screen panel.

Step 4



- Using the plastic opening tool, remove the rear case of the front LCD cover.

Step 5

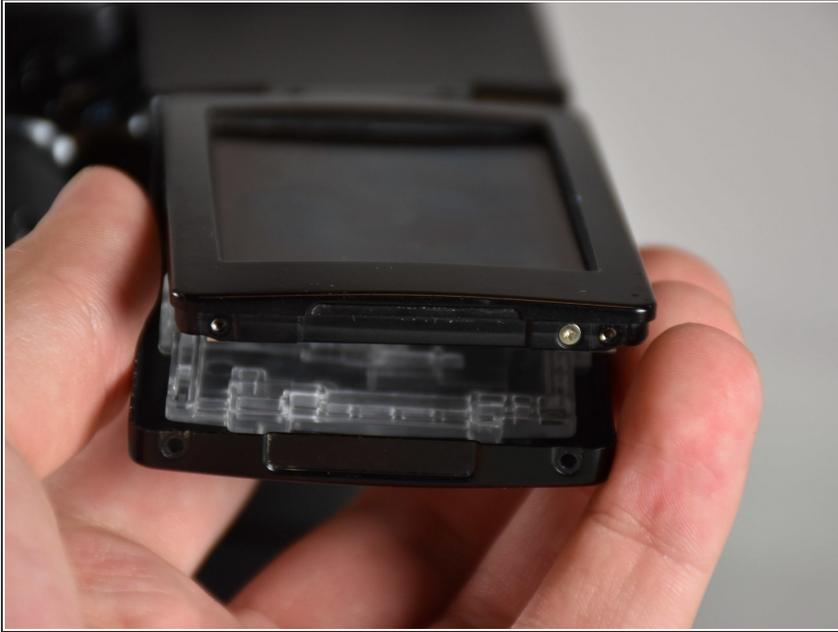

- Pull off the back panel of the LCD screen and the plastic wire protector. Then replace the back panel.

To reassemble your device, follow these instructions in reverse order.