



Canon Powershot SX500 IS Back Cover Replacement

The back cover replacement will fix any cracks or scratches on the cover and is a prerequisite for many of the other replacement guides.

Written By: Jody Wilkerson



INTRODUCTION

User will need PH00 screwdriver and plastic pry tools for this replacement guide.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Rotate the camera to expose the underside of the camera.

Step 2




- Slide the rounded rectangle tab to the left to release the battery cover.

Step 3



- Push the small orange tab forward to release the battery (Battery is ready for removal).

Step 4 — Back Cover

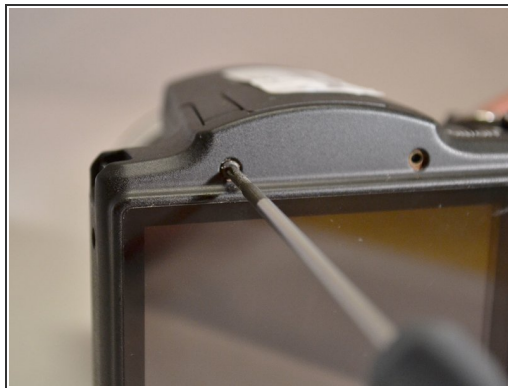

- Using the Phillips 00 screwdriver, remove the two 4mm top screws above the LCD screen.

Step 5



- Using the Phillips 00 screwdriver, remove the two 4mm side screws to the left of the LCD screen.

Step 6



- Using the Phillips 00 screwdriver, remove the two 4mm side screws to the left of the LCD screen.

Step 7



- Using the Phillips 00 screwdriver, remove the three 4mm screws from the underside of the camera.

Step 8



- Using the plastic pry tool, remove the back cover from camera.

To reassemble your device, follow these instructions in reverse order.