




Garmin StreetPilot c330 Screen Replacement

Written By: Adrian Leon

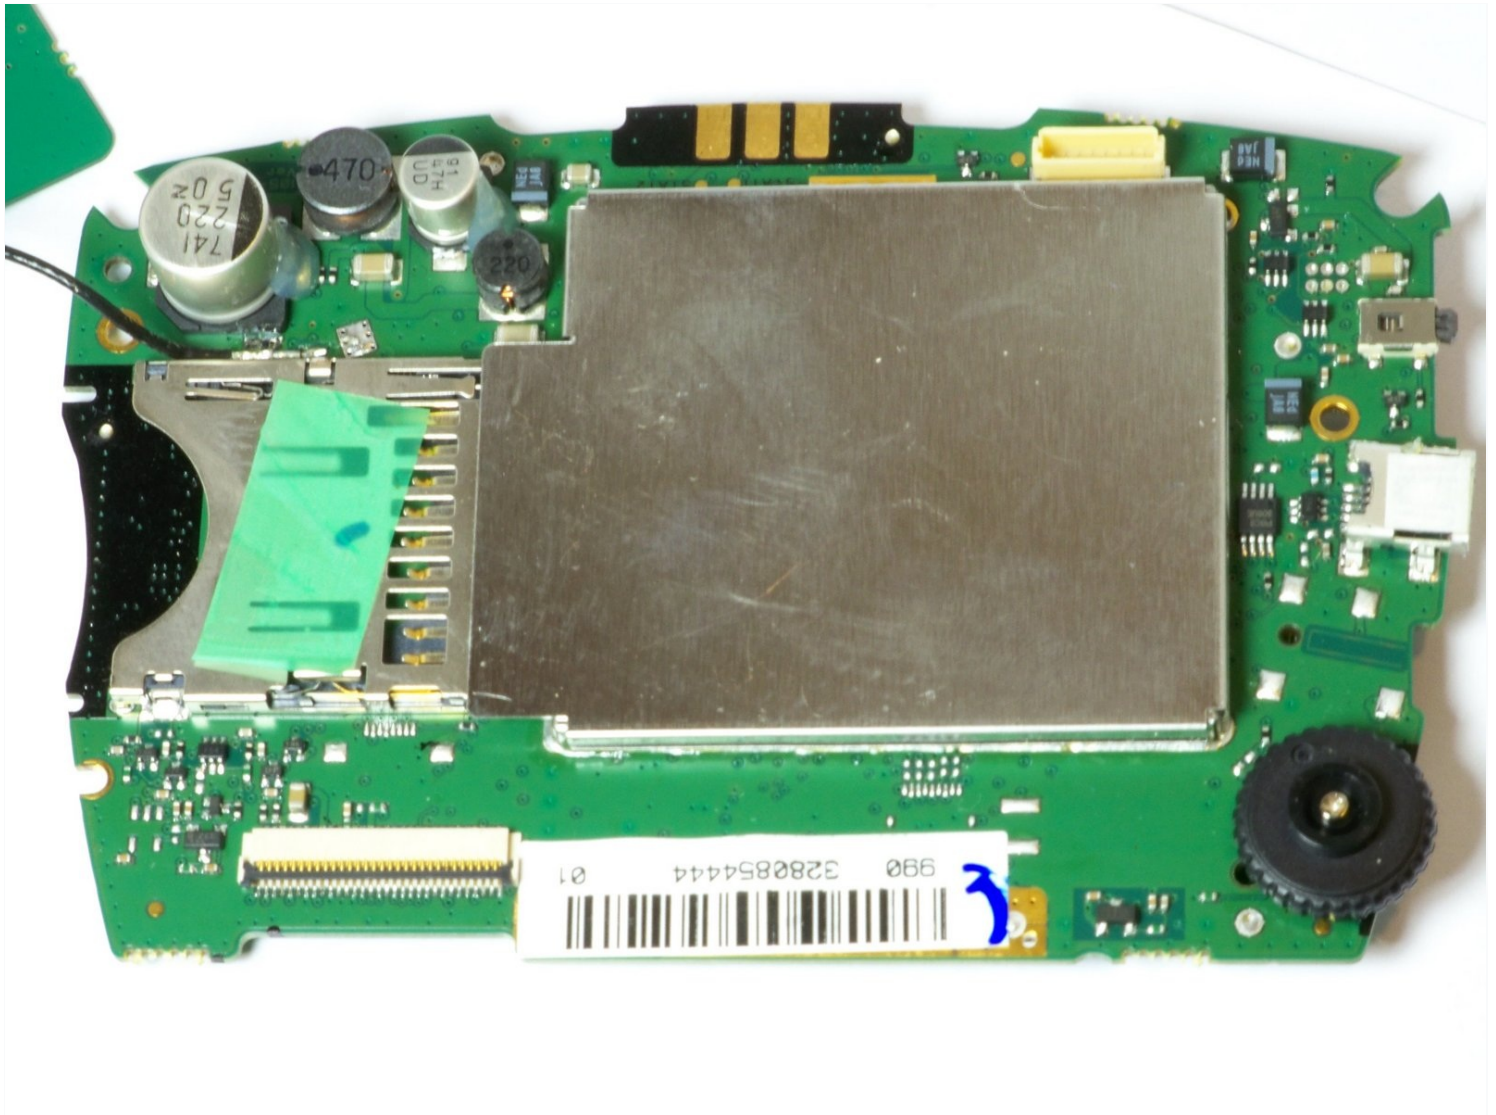

TOOLS:

Tweezers (1)

Phillips #00 Screwdriver (1)

Spudger (1)

Step 1 — Outer Casing



- At the top of the outer frame, insert the plastic spudger into the groove in the center.
- Lever the frame gently until it pops out of the case.

Step 2



- Use a Phillips #00 screwdriver to remove the four screws around the screen.


Step 3



- Gently pull from both ends of the casing to separate the front and back panels.

⚠ Do not force the pieces apart wider than the length of the connecting wires, or you will damage the wiring.

Step 4

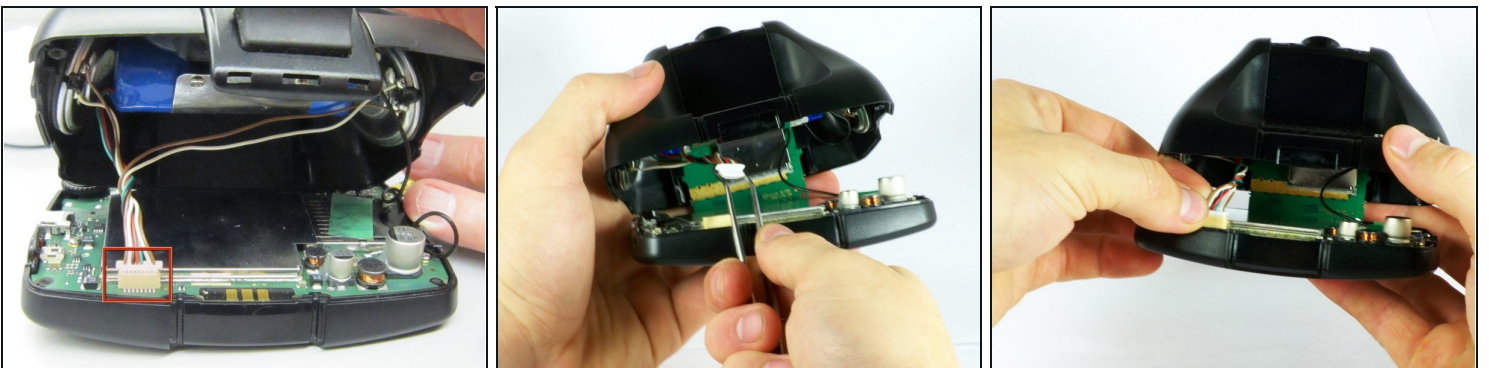

- Gently unplug the white cable connector using either your fingers or [tweezers](#).




Step 5



- Carefully expose both halves of the device.


⚠ Be sure not to pull the two halves apart further than the black wire can reach.

Step 6 — Screen

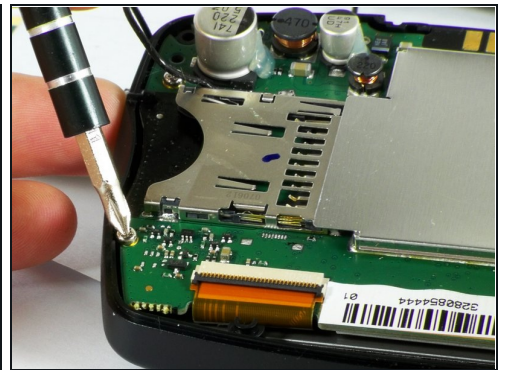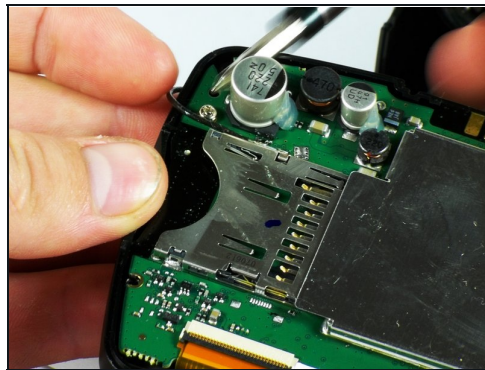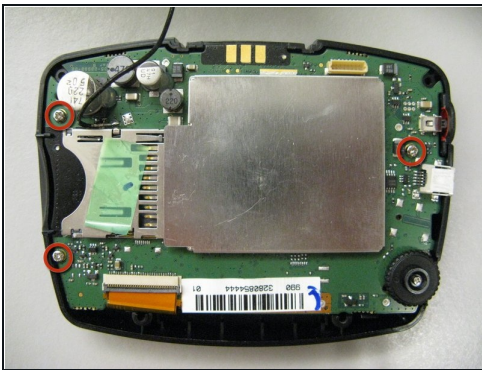




- Remove the three screws holding the motherboard in place.

Step 7

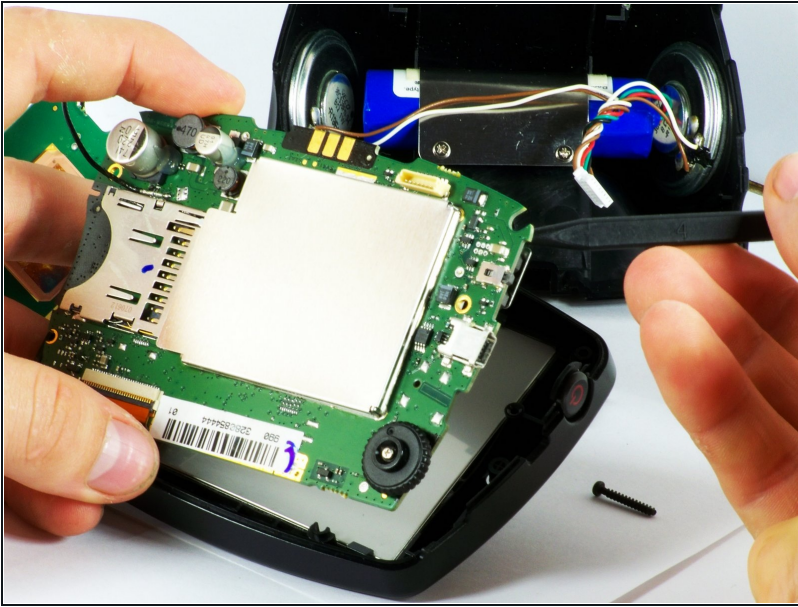

- Use the spudger to lift up the motherboard.

Step 8

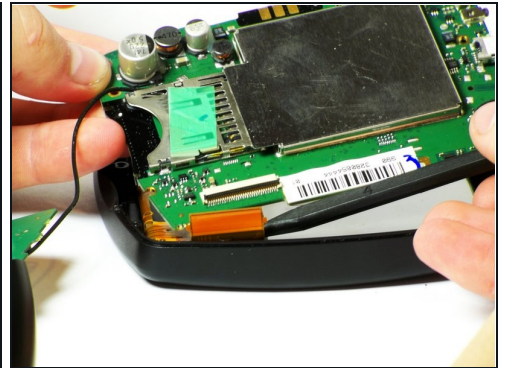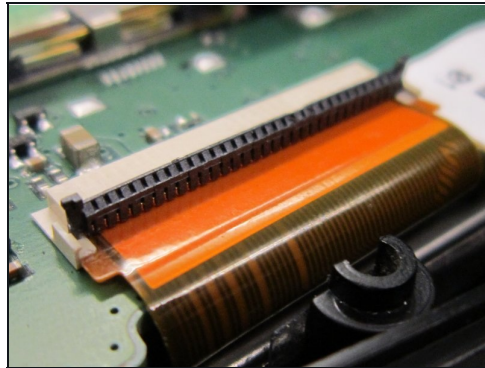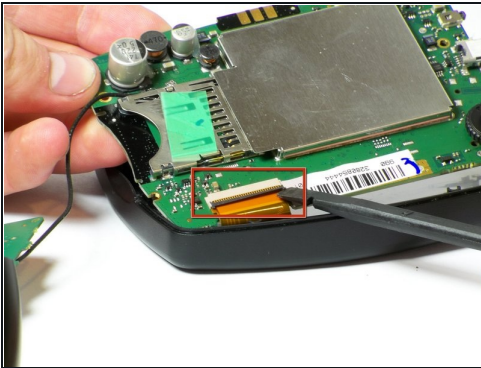


- To remove the ribbon cable, lift the black latch using the spudger tool.
- Separate the connection using either your fingers, [tweezers](#), or the spudger.

Step 9



- Slide the spudger under the two flexible tabs located on the right and left sides of the bottom of the screen.
- Rotate the spudger outward until the tabs are no longer holding the screen.
- When reassembling, slide the bottom of the screen under the two permanent tabs.
- Push the screen out from the front.

Step 10

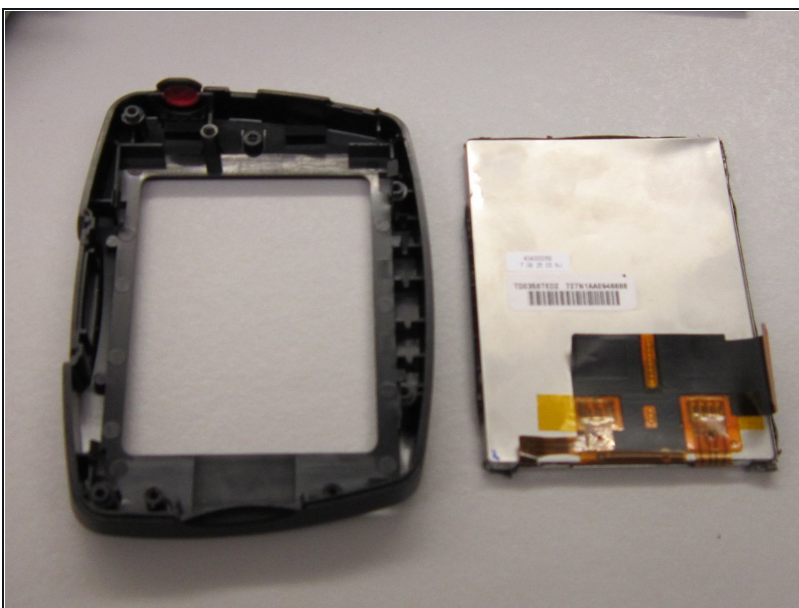

- Separate the screen from the front cover.

To reassemble your device, follow these instructions in reverse order.