



AEG Electrolux FM72 Disassembly for cleaning

Follow this guide in order to clean a AEG Electrolux FM72.

Written By: Kevin D



INTRODUCTION

The normal method of cleaning was not effective. In this case the Dustbuster itself needed to be removed and cleaned.

TOOLS:

- [Phillips extra long screw driver](#) (1)
 - [iSesamo Opening Tool](#) (1)
 - [Air compressor](#) (1)
-

Step 1 — Opening the Device




- Open the lid by pressing the grey button and lifting it away.
- Clean each of the plastic parts with soap and water, and then leave them out to dry.

Step 2 — Opening the Electronic Case




- Follow these steps to open the electronic casing.
- Remove the four screws as shown in picture two.
- ⓘ A long Phillips screwdriver is needed for step two.
- Remove the fifth screw at the bottom as shown in picture three.

Step 3

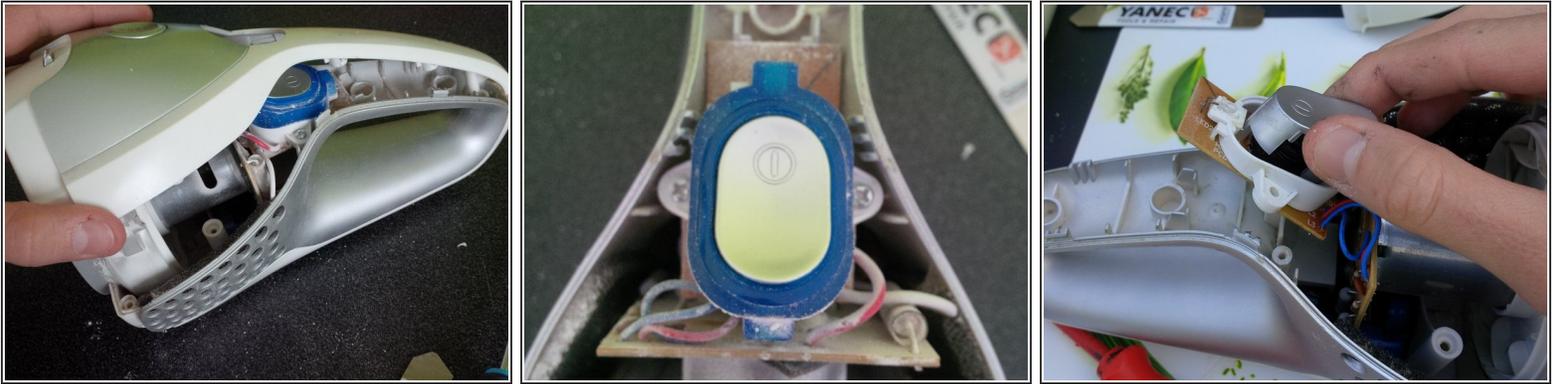

- Gently pry the device open, using an iSesamo opener.
- Now the I/O button can be removed.
- Completely replacing this entire part requires desoldering wire connections.

Step 4 — cleaning electronics

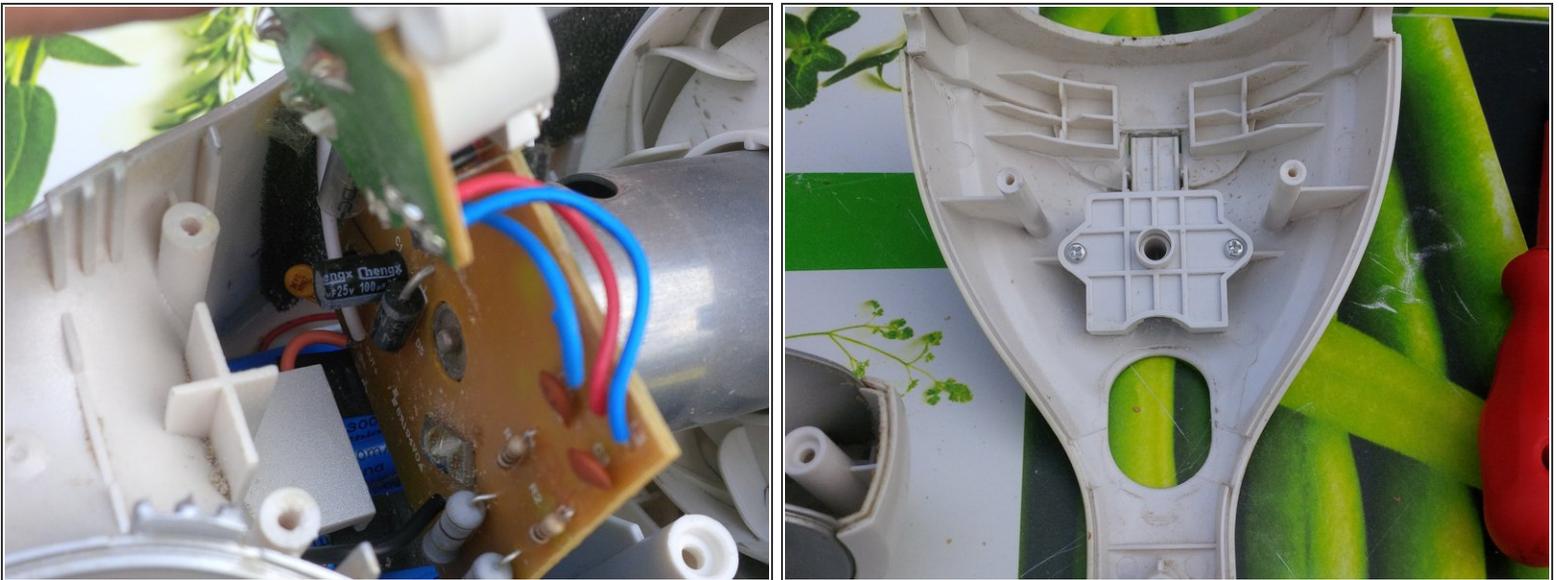

- Now the electronic components can be cleaned using an air compressor.
- In picture one, you can see the PCBs. Under the PCB, you'll see blue batteries. These are 2 x 3 AA rechargeable batteries .
- If the dust bag needs to be replaced, remove its securing screws.

To reassemble your device, follow these instructions in reverse order.