

Nokia Lumia 520 Touch screen Glass, LCD Display, Loudspeaker, Earpiece Replacement

Nokia Lumia 520 Touch screen glass, LCD Display Replacement

Written By: ZFix



This document was generated on 2020-11-16 06:35:28 AM (MST).

INTRODUCTION

How to disassemble the phone and change broken digitizer glass, LCD display, earpiece, loudspeaker, etc.

[video: https://www.youtube.com/watch?v=Iu4o0DF6q2E]



F TOOLS:

- Spudger (1)
- iFixit Opening Picks set of 6 (1)
- T4 Torx Screwdriver (1)
- iFixit Opening Tools (1)
- Heat Gun (1)




PARTS:

- Nokia Lumia 520 Digitizer (1)
- Tesa 61395 Tape (1)

Step 1 — Touch screen Glass, LCD Display, Loudspeaker, Earpiece



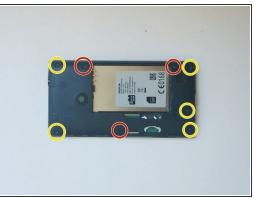



- Switch off the phone and remove any SIM and memory card.
- (i) There are two tips T4 screws.





- Use a plastic tool to separate the back case.
- Loudspeaker / Ringer








- Disconnect the Touchscreen and the LCD display flex cables.
- The logic board is held by the locking clips. Use plastic tools to remove it.



- Light proximity sensor
- Earpiece
- Audio jack connector

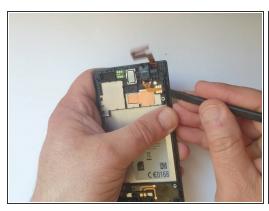

Nokia Lumia 520 Touch screen Glass, LC...





Again use a plastic tool to separate the middle frame and the digitizer frame.







- This step is for those who wants to change the LCD display.
- Use a sharp object to pick up a little the display.
- Then with a spudger or a similar tool separate the display from the frame.








- Put some transparent tape on the broken glass.
- Use hot air to warm and soften the old adhesive tape.
- Start the separating from the middle, where the contact area is small.





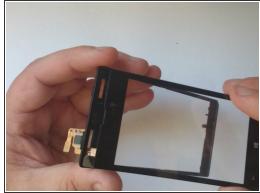

- Clean the frame
- Clean the frame from the adhesive tape remnants and install a new one if your replacement part has come without adhesive tape.
- Install the new touch screen and start with reassembling.



- That's all.
- .
- .
- .
- .

- .
- Did you do it successfully?

To reassemble your device, follow these instructions in reverse order.