



# Canon Powershot SD880 Front Cover Replacement

Written By: Robert Manno



---

 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Remove the two 2.4 mm screws on the side of the camera that are next to the LCD screen using a Phillips #00 screwdriver.
- Remove the two 4.1 mm screws on the other side using a Phillips #00 screwdriver.
  - ⓘ One screw will be located under the rubber USB flap.
- Remove the single 2.6 mm screw from the bottom of the camera using a Phillips #00 screwdriver.
- Slowly pull the back cover off of the camera.

## Step 2 — Front Cover



- Remove the 2.6 mm screw from the bottom of the camera using a Phillips #00 screwdriver.
- Remove the 4.1 mm screw from the menu button side of the camera using a Phillips #00 screwdriver.
- ⓘ The two screws on the other side of the camera were already removed when the back cover was taken off.

To reassemble your device, follow these instructions in reverse order.