



# Canon Powershot S410 Memory Card Replacement

A simple guide for removing and replacing the...

Written By: Randy Lormand



# INTRODUCTION

A simple guide for removing and replacing the memory card.

## Step 1 — Battery



① Turn the camera with the bottom side facing up.


- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

## Step 2



- Pull the orange lever and the battery will spring out slightly.

## Step 3

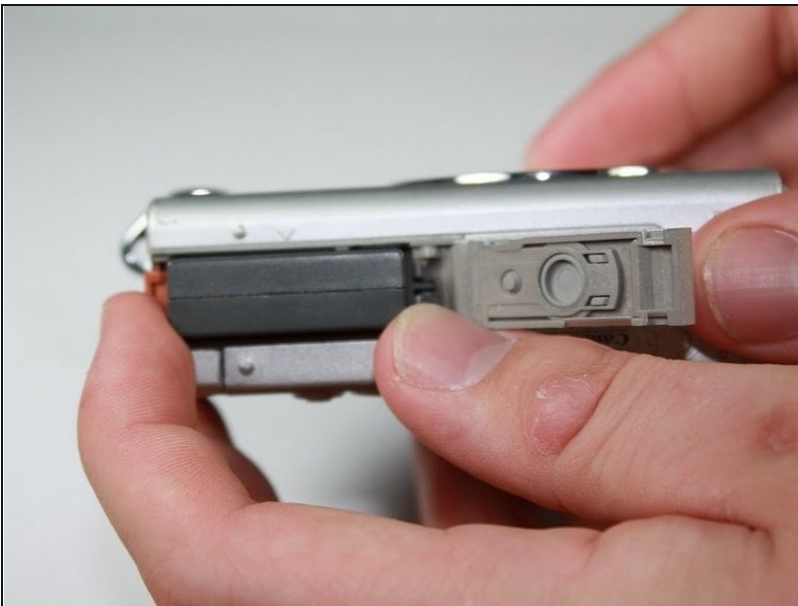

- Grasp the battery and fully pull it out of its slot.
- ☑ When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.



## Step 4 — Memory Card



① Position the camera as if you were going to take a picture.

- Locate the sliding button labeled "CF OPEN."
- Place your finger on the button and slide it in the direction of the arrow.
- The side panel will flip open revealing the compact flash memory card.


## Step 5



① Turn the camera to the right side.

- Locate the gray button at the bottom of the open slot.
- Place your finger on the button and push it down.
- The memory card will pop out slightly.

## Step 6

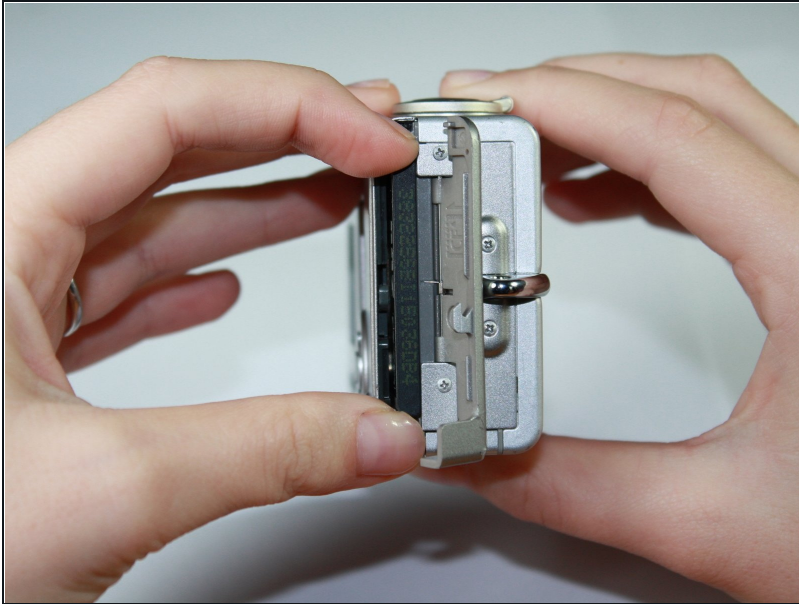

- Grasp edges of card and pull out of slot.
- ① If you insert a new memory card you may be asked to format it after turning on the camera.
- ① Make sure that the arrow on the flash card is pointed towards the direction of the slot
- ⚠ Do not force the memory card into the slot. Any signs of resistance may mean the card is improperly oriented.

---

Once a new memory card has been inserted close the swinging door and you're done.