




Handspring Visor Edge Flip Cover Spring Replacement


Written By: Blaize Steiger

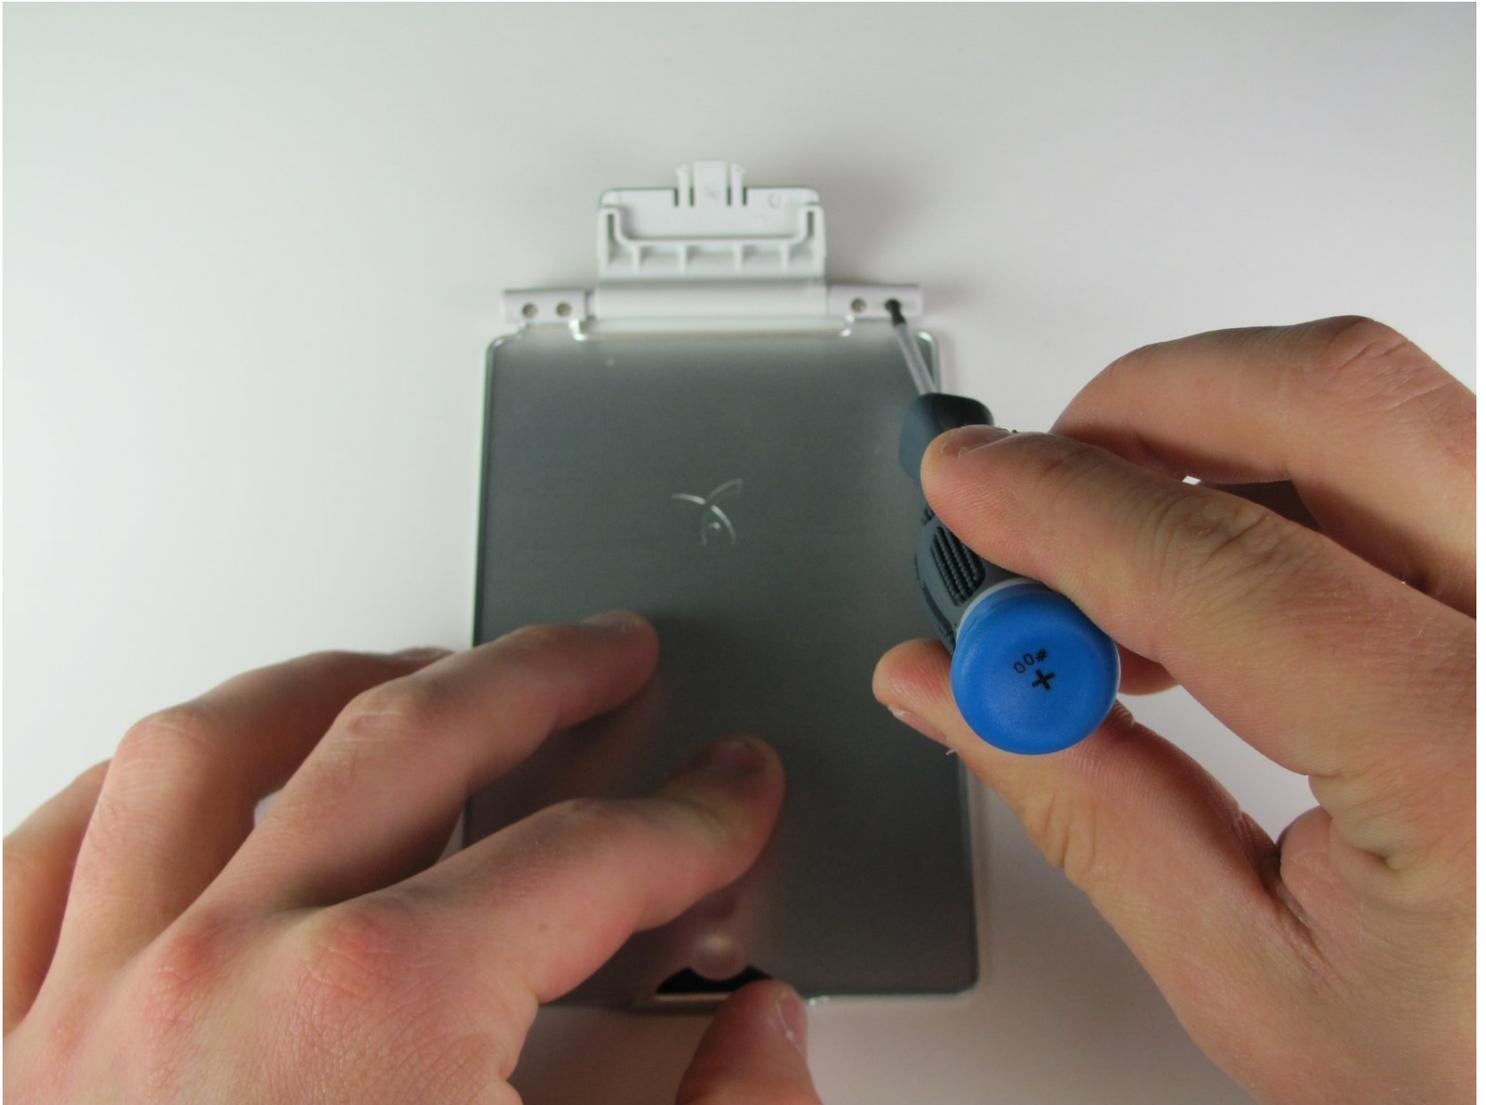

 **TOOLS:**

Phillips #00 Screwdriver (1)


Step 1 — Flip Cover

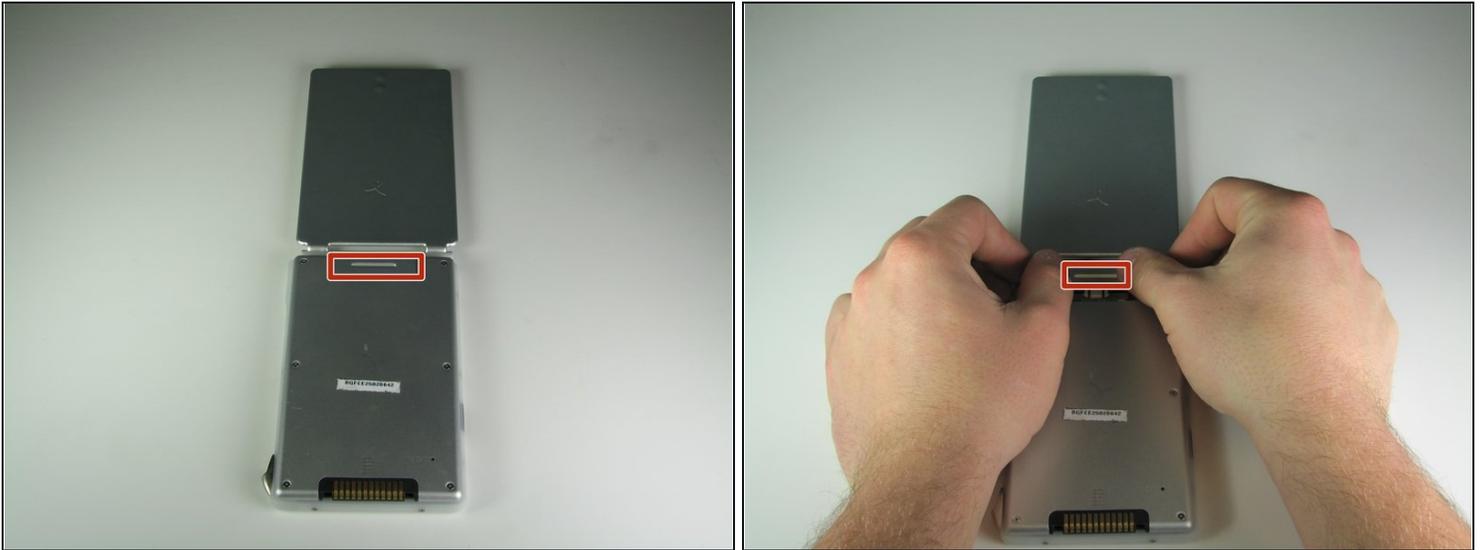

- Open the Visor Edge and place it on a table facing down.
- Gently push the tab that connects the flip cover (top half) to the PDA (bottom half) upward, lift the pieces apart to detach them.


 Do not pull on the flip cover in an attempt to remove it from the PDA.

Step 2 — Flip Cover Spring

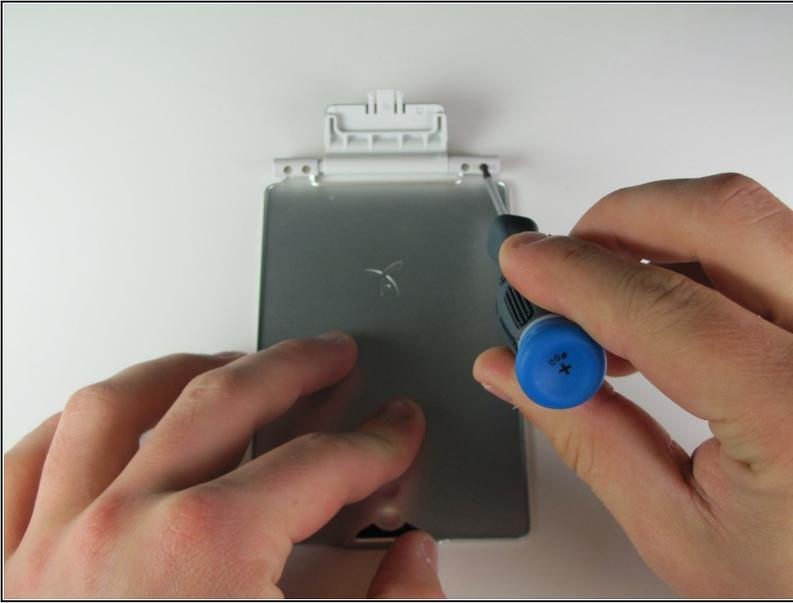

- Once flip cover is removed, turn over and remove the four 3.9 mm screws connecting the hinge.


Step 3

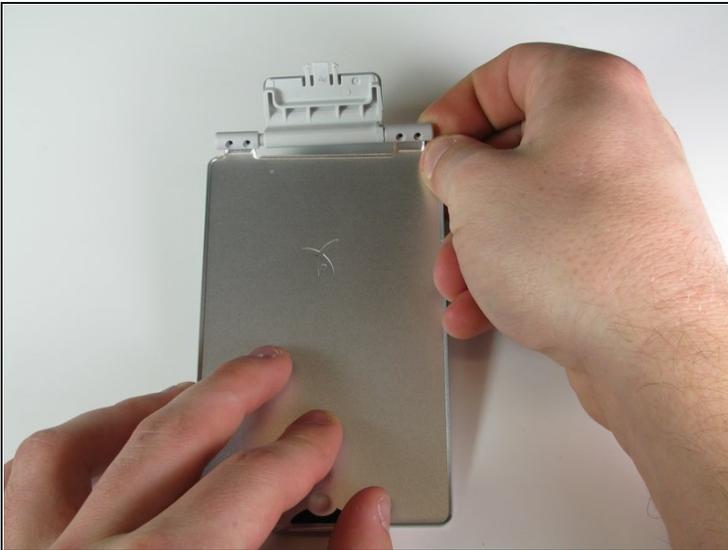

- Gently pull away the plastic hinge from the cover.

⚠ Be careful to pull out evenly and not bend the plastic, as it can crack. The spring may also shoot out if it is not pulled out evenly.

Step 4

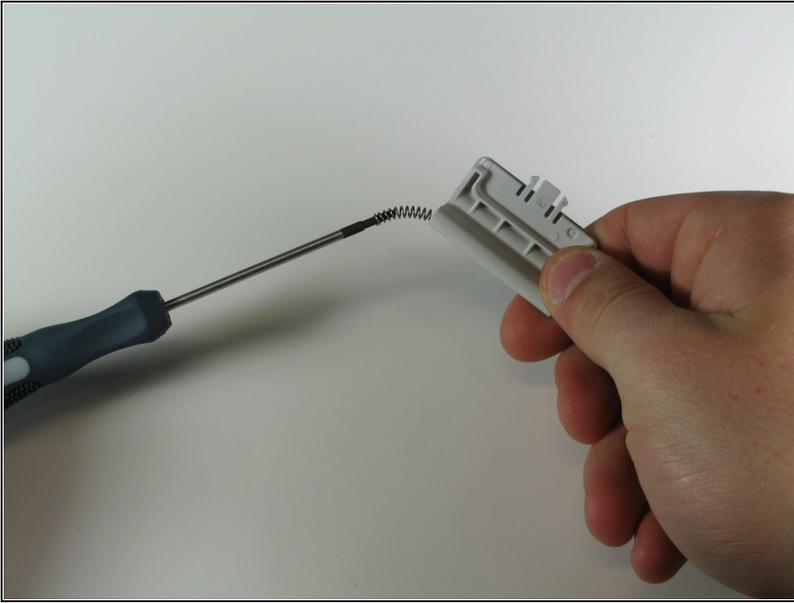

- Turn the hinge piece on its side or use a screwdriver to pull out the spring.
- Reinsert new spring.

To reassemble your device, follow these instructions in reverse order.