


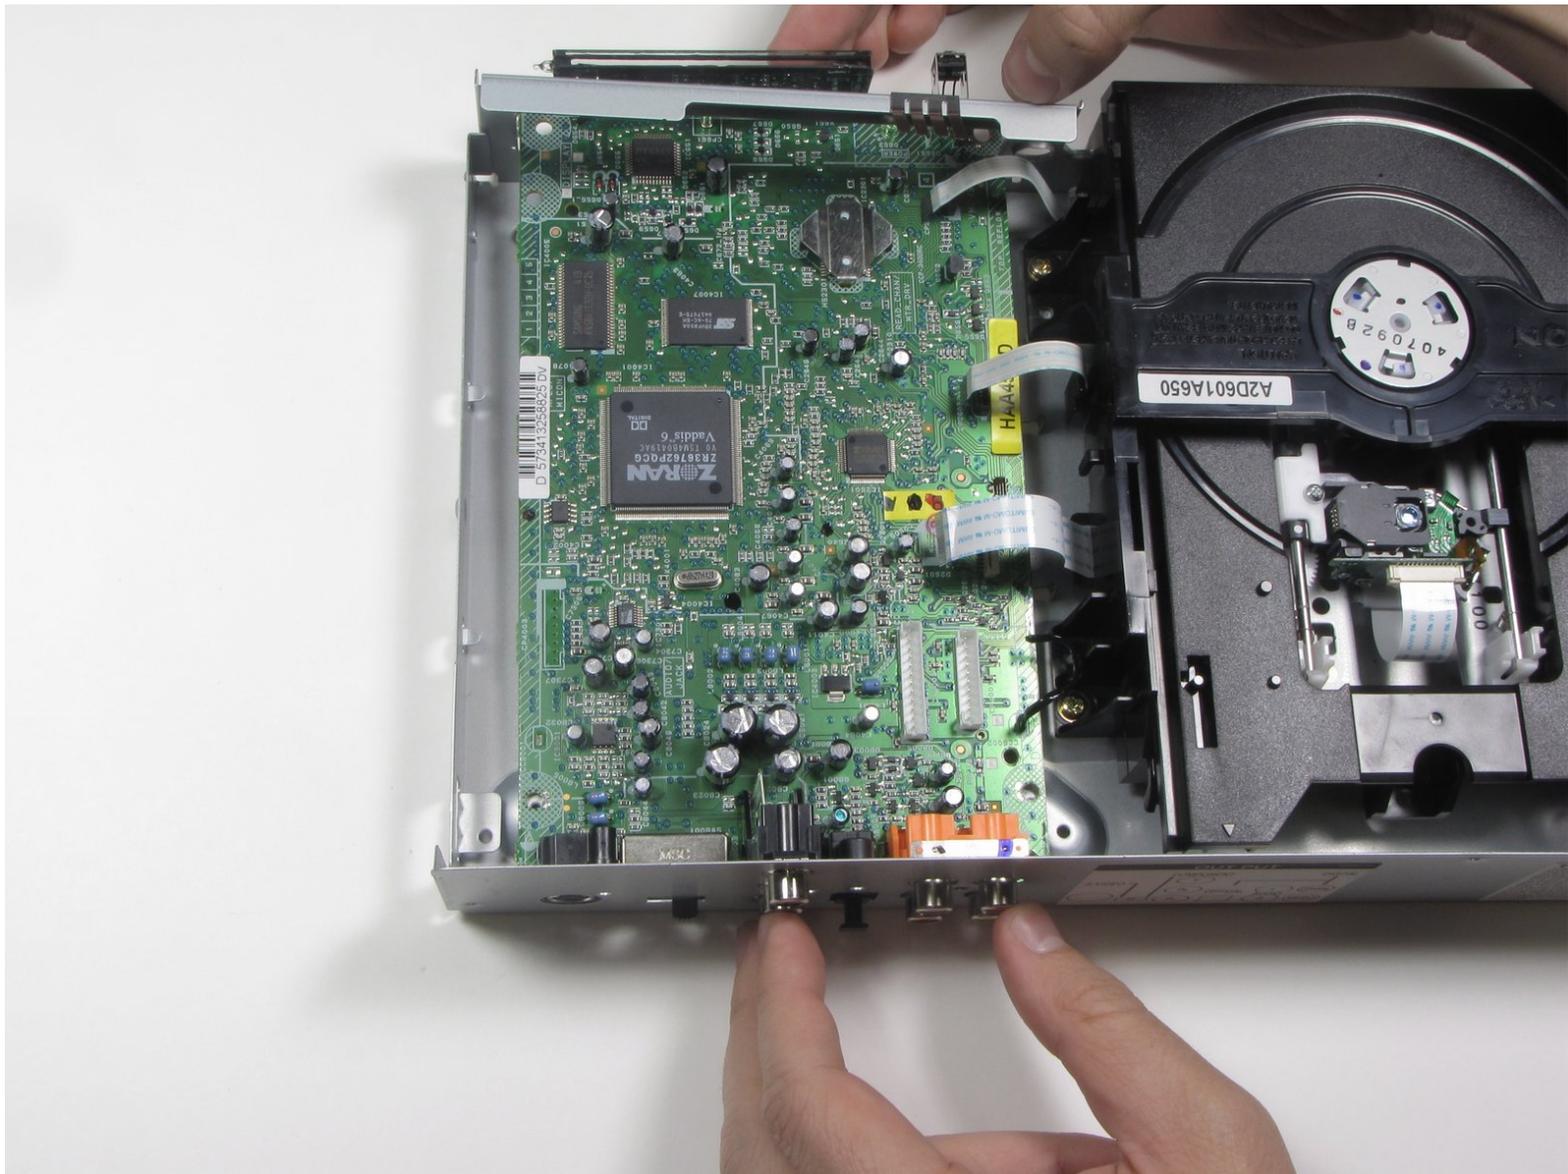

# Toshiba SD-K740 Motherboard Replacement

This guide gives instructions on how to remove...

Written By: Joe Murphy



---

## INTRODUCTION

This guide gives instructions on how to remove the Left-Side Motherboard (Green) of the Toshiba SD-K740 DVD player, which controls the display and disc drive function.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Top Panel



**⚠ Unplug the DVD player before beginning.**

- Remove the three 7.7 mm screws from the back panel using a Phillips #0 screwdriver.

## Step 2




- Turn the DVD player on its side.
- Remove the 7.7 mm screw.
- Flip the DVD player onto its other side.
- Remove the 7.7 mm screw.

### Step 3



- Flip the DVD player over onto its front face.
- Remove the back panel by lifting up and pulling it towards yourself.

### Step 4 — Front Panel

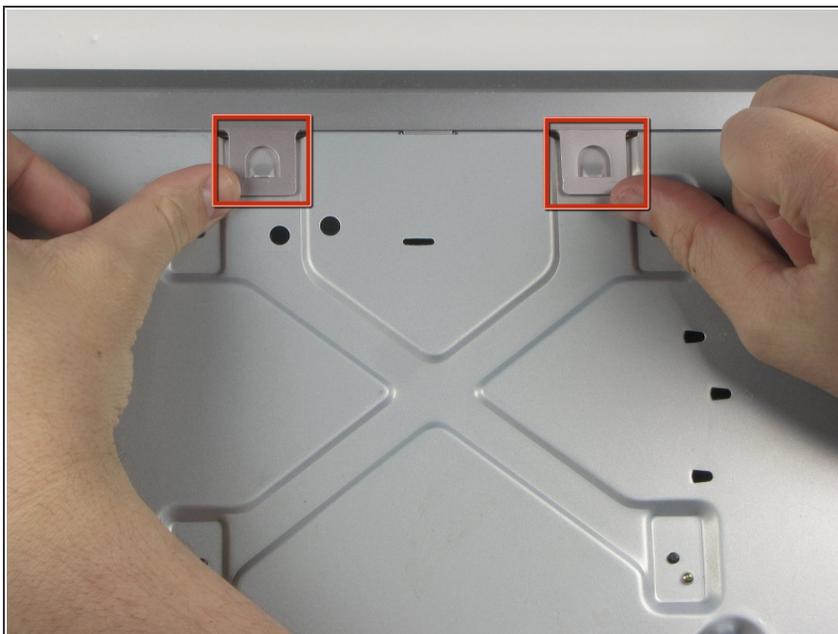



- ⓘ Flip the DVD player so its top is sitting on your working surface.
- Lift and push away the two tabs located in the middle of the player.
- ⚠ The front panel will not detach during this step, so do not force it.

## Step 5




- ① Flip the DVD player on its side.
- Lift and slide forward the single tab on the side.
- ⚠ The front panel will not detach during this step, so do not force it.

## Step 6

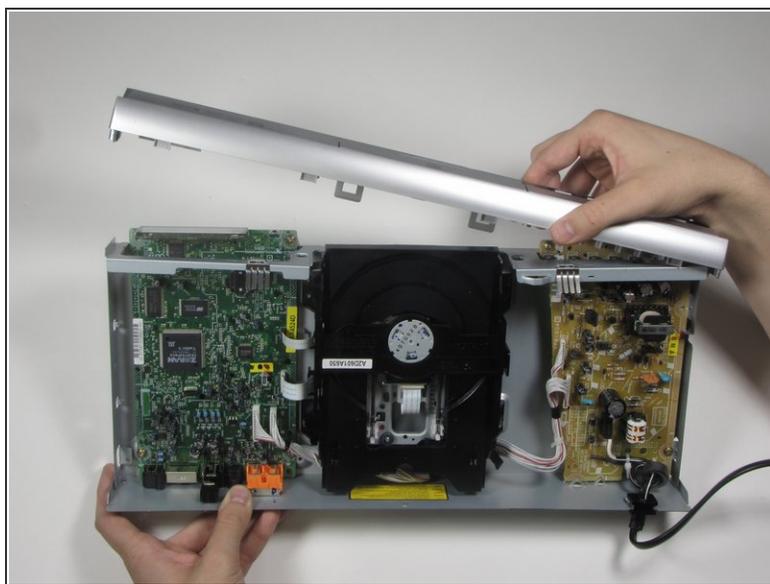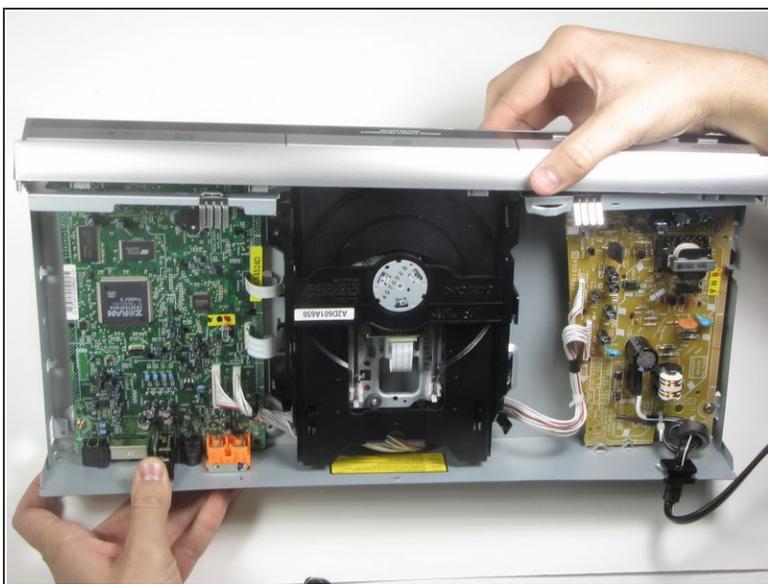



- Grasp the front panel and pull forward to your right to remove it.

## Step 7 — Motherboard

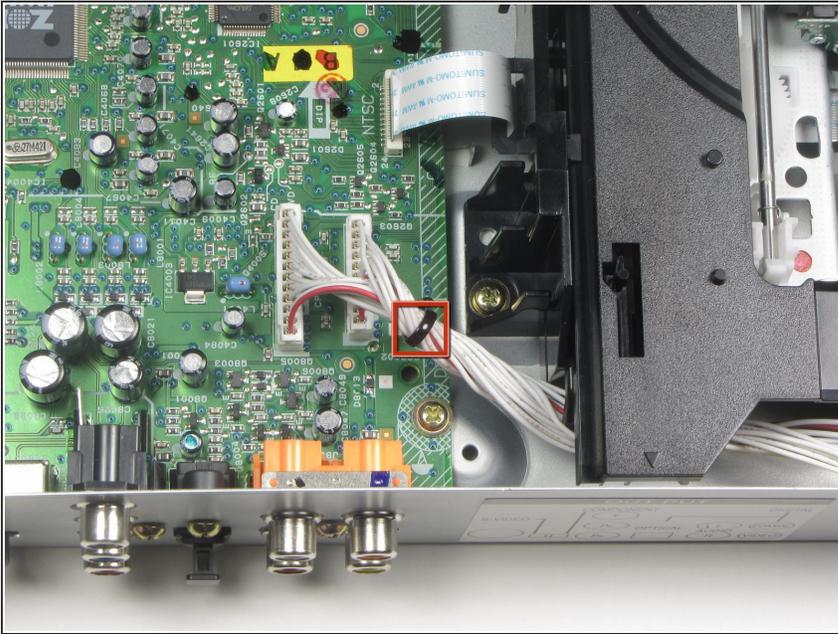



- Remove the black tie holding the two rear ribbon cables together by untwisting it.

## Step 8

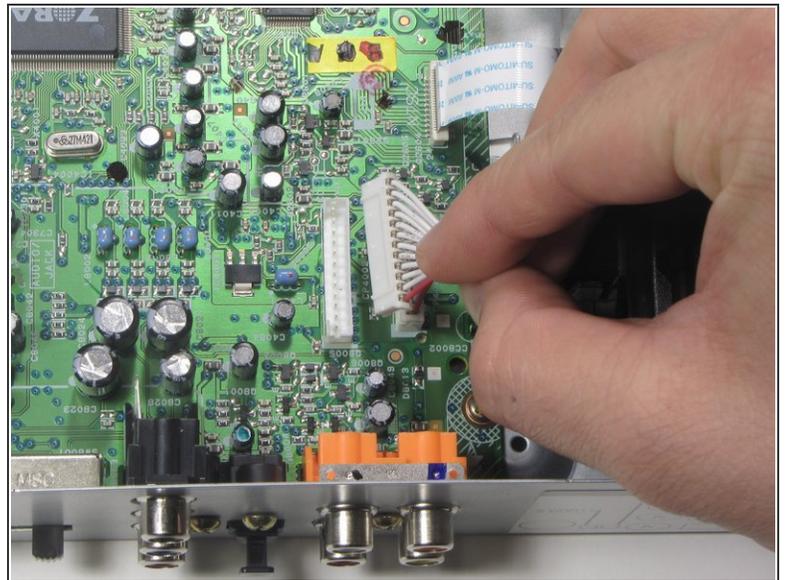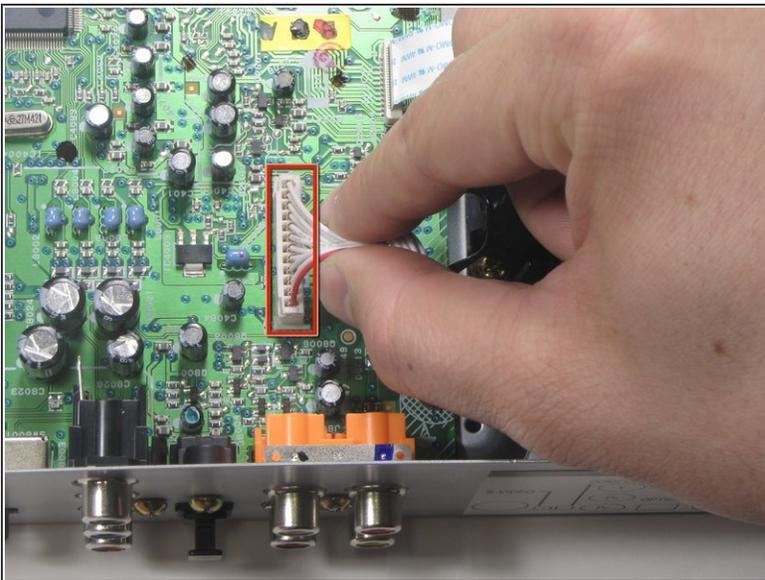


- Remove the first of two multipin cables connected to the Left-Side Motherboard (Green) by pulling vertically.

## Step 9

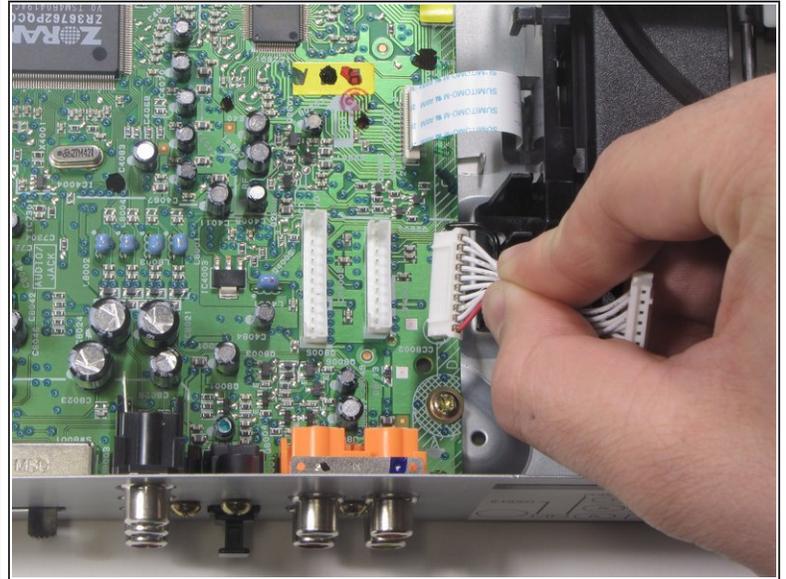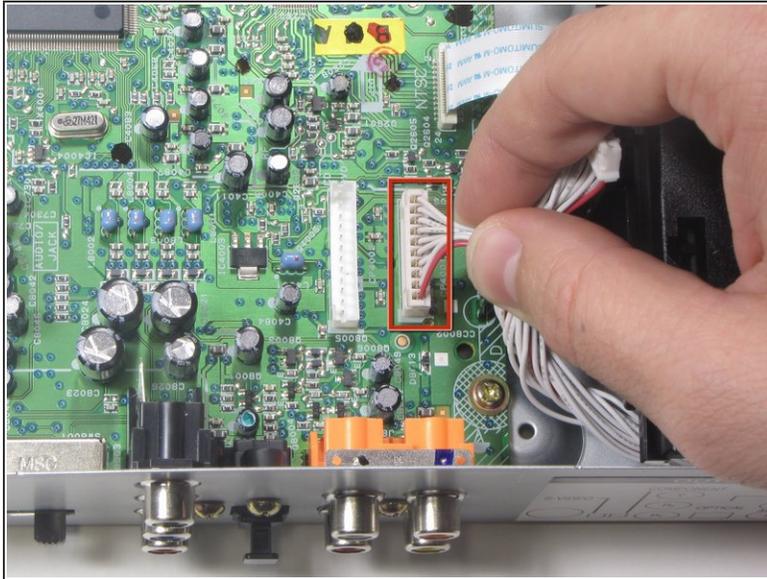


- Remove the second of two multi-pin cables connected to the Left-Side Motherboard (Green) by pulling vertically.

## Step 10

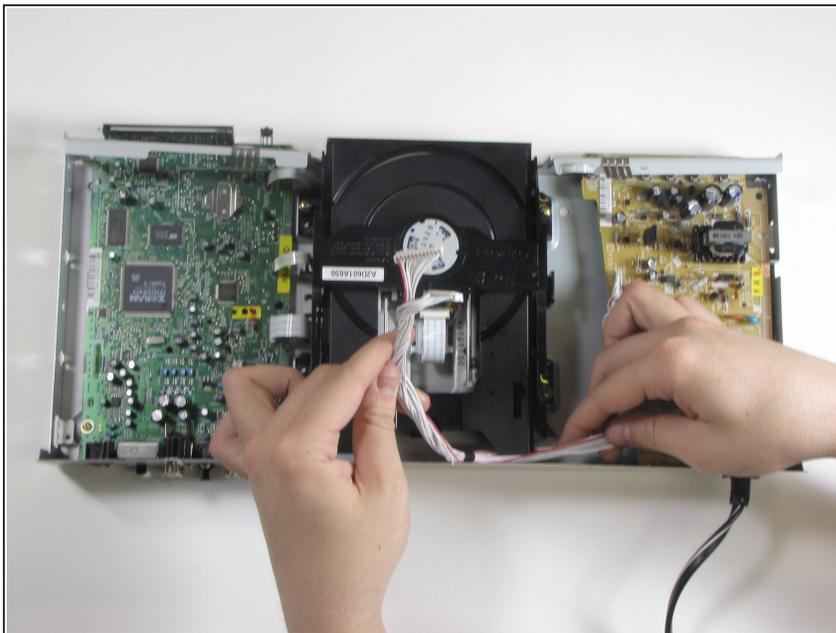


- Pull the two cables to the right to disentangle from the disc drive.
- ⚠ Do not tug, pull, or force the cable. It should slide out with minimal force.**

## Step 11

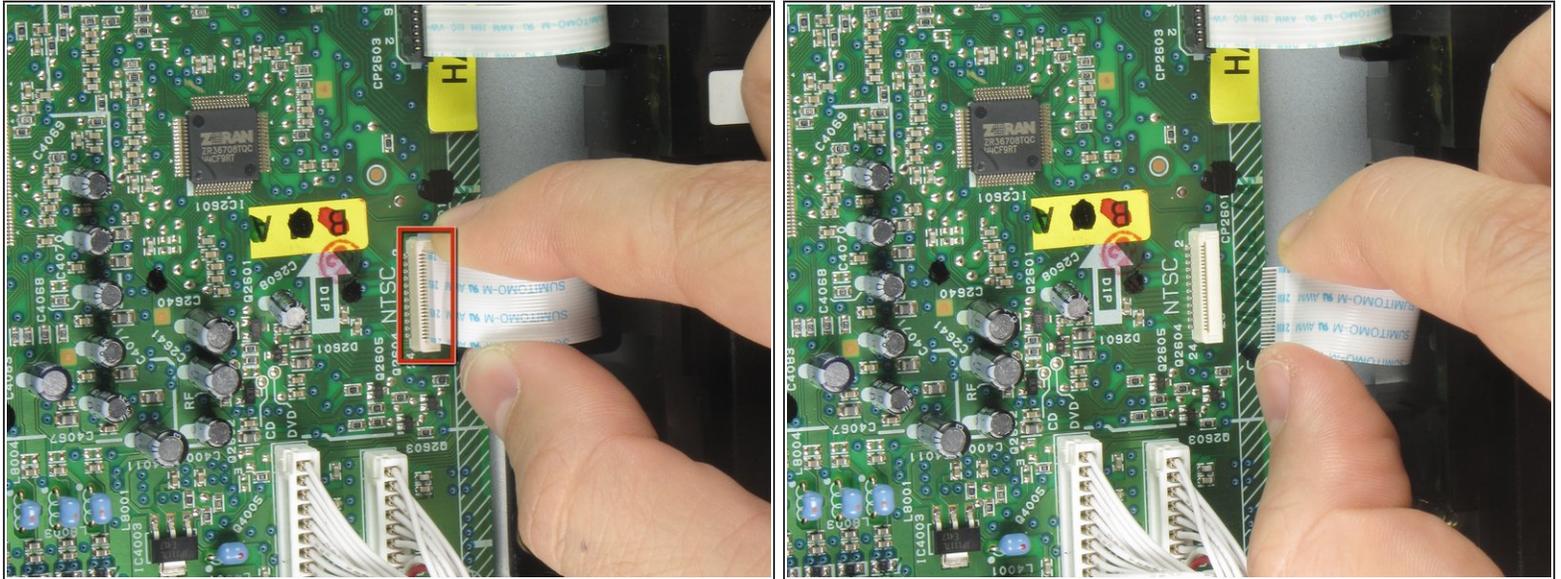


- Remove the first of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 12

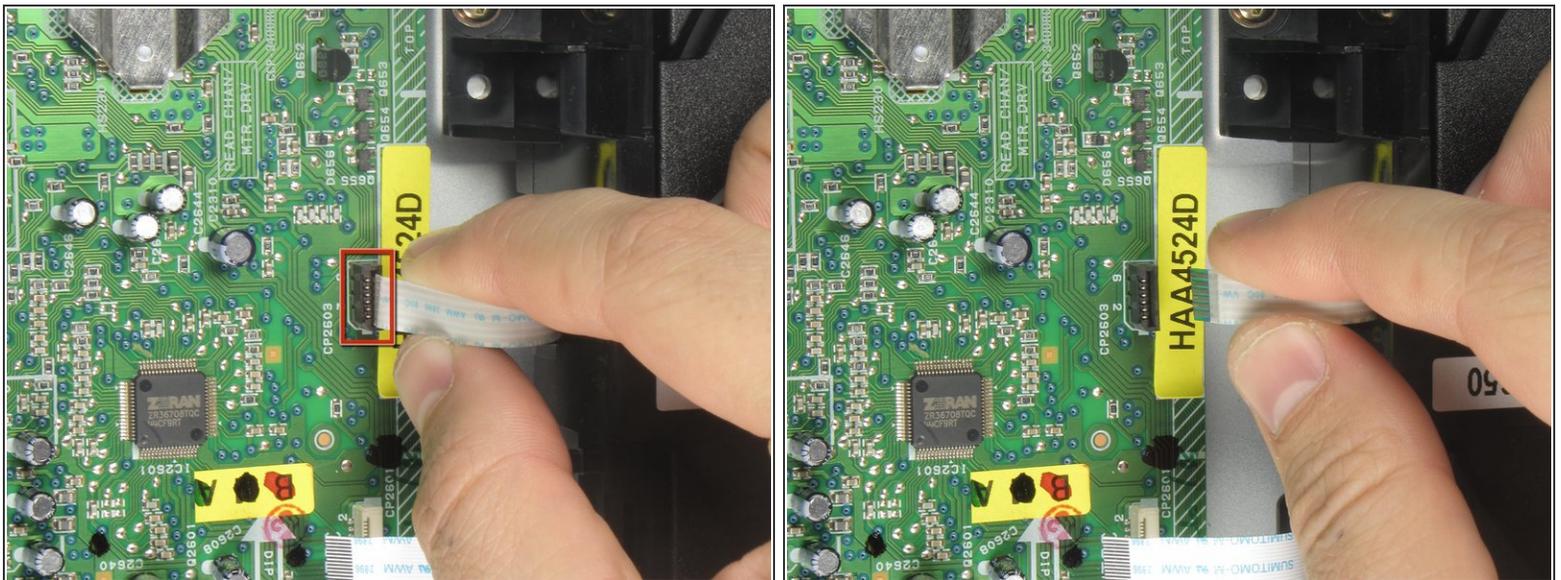

- Remove the second of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 13

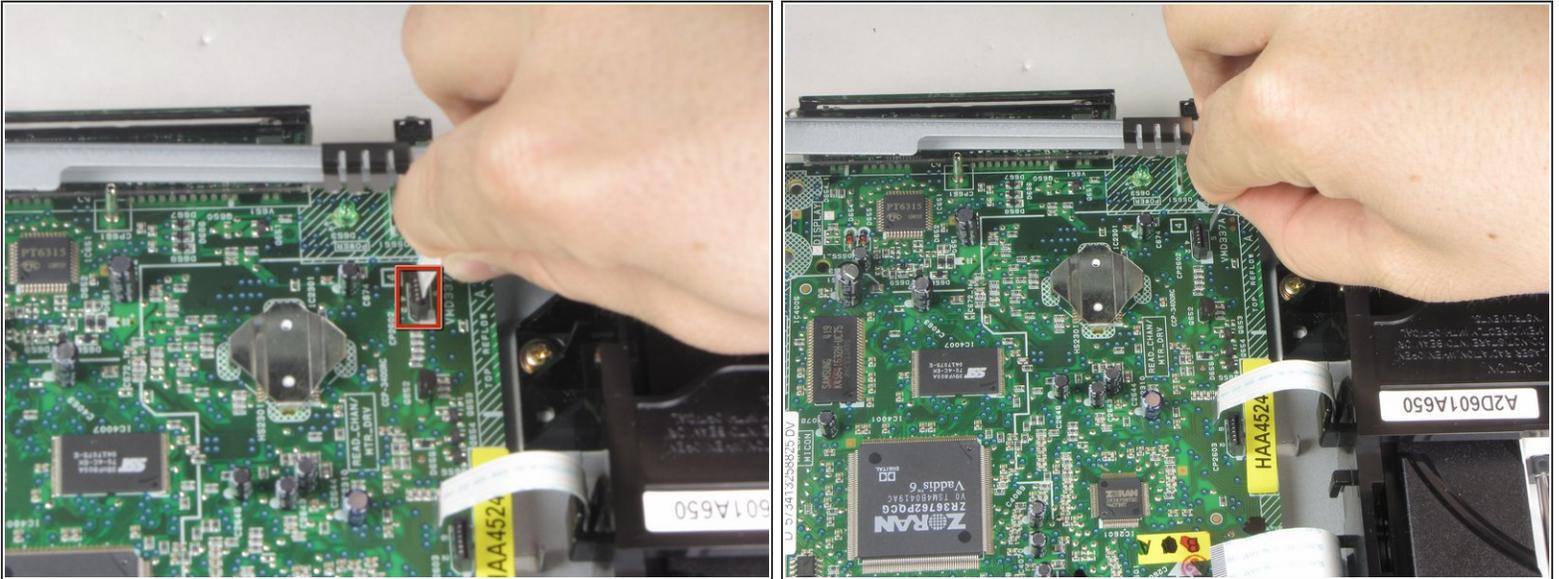


- Remove the third of three ribbon cables on the left hand side of the disc drive by pulling vertically.

## Step 14




- ⓘ Flip the DVD player so it is resting on its front face (so the back is facing you).
- Remove the four .320 inch screws holding the motherboard to its casing.

## Step 15

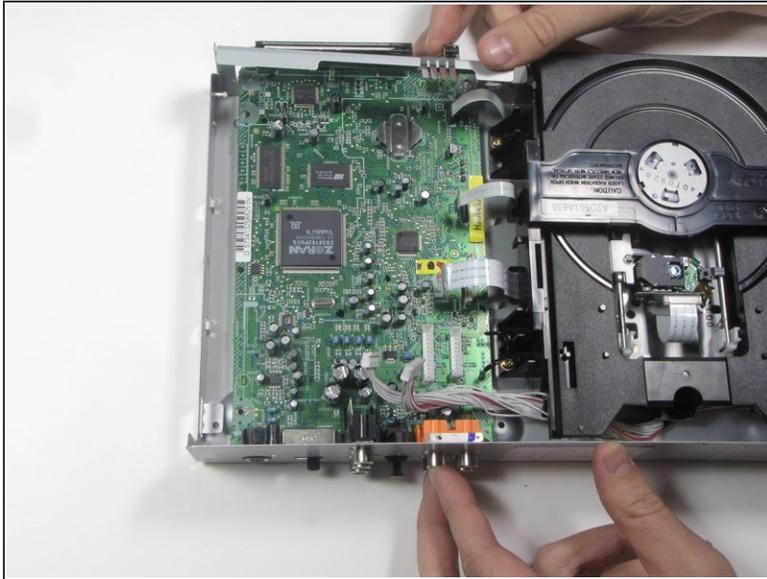

- Push the motherboard forward a few inches to detach it from the casing.

## Step 16

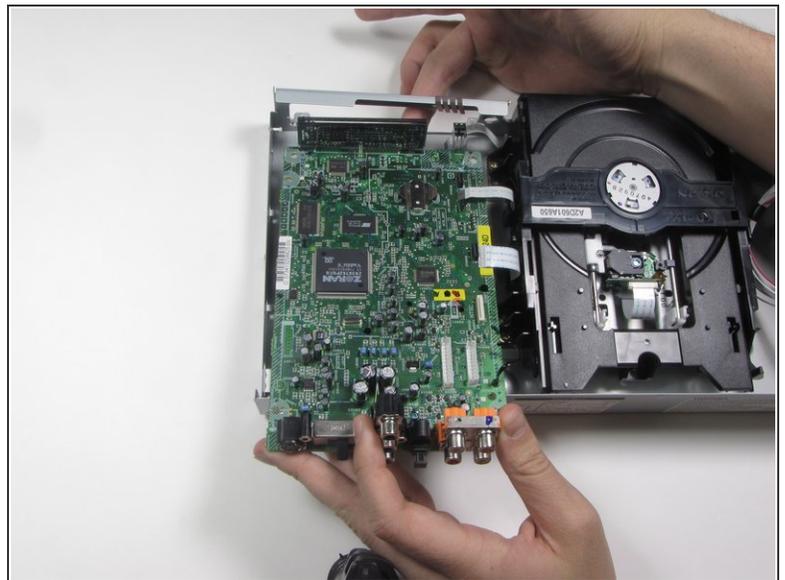

- Lift the motherboard from the rear and pull backward (towards you) to remove it entirely from the case.

To reassemble your device, follow these instructions in reverse order.