




# Canon PowerShot S400 Shutter Button Assembly Replacement

Installation of a new shutter button assembly.

Written By: Ross Bryan

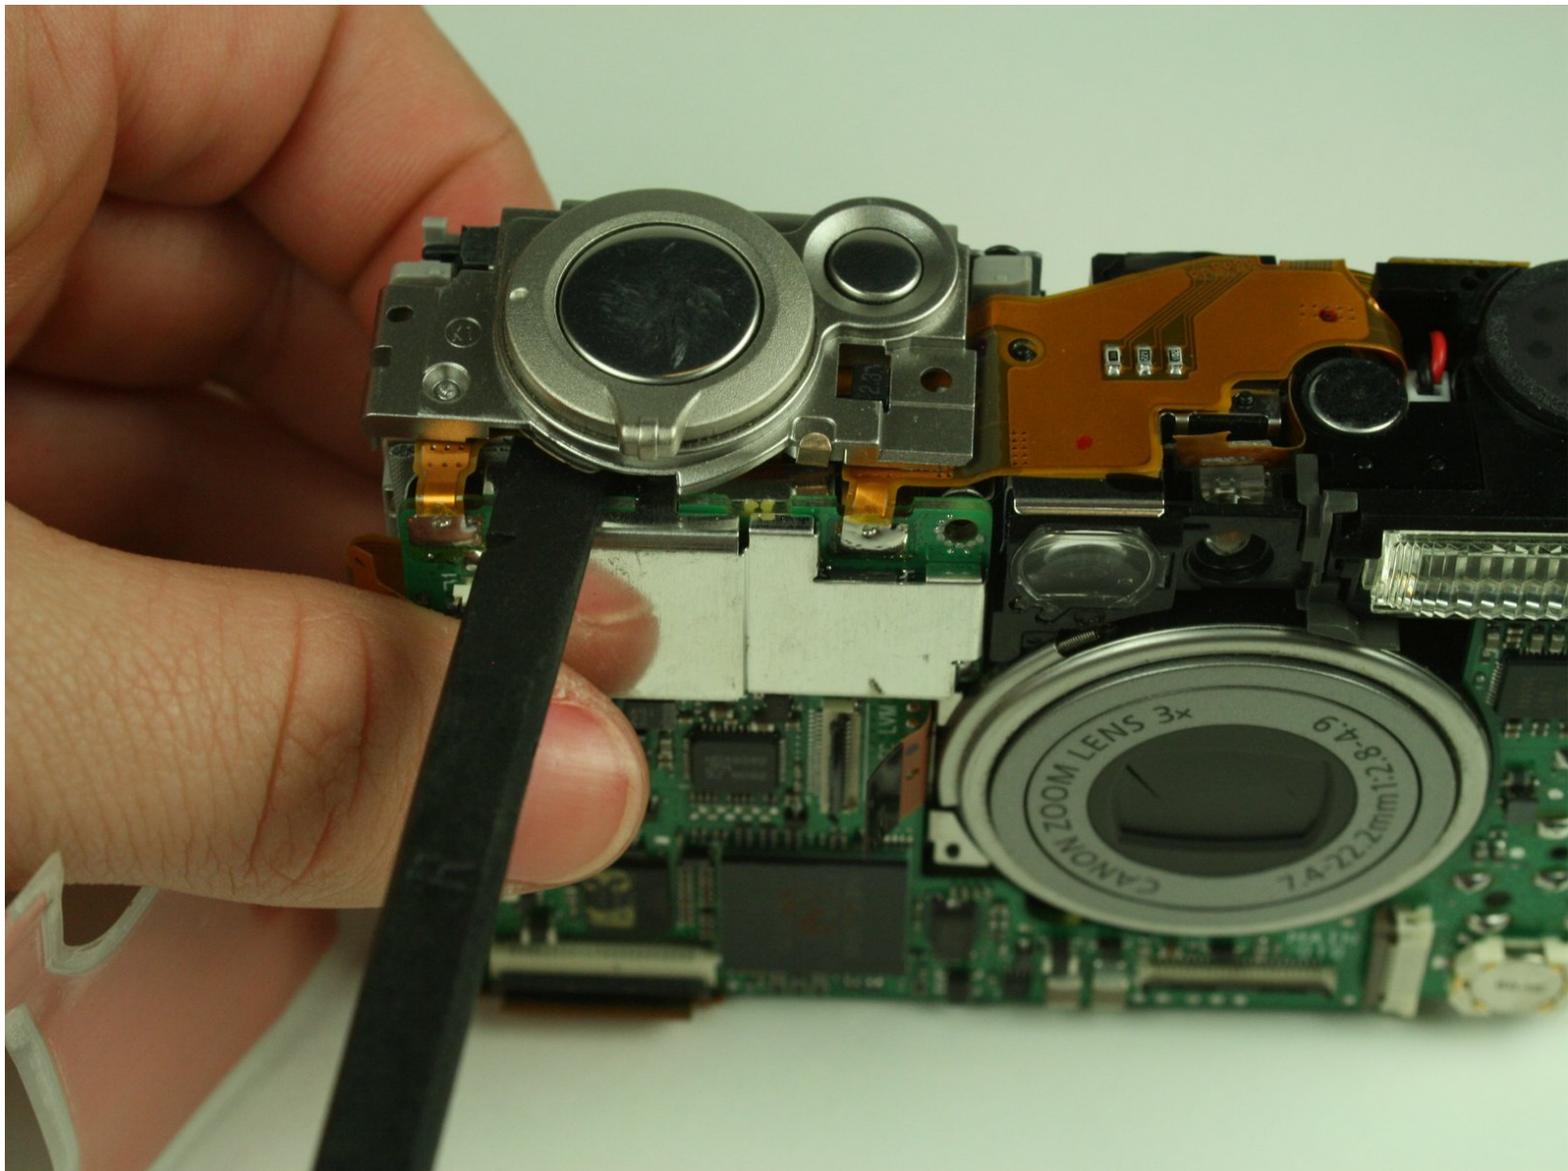

---

## INTRODUCTION

This guide provides instructions on how to replace the shutter button assembly on the Canon PowerShot S400.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Shutter Button Assembly



**i** Unless otherwise stated, a #00 philips screwdriver will be used to remove screws.

- Remove the 4.75mm screw located in the top right corner of the backside of the camera.
- Remove the four # screws located on the bottom of the camera.

## Step 2

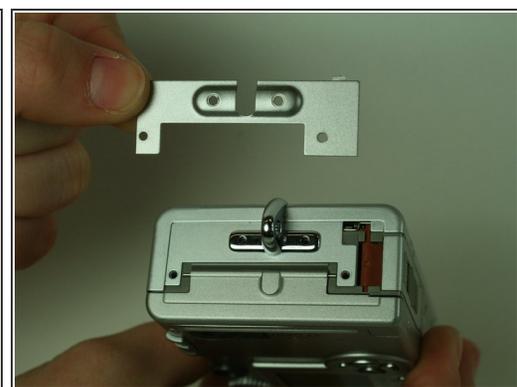

- Remove the two screws located on the right side of the camera. (the side with the USB adaption plug)
- Remove the four screws on the left side of the camera.
- This will release a small metal plate. Remove this plate.


### Step 3



**⚠** There is a small black plastic piece that sits above the lens underneath the camera case. This plastic piece may fall out when you remove the cases; recover the piece and save it.

- Now separate the front and back camera casings.

### Step 4

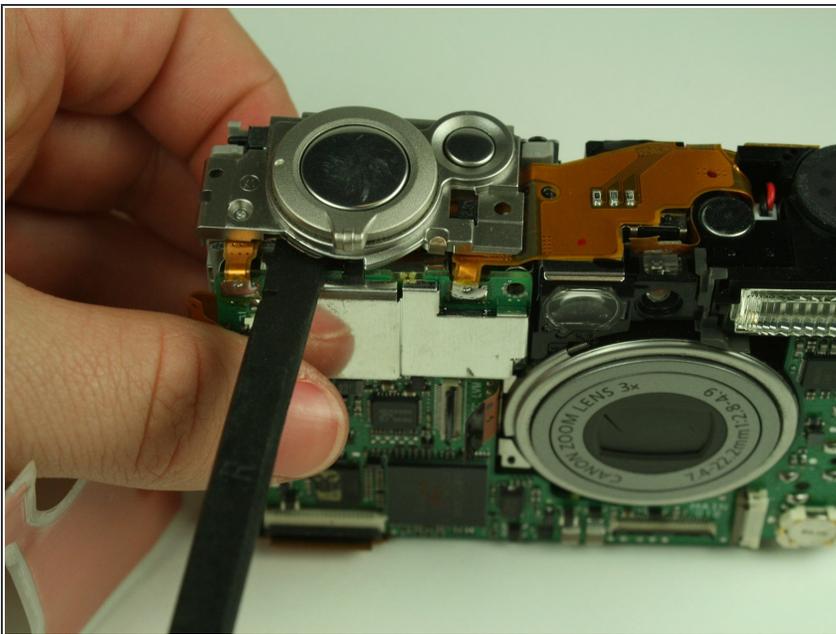

- Using a spudger, carefully pry the shutter button assembly from the camera.
- Install the replacement shutter button assembly.

To reassemble your device, follow these instructions in reverse order.