



# Pentax Optio S4i Front and Back Cover Replacement

Remove front and back cover of camera

Written By: Nicole Wong



---

## INTRODUCTION

This guide will teach you how to properly remove the cover of the camera.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Front and Back Cover



- Remove the following screws:
  - Two silver 3.15mm Phillips #00 screws on the right side of the camera
  - Two silver 2.08mm Phillips #00 screws on the left side of the camera


## Step 2



- Remove the two indicated screws on the bottom of the camera:
  - The screw circled in red is a longer silver 3.15mm Phillips #00 screw
  - The screw circled in blue is a shorter silver 2.25mm Phillips #00 screw







## Step 3

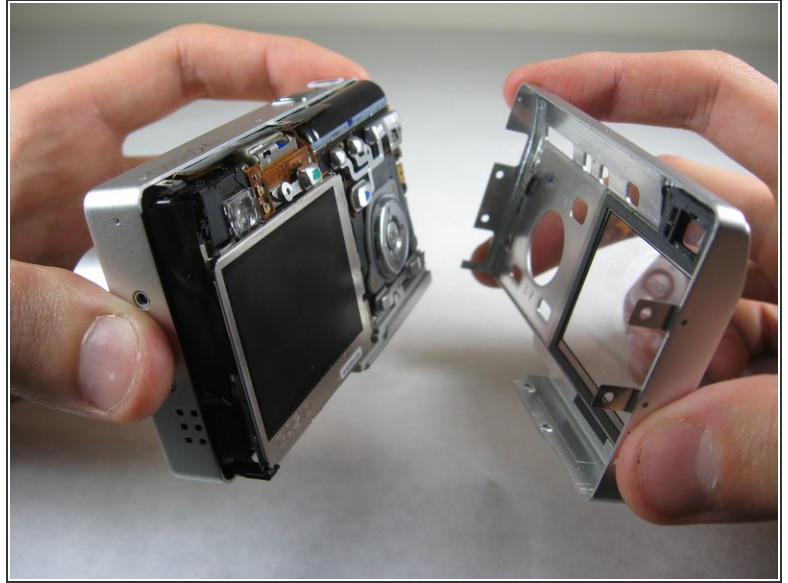

- Carefully pull the back of casing away from the front.


## Step 4

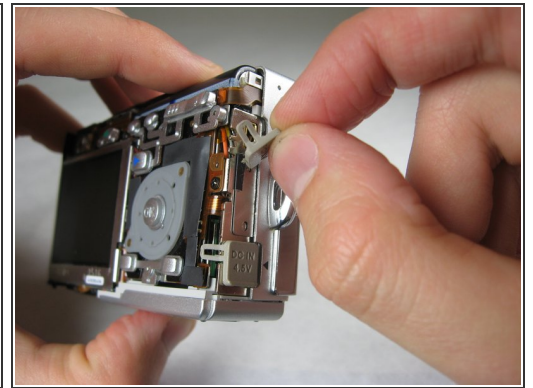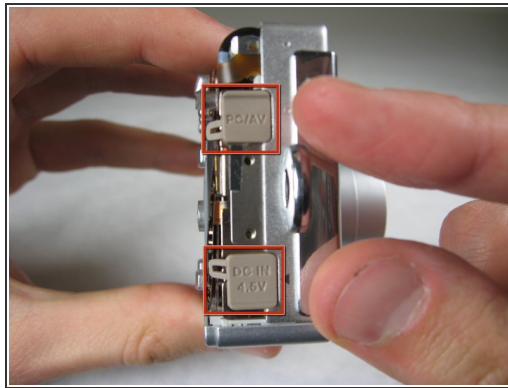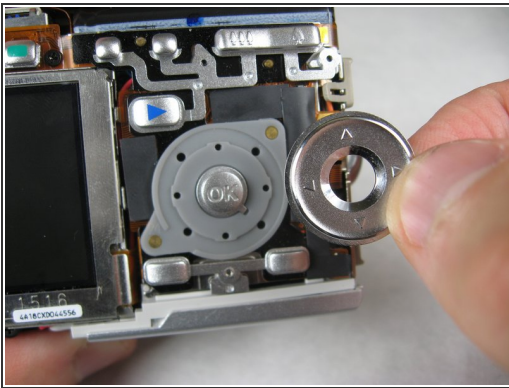

 After removing the back cover, several things must be removed.

- Silver donut-shaped button will fall off. Place separately. Remove the plug covers on the right side of camera, labeled “PC/AV” and “DC IN 4.5V”.

## Step 5

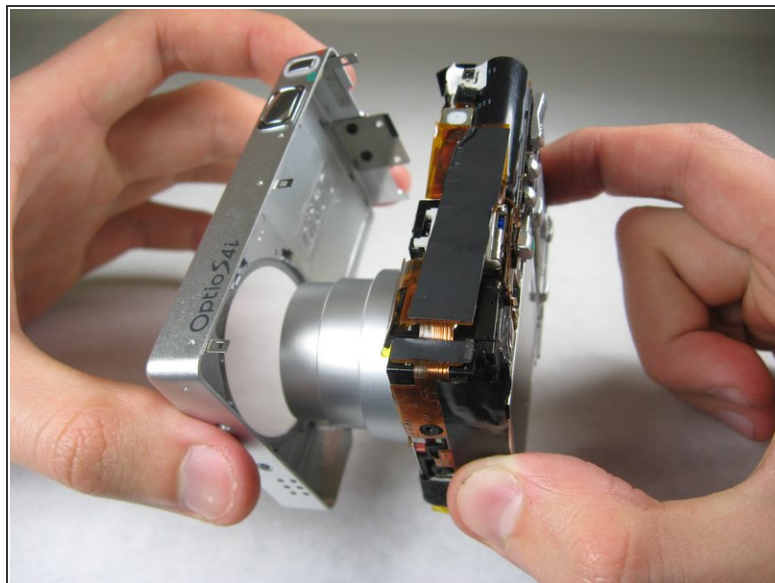

- To remove the front cover, gently hold the inside structure of the camera and slowly pull the front cover off.

To reassemble your device, follow these instructions in reverse order.