



HP iPAQ h4155 Back Case Replacement

This step-by-step guide illustrates how to...

Written By: John Pagliero



INTRODUCTION

This step-by-step guide illustrates how to remove and replace the back case of a Pocket PC.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- While sliding the silver release tab up, simultaneously lift the cover up from the left side.

Step 2



- Push the tab left to right to remove the cover.

Step 3



- Now, lift the battery up and away from the device to remove it.

Step 4 — Back Case




- Remove the four silver screws using the T5 Torx Screwdriver (T5 x .25 in).

Step 5



- Remove the single black screw that is located beneath the HP sticker with the T5 Torx Screwdriver.

Step 6

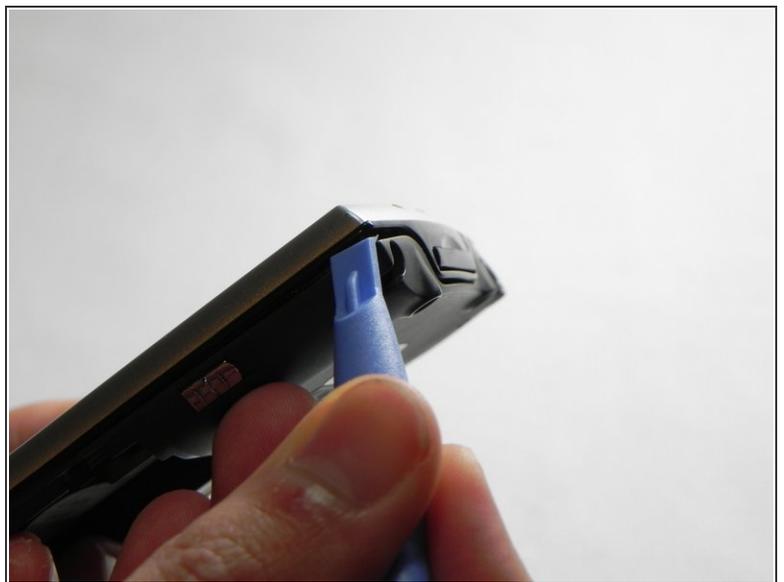

- Next, use your plastic removal tool to separate the gray back from the black center piece.
- For better results, start the separation at the corner piece.

Step 7



- Remove the back case.

To reassemble your device, follow these instructions in reverse order.