




Canon EOS Rebel XS Lens Mount Ring Replacement

Use this guide to remove the lens mount ring.

Written By: Daniel Bussone

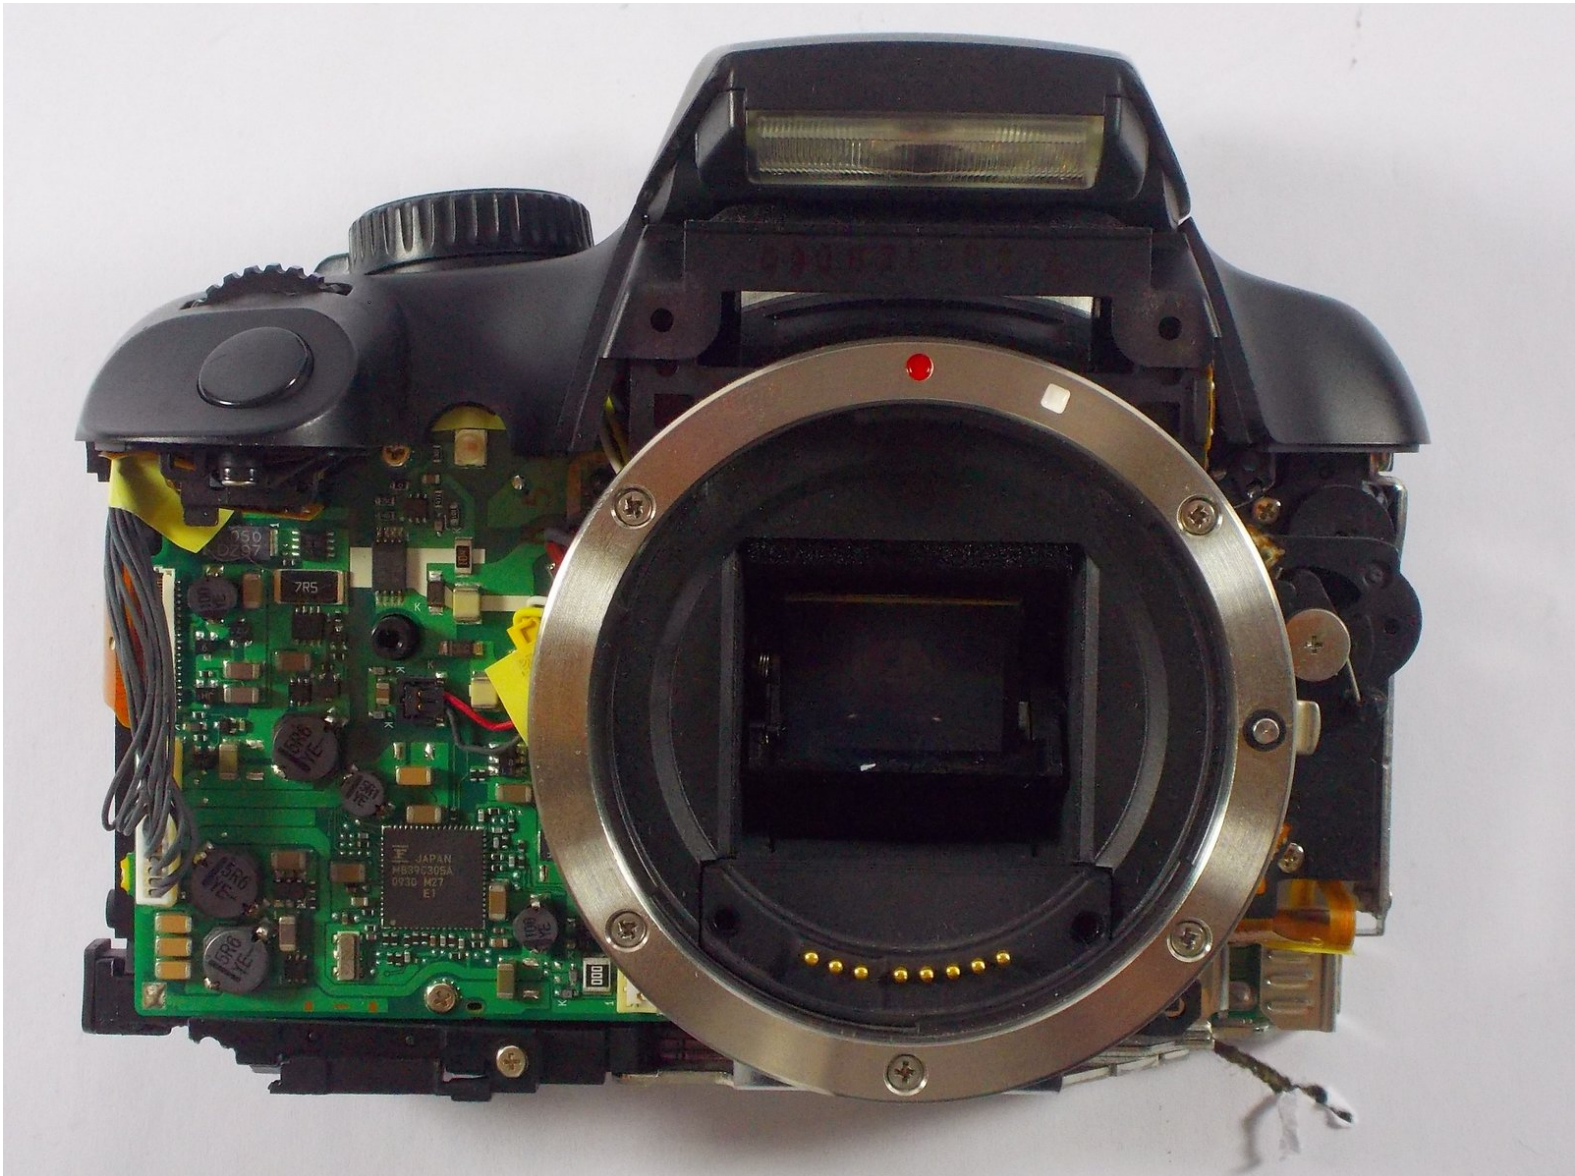

INTRODUCTION

Use this guide to remove the lens mount ring. This particular Canon SLR has a plastic lens mount ring that can wear faster than the metal lens mount rings on other models.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

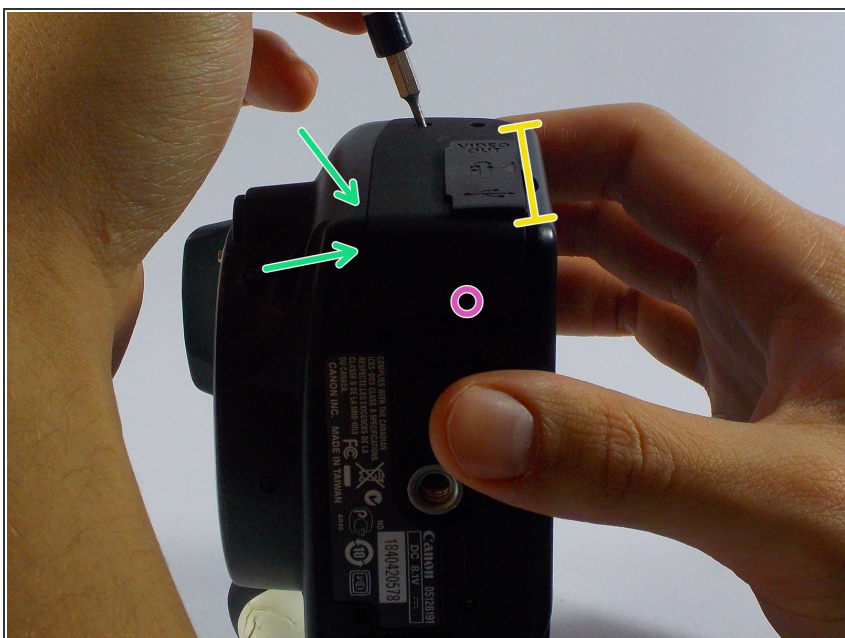

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Disassembling Canon EOS Rebel XS Front Cover




- Remove three medium length screws from the bottom of the camera

Step 4




- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from non-grip side.
- ⓘ If you start on the grip side, it will be more challenging to loosen the panel.

Step 5 — Canon EOS Rebel XS Lens Mount Ring Replacement

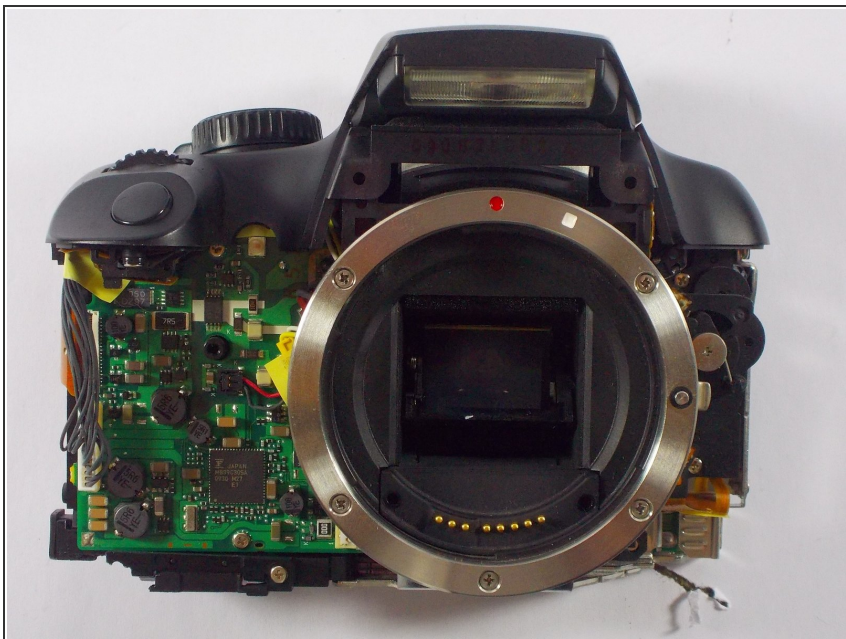

- Remove the five silver screws from the lens mounting ring using a Phillips screwdriver.

Step 6

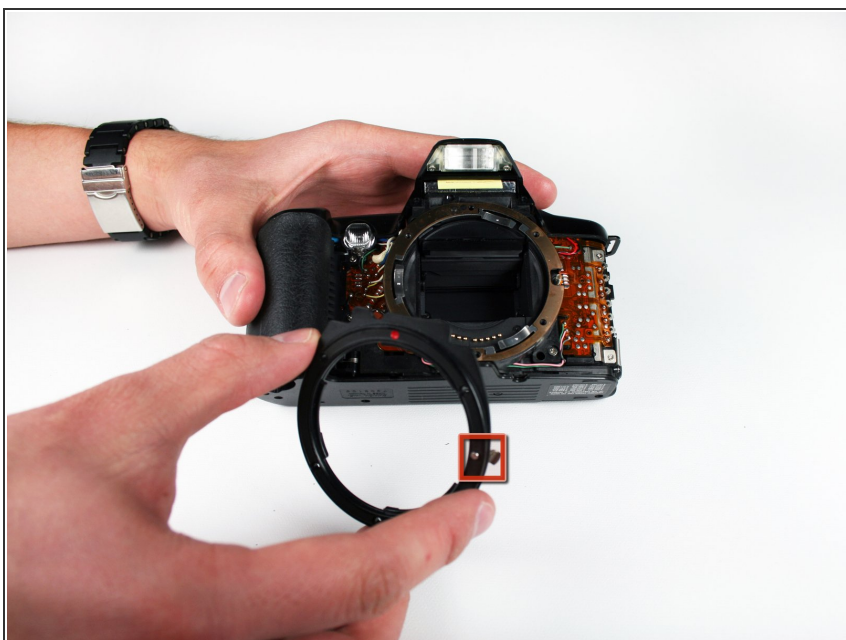


- Use your fingers to remove the lens mounting ring.
- ⓘ There is a small metal button housed in the ring (red square). Be careful not to lose this piece when removing the ring.

Step 7



- Use a pair of tweezers to remove the spring on the lens mounting ring.

Step 8

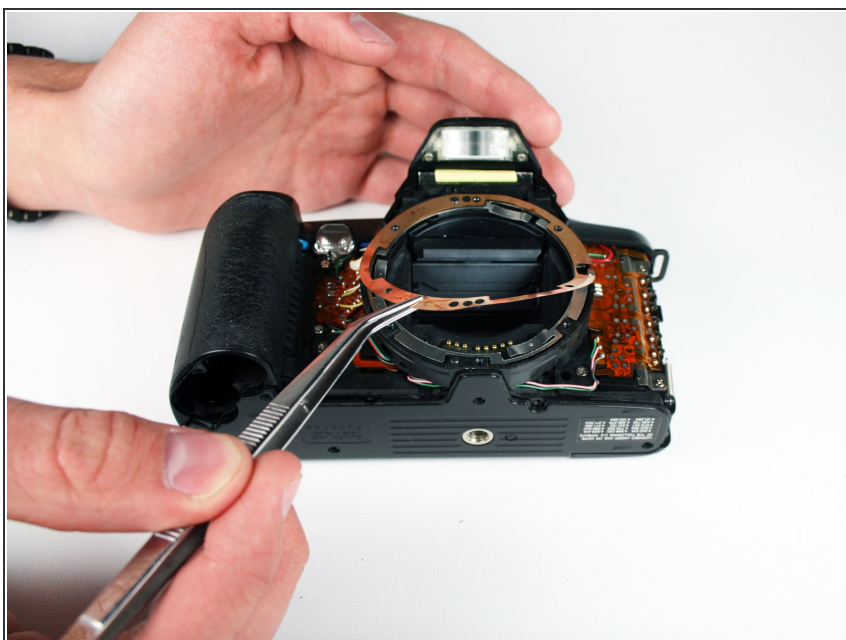

- Use a pair of tweezers to remove the gold metal ring.
- ⓘ Take note of the ring's orientation for re-installing it.

To reassemble your device, follow these instructions in reverse order.