


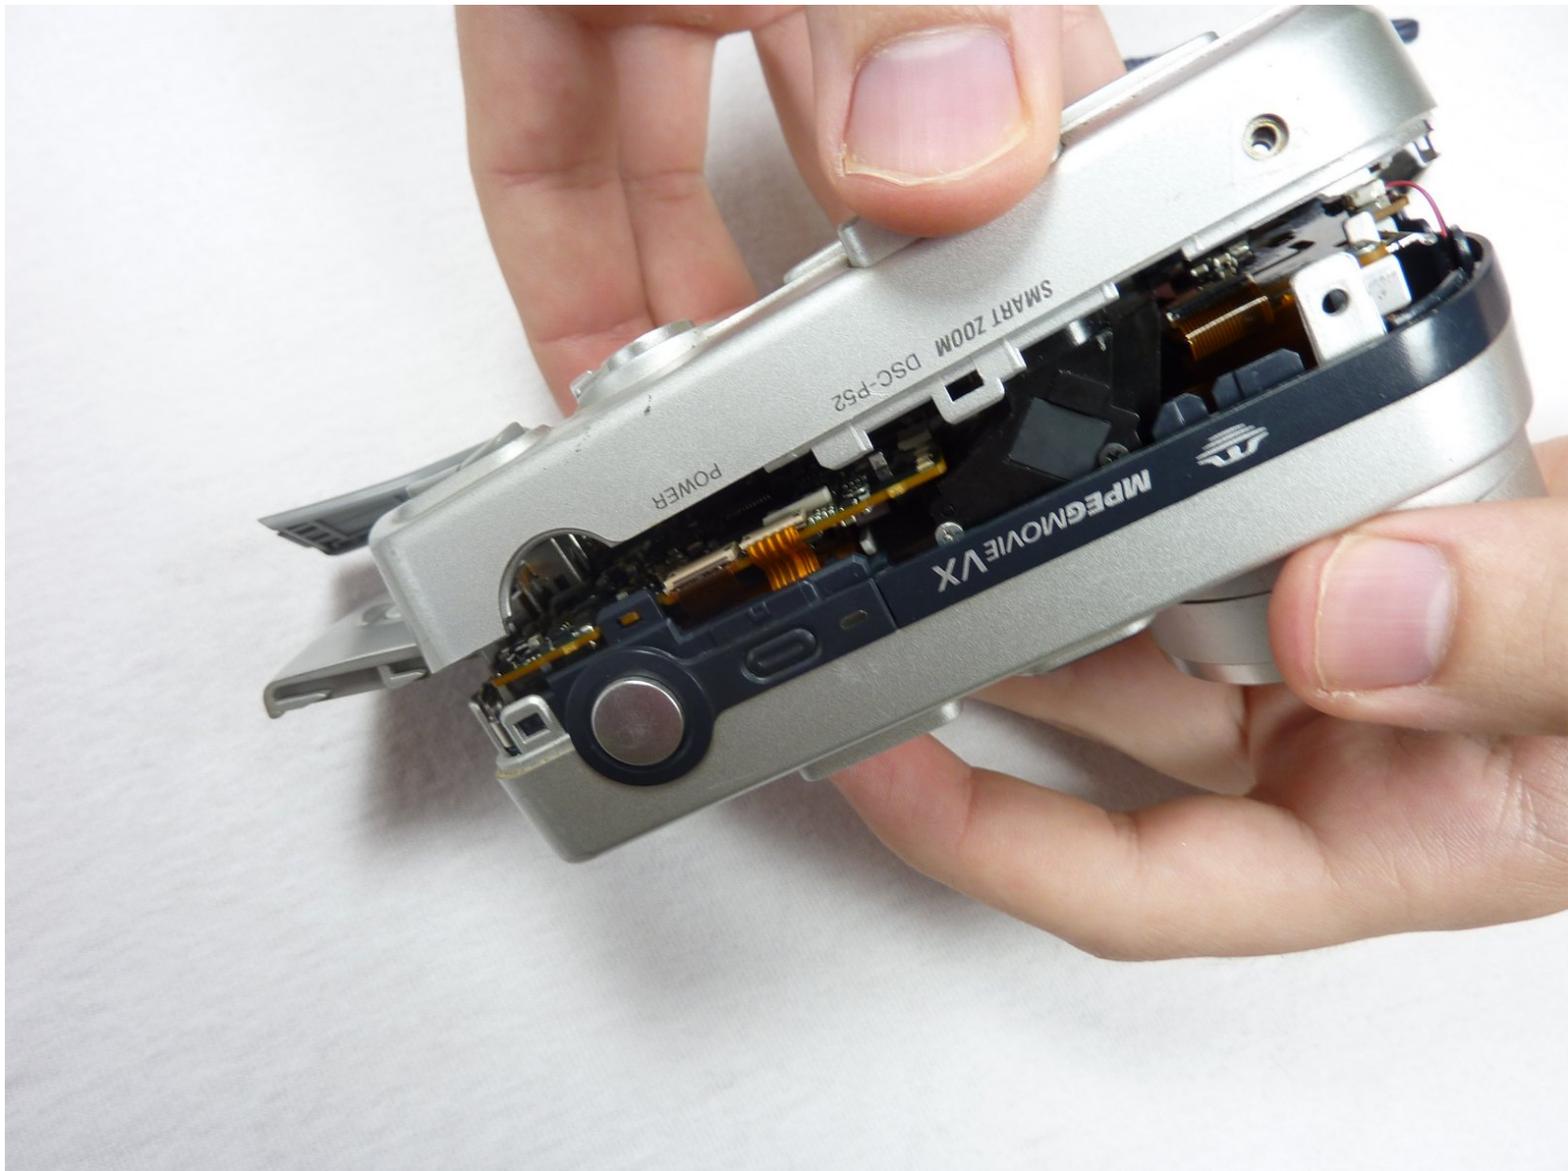

Sony Cyber-shot DSC-P52 Outer Case Replacement

This guide explains the procedure to remove the case from the Sony Cybershot DSC-P52.

Written By: Trevor



INTRODUCTION

This guide is used for taking apart the case to fix many of the issues of the Sony Cybershot DSC-P52.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Outer Case




- Open the battery compartment and remove the batteries.
- Remove all of the visible screws on the outside of the case.
- ⓘ There should be three of them that are all easily located.

Step 2



- Open the memory card compartment.
- Remove the screw next to the memory card slot.

Step 3

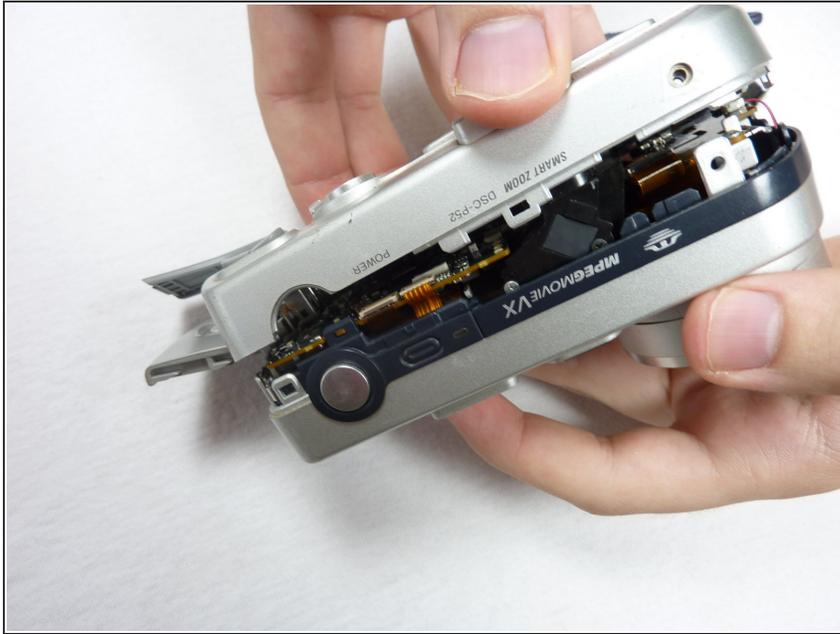


- Pull apart the front and back cover pieces carefully.
- ⓘ The front cover should come completely free with little effort.
- ⓘ The back cover will still be attached to the circuit board.

Step 4




- Simultaneously unclip all of the clips holding in the circuitry. Remove the back case.
- ⓘ The circuitry will still be connected to the back case by ribbon cables.

Step 5

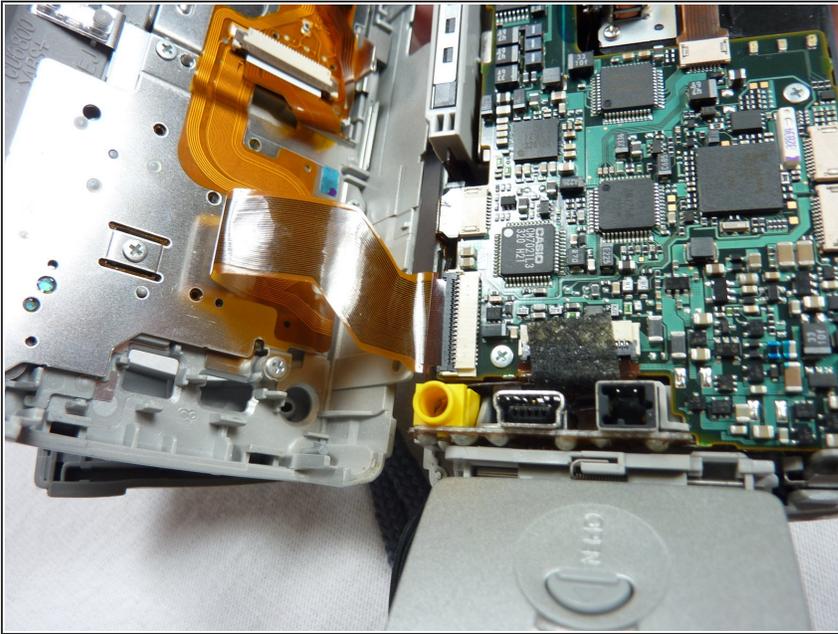


- Open the case as shown.

Step 6

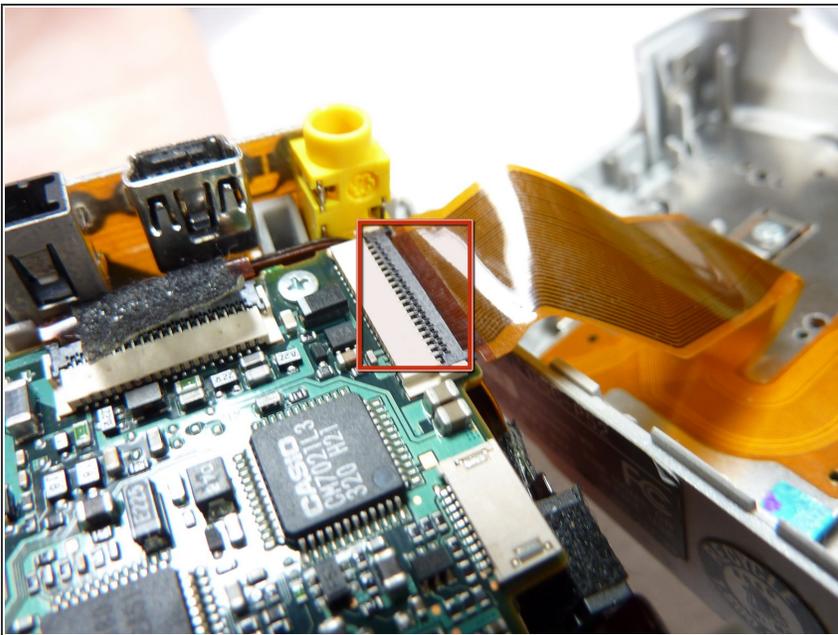

- Unclip the clip holding the ribbon cable in.
- ⓘ Other ribbon cables might not have a clips.

Step 7

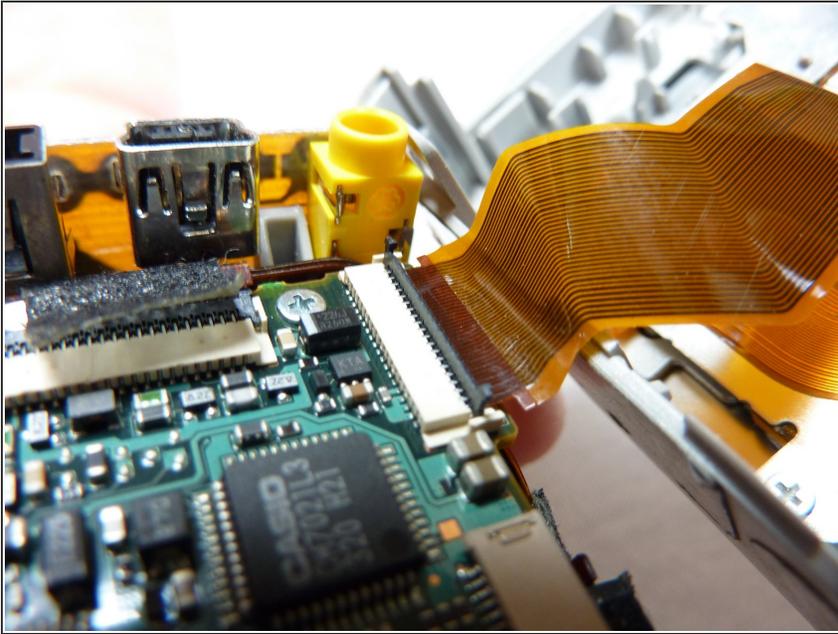

- Pull the ribbon cable out.

To reassemble your device, follow these instructions in reverse order.