


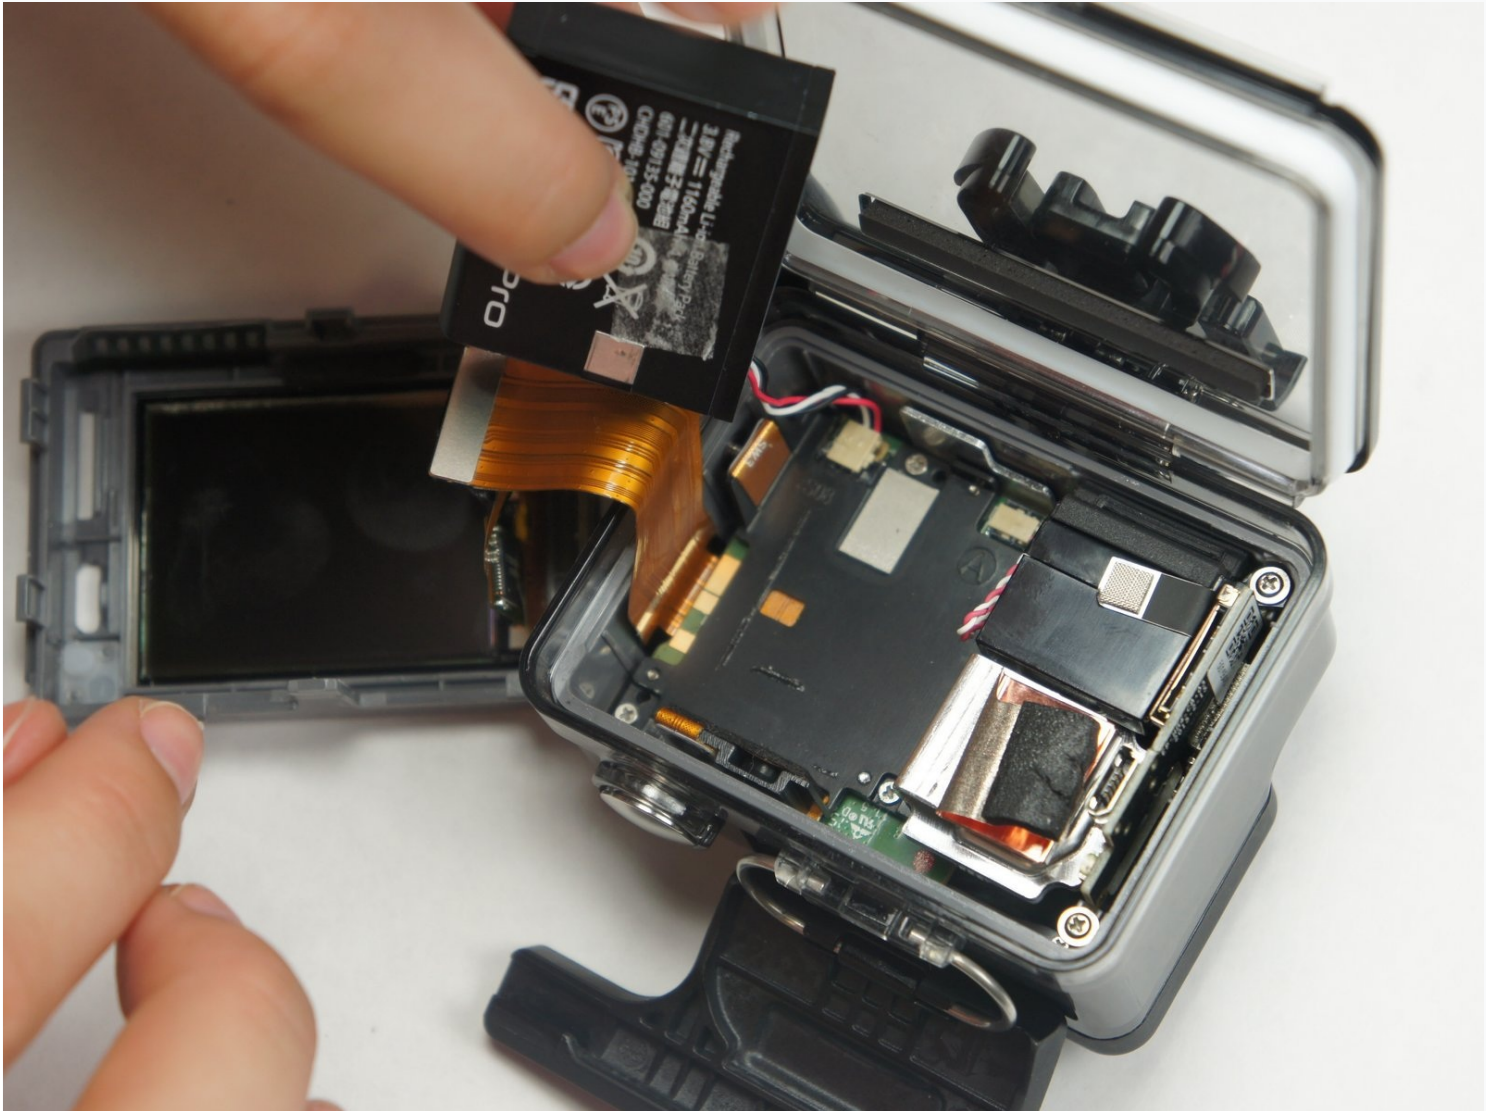

# GoPro Hero+ LCD Battery Replacement

The battery is connected to the motherboard...

Written By: Kyle



# INTRODUCTION

The battery is connected to the motherboard with a few wires. Be sure to be careful when removing the battery to not damage the motherboard or the battery.

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)

[Metal Spudger Set](#) (1)

## PARTS:

[GoPro Hero+ LCD Battery](#) (1)

---



## Step 1 — Back Panel



 Be sure to power off the GoPro before you start disassembly.

- Pop up and pull back on the clip to remove the screen cover and expose the back panel with the touchscreen.


## Step 2

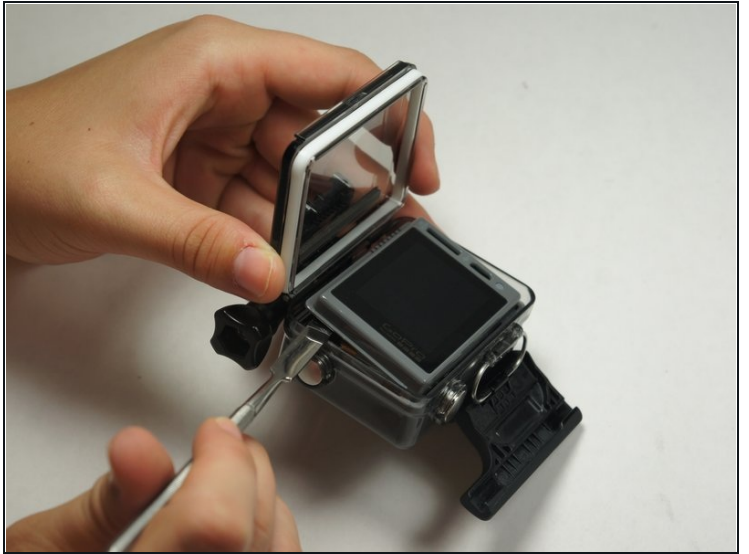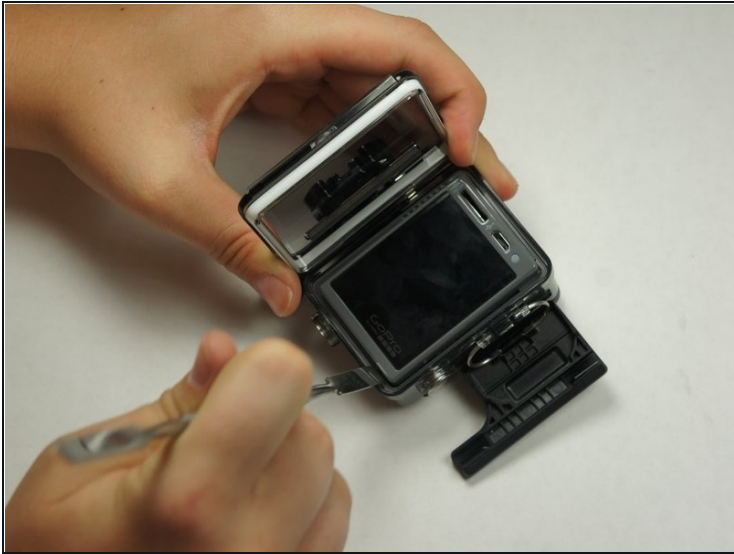

- Use the metal spudger to pry around the perimeter of the panel.
- Pry the panel upwards by inserting the metal spudger into the corner crease between the panel and camera shell.



### Step 3

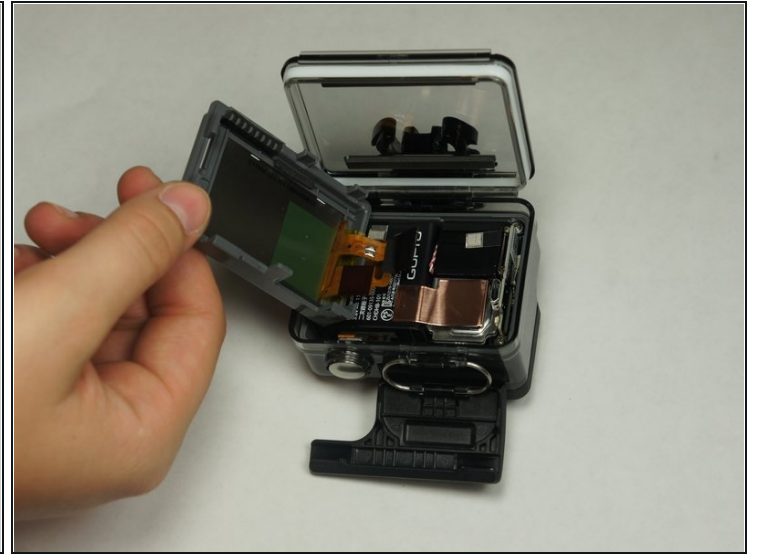

- Pry around the panel to ensure it is not attached to the device.
- Move the panel to the side so you can access the internal components.

⚠ The panel is still attached to the rest of the device with a ribbon cable, so be sure to not tear or damage the cable.


### Step 4 — Battery



- Peel back the rear panel ribbon cable that is adhered to the battery until it is completely separated from the battery.


⚠ Be careful of metal contacts on strip; they can be sharp.

## Step 5

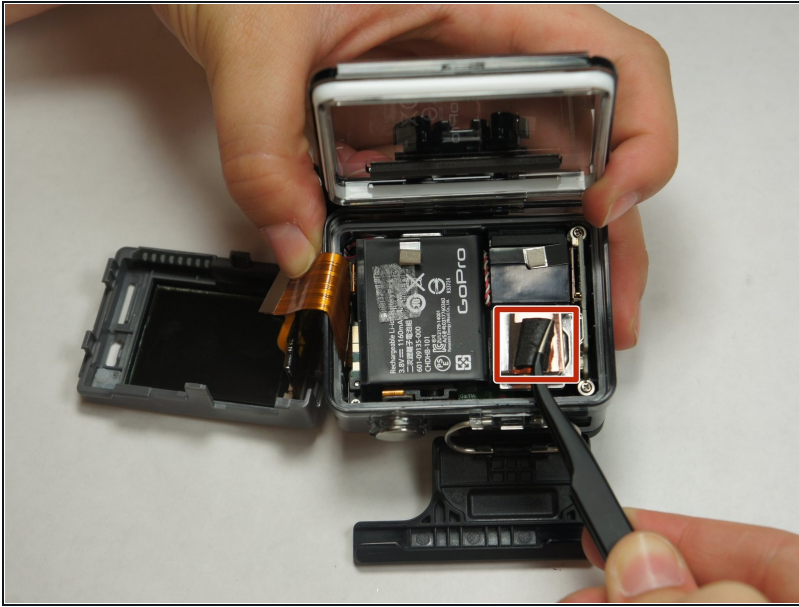


- Using [tweezers](#), peel off the copper tape on the right side of the battery.

## Step 6

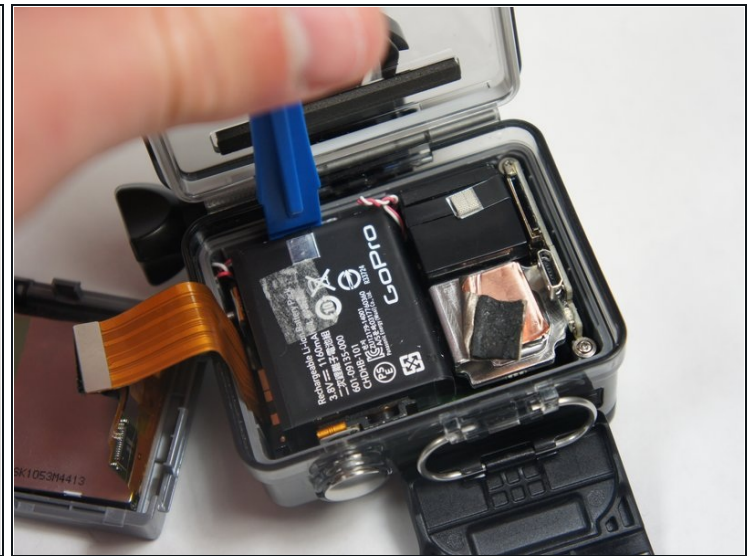

- Place the plastic opening tool at one of the edges of the battery then pry until the battery is removed from the GoPro.

## Step 7

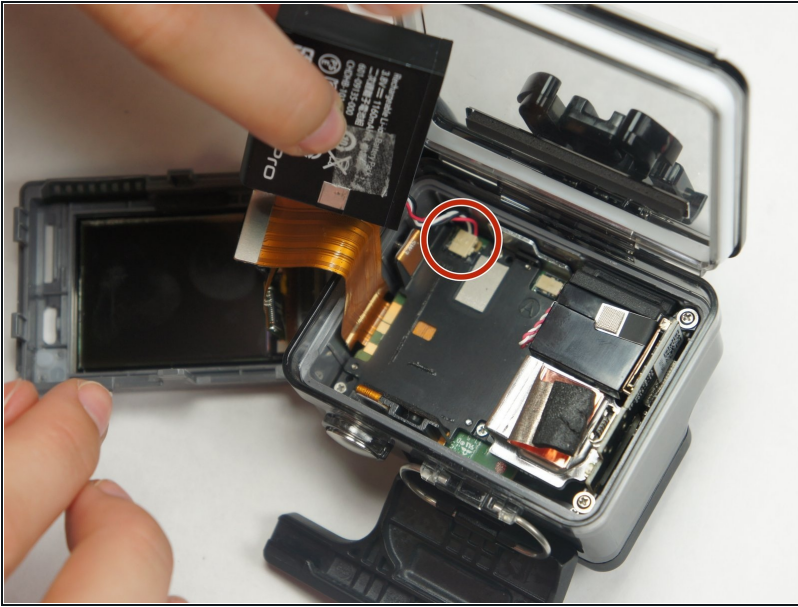

- Use a pair of tweezers to disconnect the battery connector from the motherboard.
- Gently pull the battery off the motherboard. Pulling vertically off the motherboard will give a clean release.

---

To reassemble your device, follow these instructions in reverse order.