


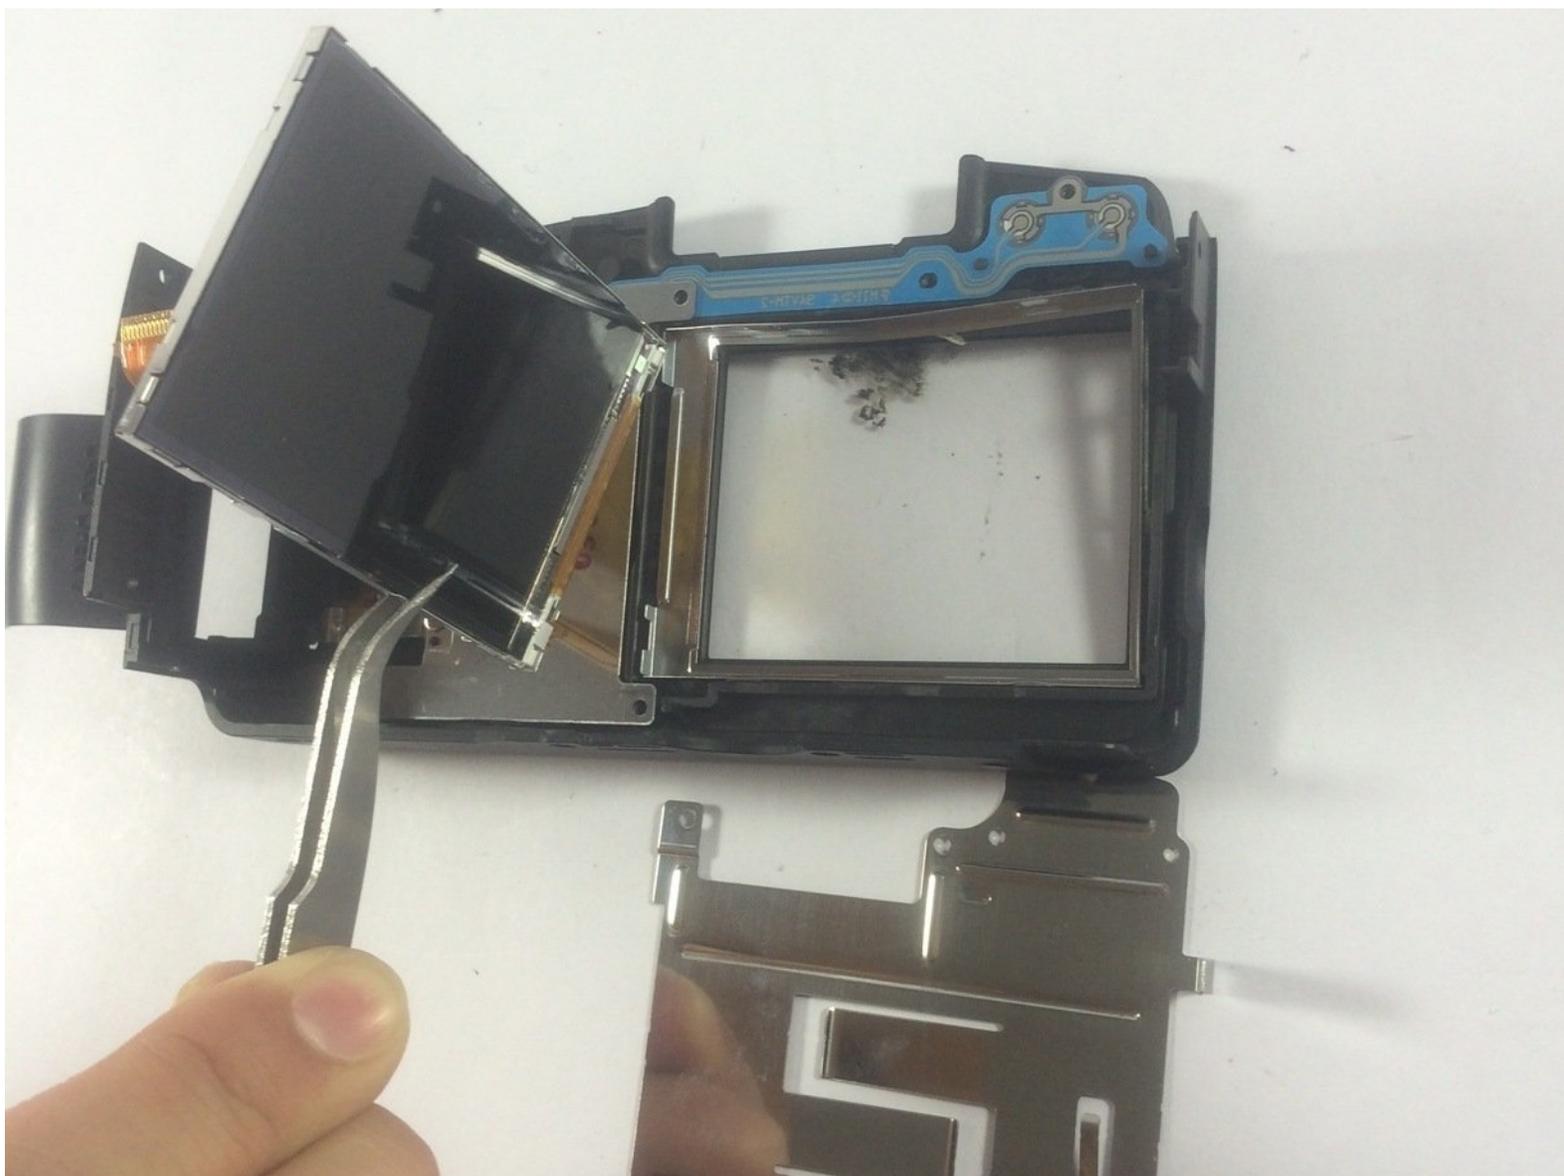

Canon EOS Rebel XS LCD Replacement

Use this guide to replace the LCD.

Written By: Daniel Bussone



INTRODUCTION

Use this guide to replace the LCD. The LCD tends to fade after about five years.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

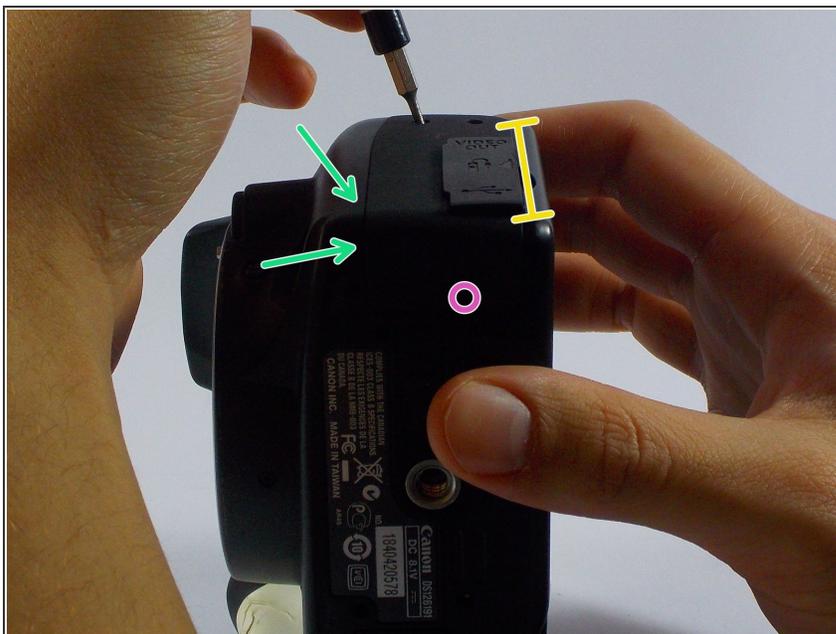


- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Back Cover




- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

Step 4

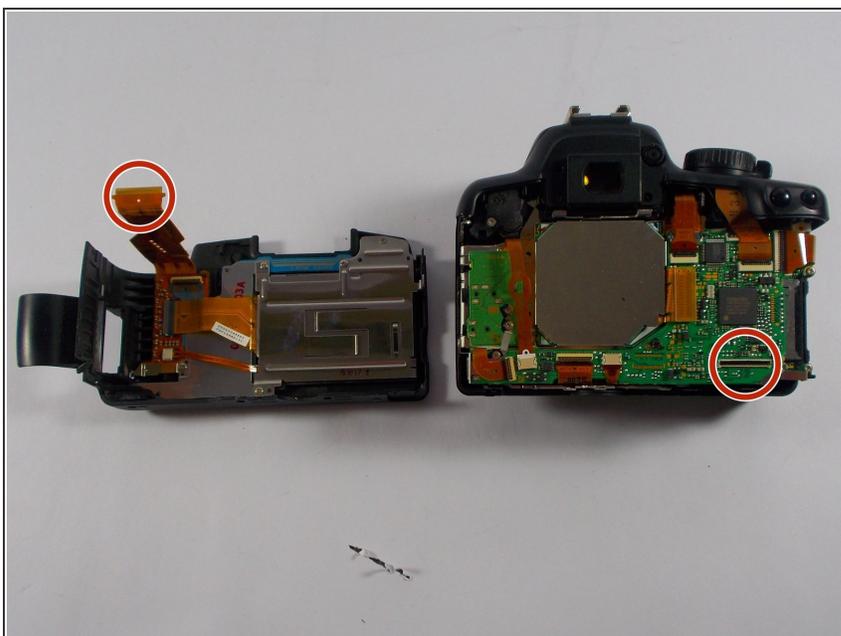


- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 5 — LCD

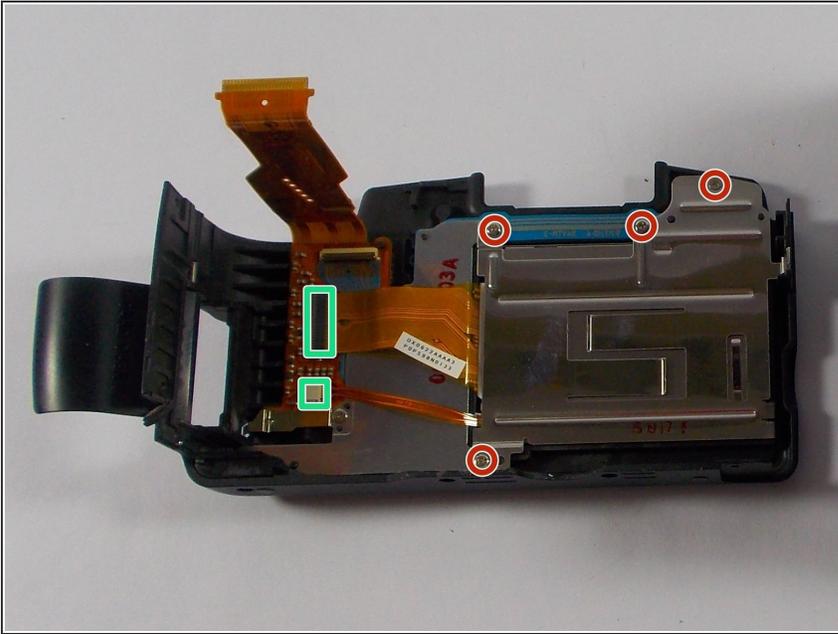

- Use the tweezers to gently remove the straps (in the teal box).
- Use the Phillips Screwdriver to remove the four screws (in the red dots).
- Use your fingers to remove the silver plate.

Step 6

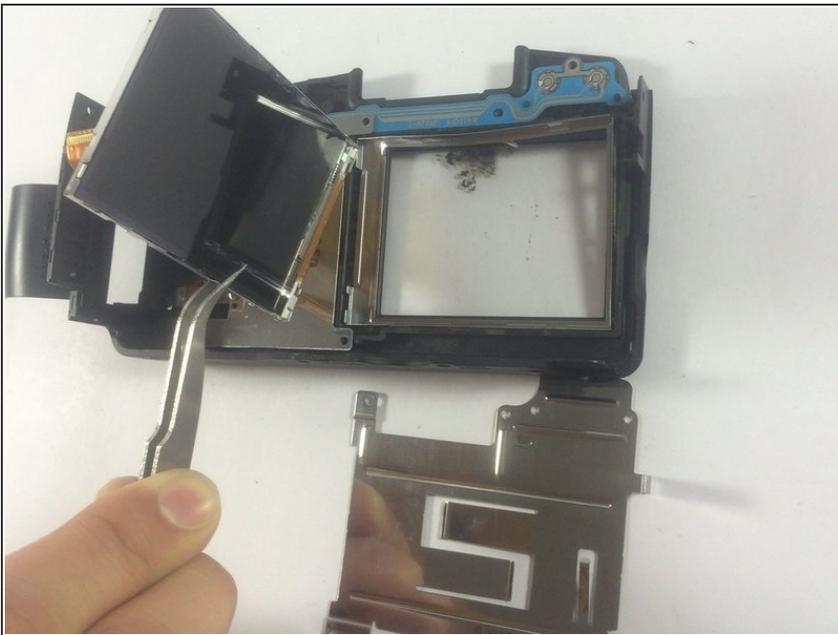

- Use the Spudger on the edges of the screen.
- Once one end is loose, use the tweezers to lift the screen.

To reassemble your device, follow these instructions in reverse order.