


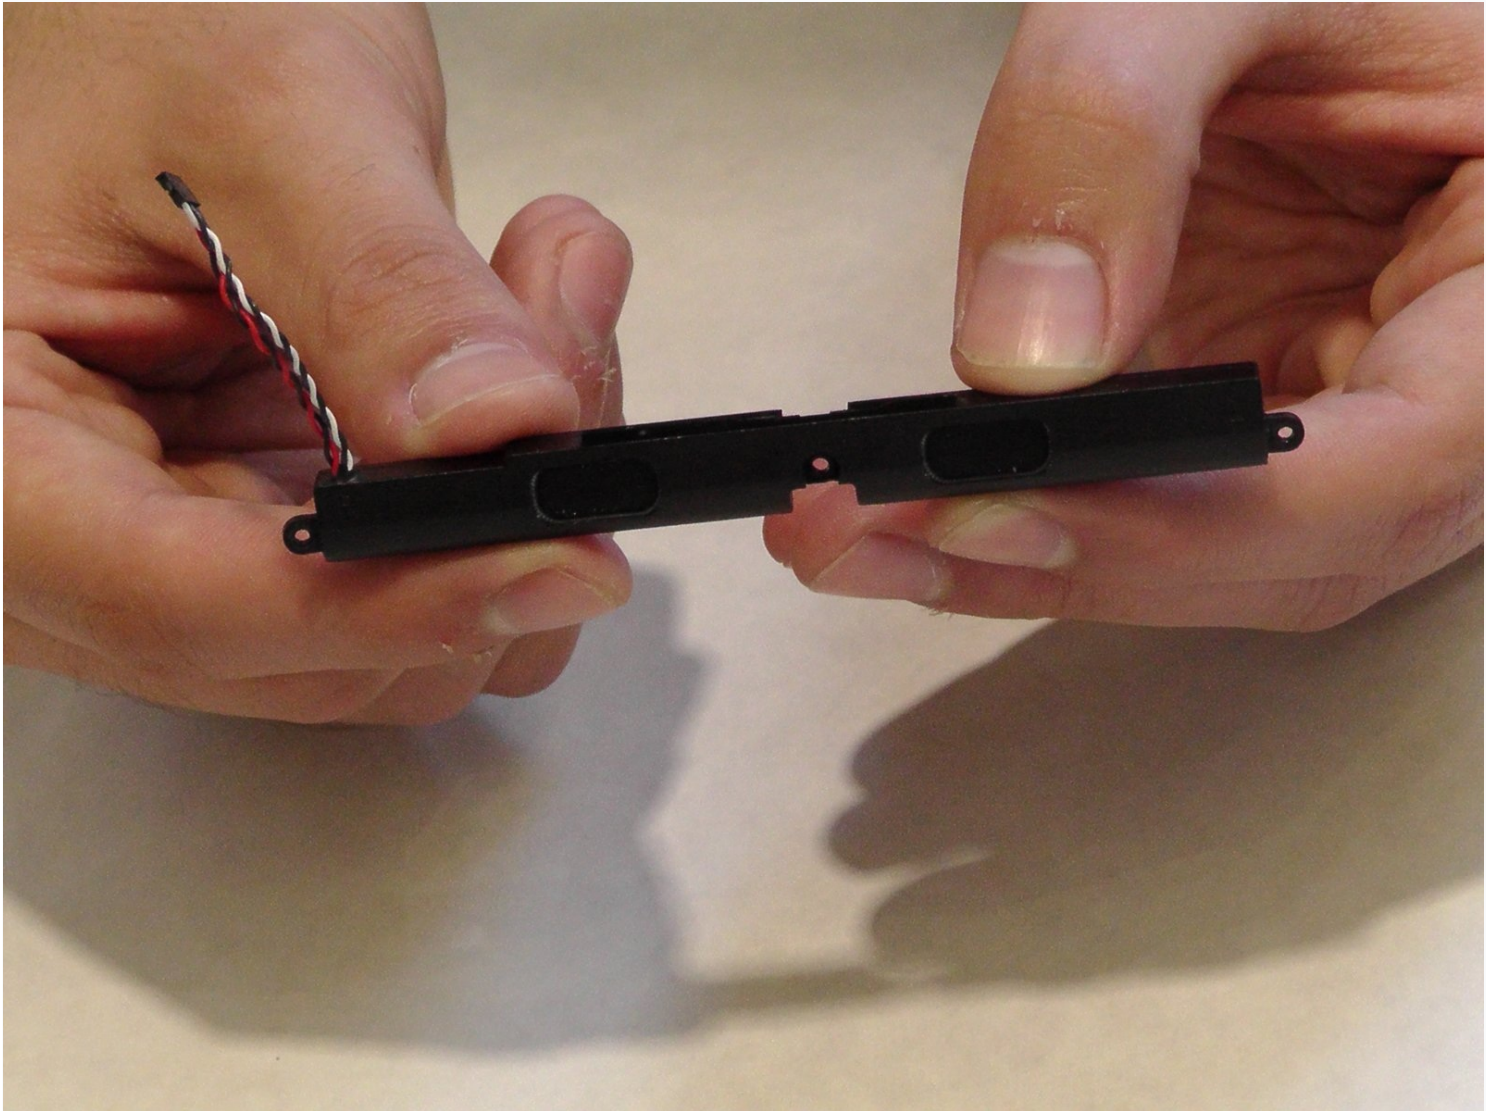

# Acer Iconia One 7 Speaker Replacement

The speaker is an essential part of the Acer...

Written By: Michael



# INTRODUCTION

The speaker is an essential part of the Acer Iconia One 7 enabling it to give auditory notifications and playback to the users. The speaker appears sturdy but it is in fact a delicate part requiring careful attention to detail and a light touch during replacement.

## TOOLS:

[Tweezers](#) (1)


[iFixit Opening Tool](#) (1)


[JIS #00 Screwdriver](#) (1)

## Step 1 — Speaker



- Begin at any side of the tablet.
- With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.

 **Prying the lid open can be difficult; use caution in order to safely remove.**

 **Turn off device before this step.**

## Step 2



- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated.



## Step 3



- Turn the tablet over to locate the speaker.
- ⚠ Besides the parts that are mentioned in the instruction, try not to agitate other fragile components inside the device.
- The speaker is on the bottom of the inside.





## Step 4

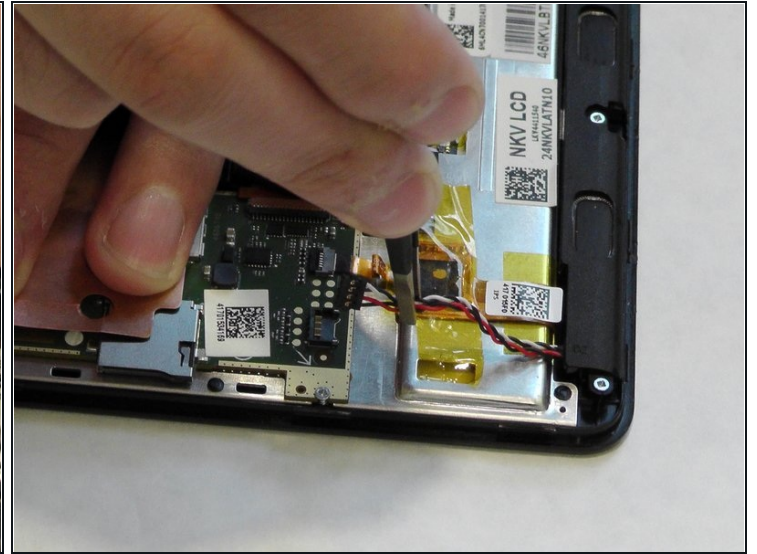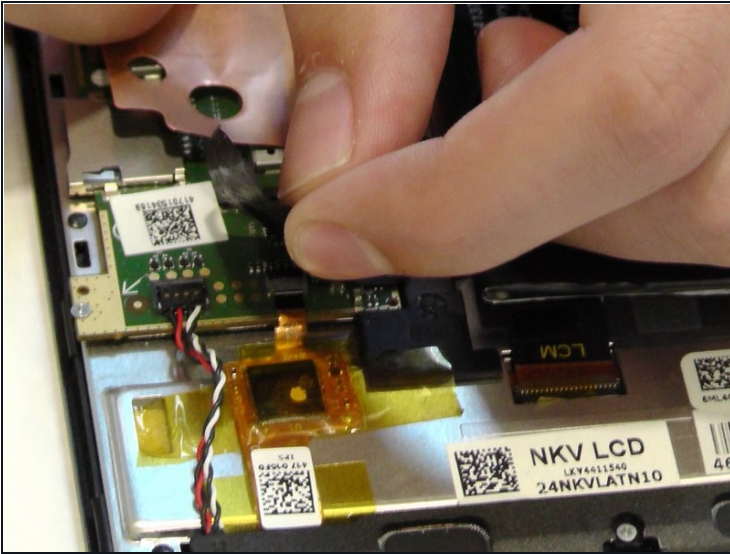

- Peel back tape.
- Using [tweezers](#), detach connection from motherboard.

## Step 5

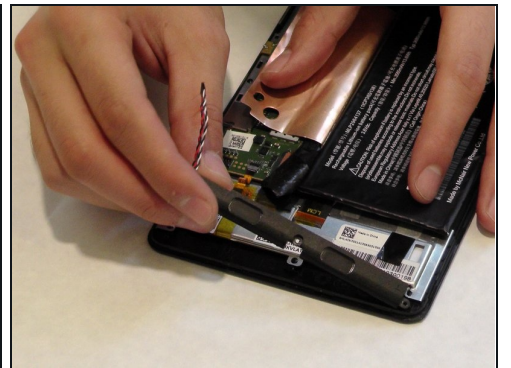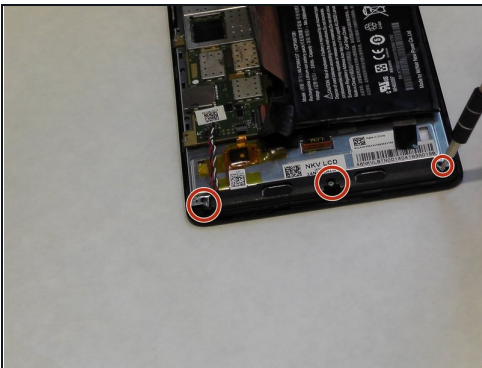

- Unscrew screws with a JIS screwdriver with a #00 screw bit.
- Dislodge the speaker unit.

⚠ Take care not to displace any other bits in the device.

To reassemble your device, follow these instructions in reverse order.