




Sony PlayStation 3D Display Indicator Light Bar Replacement

This guide will show you how to replace the indicator light bar.

Written By: Kyle Franck

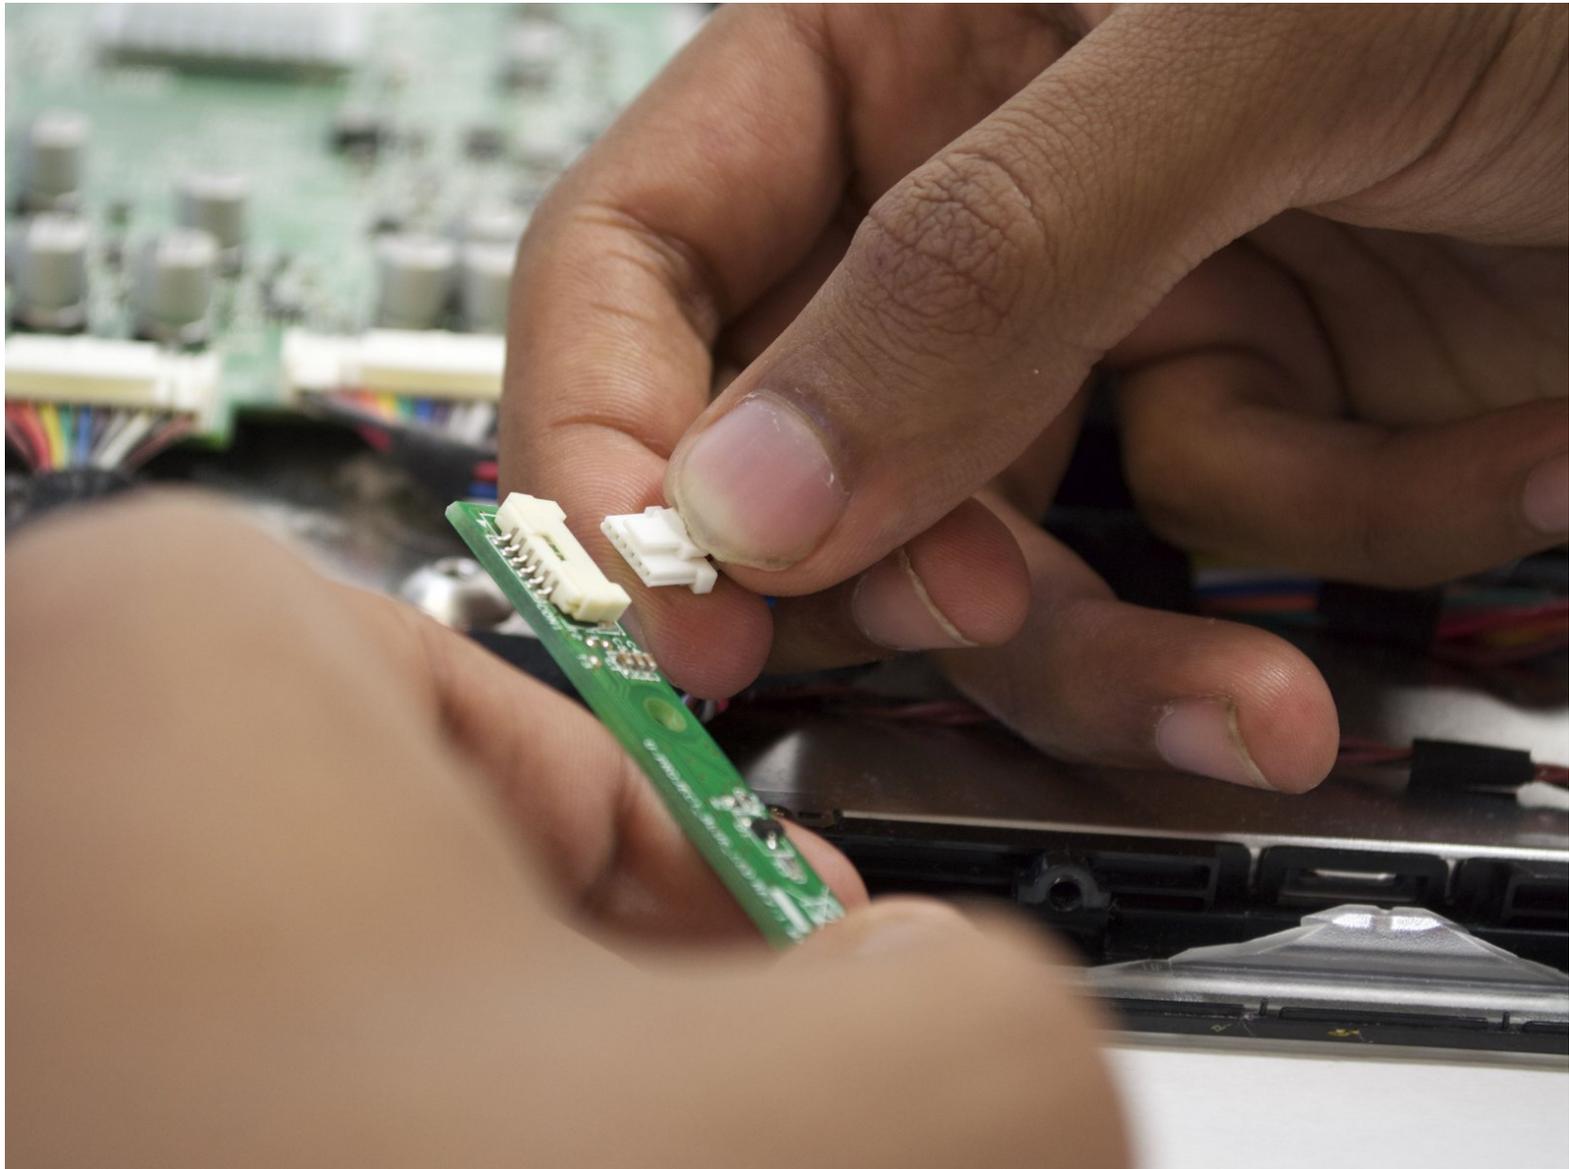

INTRODUCTION

This repair may be needed if your device functions properly, but the indicator lights do not work.

TOOLS:


- [Metal Spudger](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case




- Remove the base by pushing in the button and sliding out the unit.

Step 2

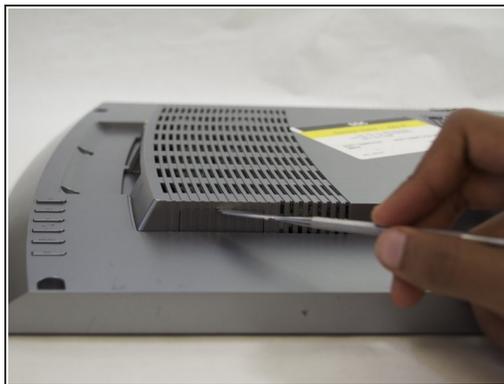


- Remove USB port cover from back plate with a metal spudger.
- ⓘ This will prevent the cover from falling under the back plate once it is removed.

Step 3

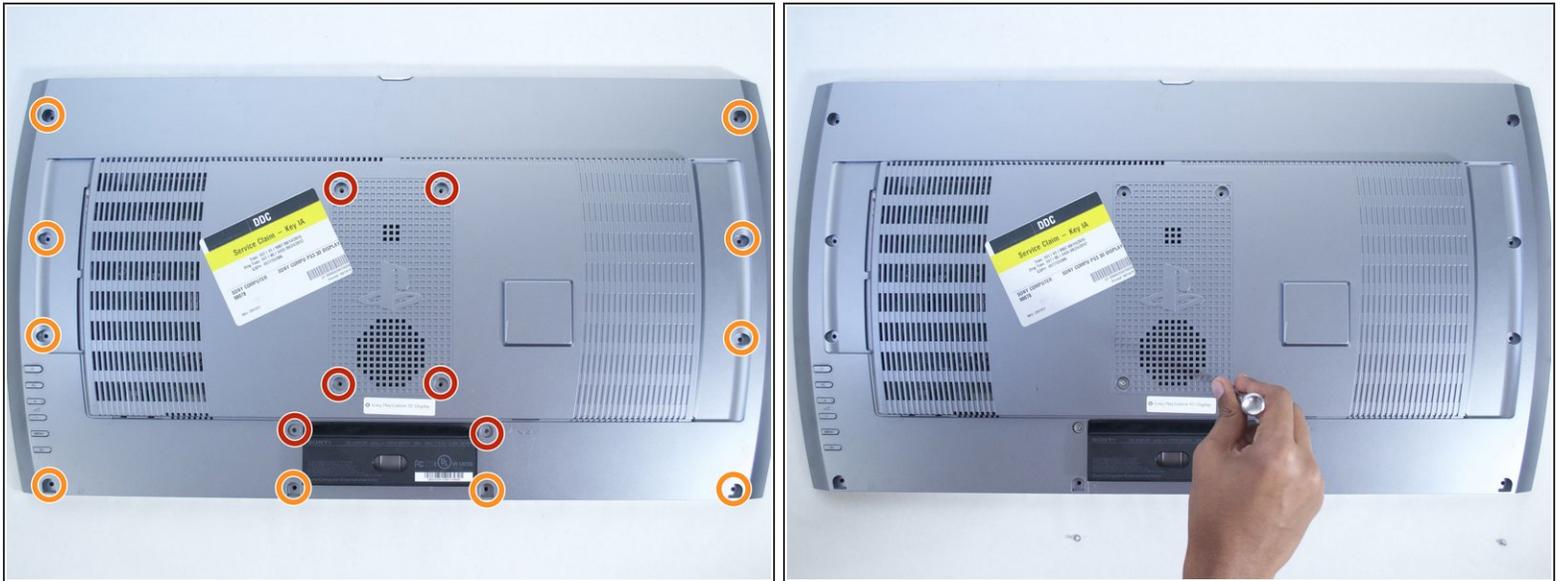


- With the Phillips #02 screwdriver, remove the six 6 mm length x 6 mm head screws from the back plate.
- With the Phillips #02 screwdriver, remove the ten 6 mm length x 8 mm head screws from the back plate.
- ⓘ These screws have different threads and need to be kept separate.

Step 4

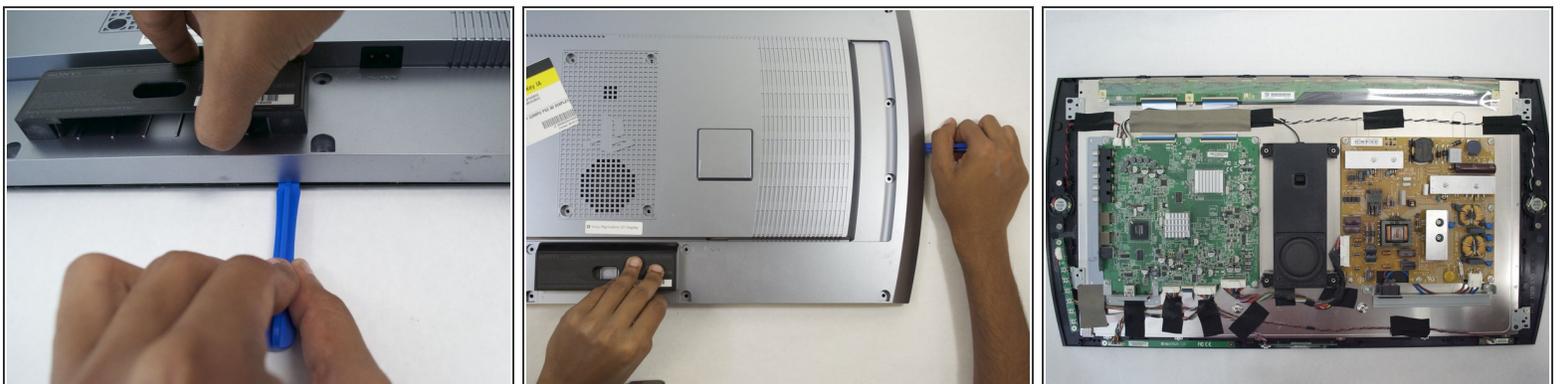


- Remove back plate with a plastic opening tool by slowly prying around the entire plate.
- ⚠ Be gentle to avoid breaking the plastic clips which hold the plate.
- Once separated the plate easily lifts off.

Step 5 — Indicator Light Bar

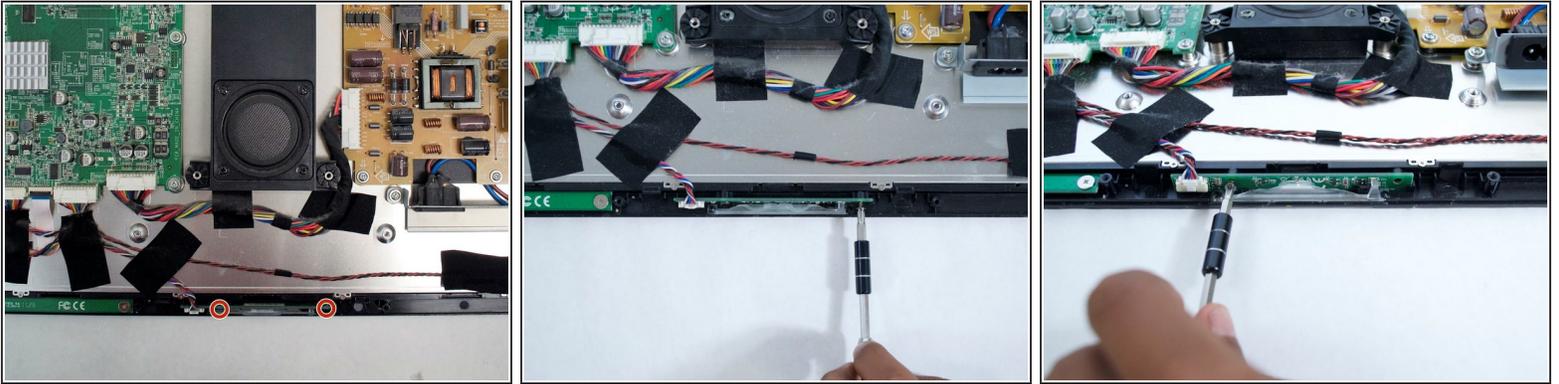

- With the Phillips #02 screwdriver, remove the two 5mm length x 5mm head screws located on the left and right side of the light bar board.

Step 6

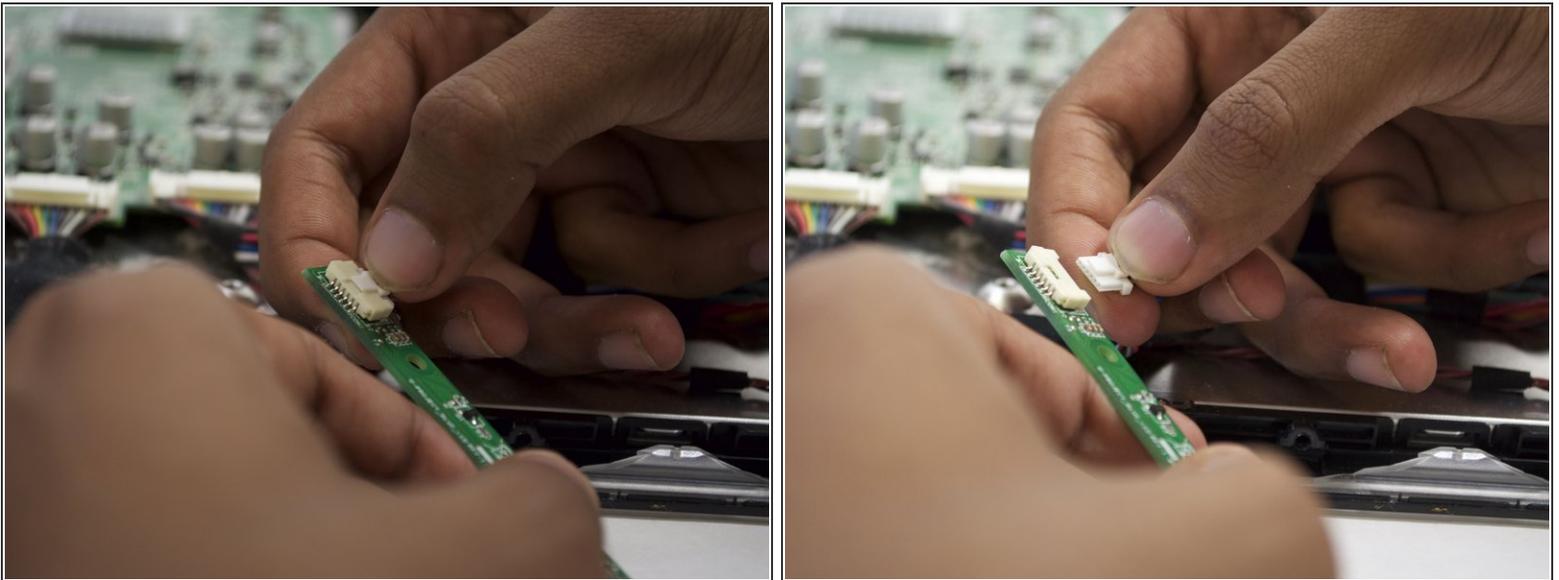

- Remove the light bar by depressing the tab on the white data connector.

To reassemble your device, follow these instructions in reverse order.