


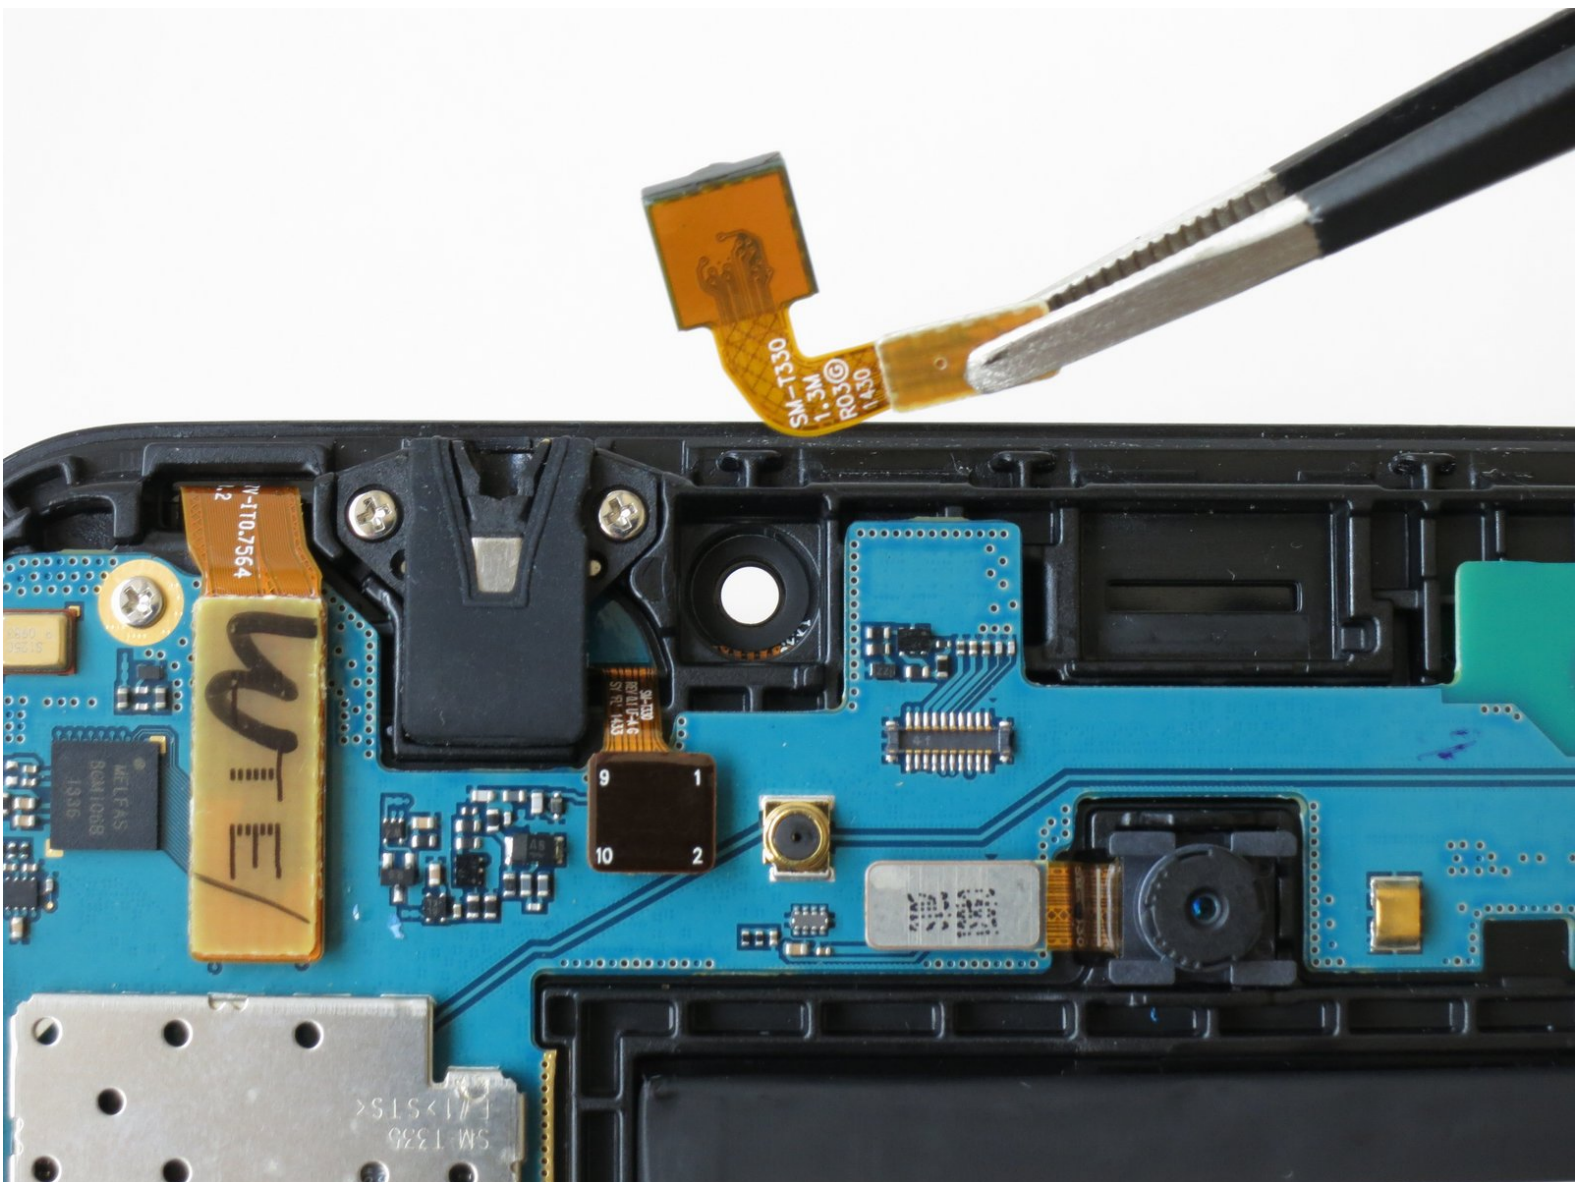

# Samsung Galaxy Tab 4 8.0 Verizon Front Facing Camera Replacement

This guide details the steps necessary to replace the front facing camera of your Samsung Galaxy Tab 4 8.0 Verizon.

Written By: Ofelia Cruz



This document was generated on 2022-08-24 02:29:36 AM (MST).

## INTRODUCTION

After damaging your front camera, you might feel intimidated to dig into the Samsung Galaxy Tab 4 8.0. Replacing the front camera will only require, a plastic opening tool, tweezers, muscle strength, and these easy to follow instructions. The replacement will be a breeze, but be sure not use *too* much force when prying the device open.



### TOOLS:

- [Tweezers](#) (1)
- [iFixit Opening Tool](#) (1)



### PARTS:

- [Galaxy Tab 4 8.0 Front Camera](#) (1)

## Step 1 — Rear Case




**⚠ Before disassembling your Samsung Galaxy Tab 4 8.0, be sure it is powered off and you remove the SIM and Micro SD cards.**

- At the top of the tablet, nudge the blue plastic opening tool between the back plastic casing and the front panel's metal rim.

**⚠ Do not use excessive force when prying the clips, fastening the casing together, open because they can easily break.**

## Step 2

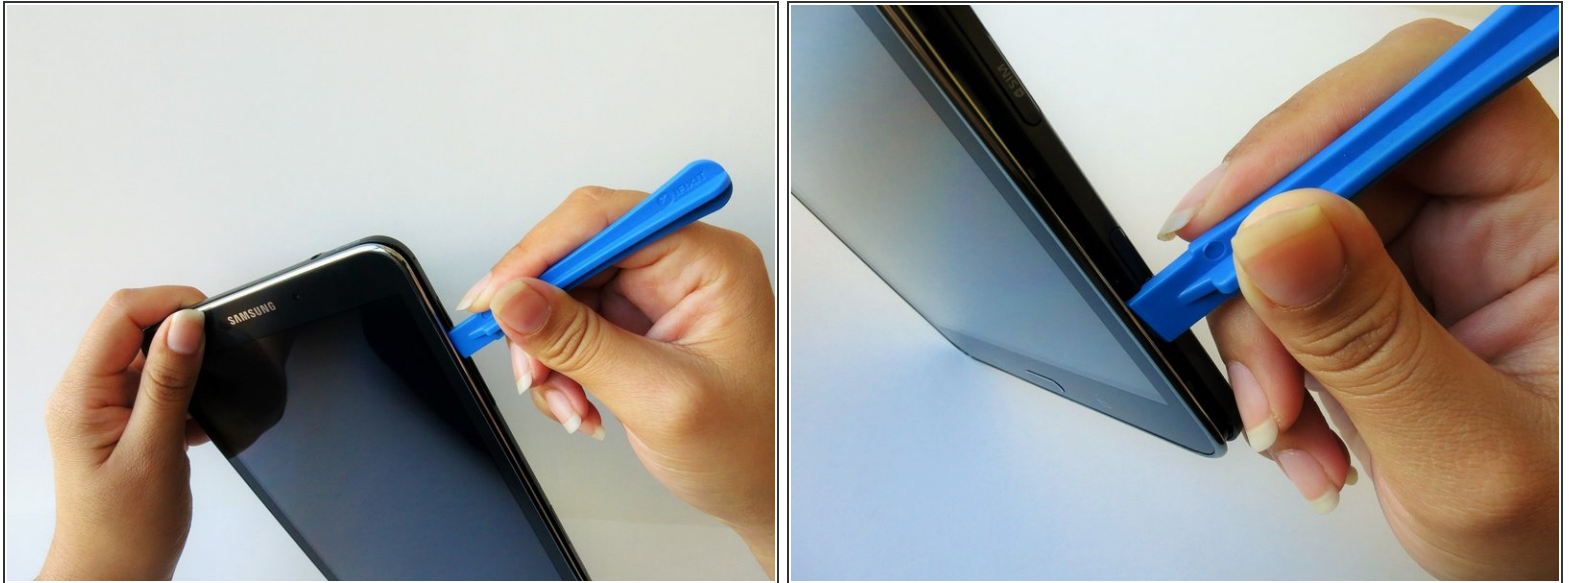

- Continue prying the blue plastic opening tool along the perimeter of the tablet to separate the back plastic casing from the front assembly panel.
- ⓘ As right-handers, we found it easiest to move clockwise and use more pressure around the corners to facilitate the process.
- ⓘ You might hear several popping noises caused by the plastic clips coming undone.




### Step 3




- To avoid damaging the screen, gently set the tablet with the LCD screen faced down.
- Firmly grasp the back plastic casing and lift it away from the front assembly panel.

### Step 4 — Front Facing Camera

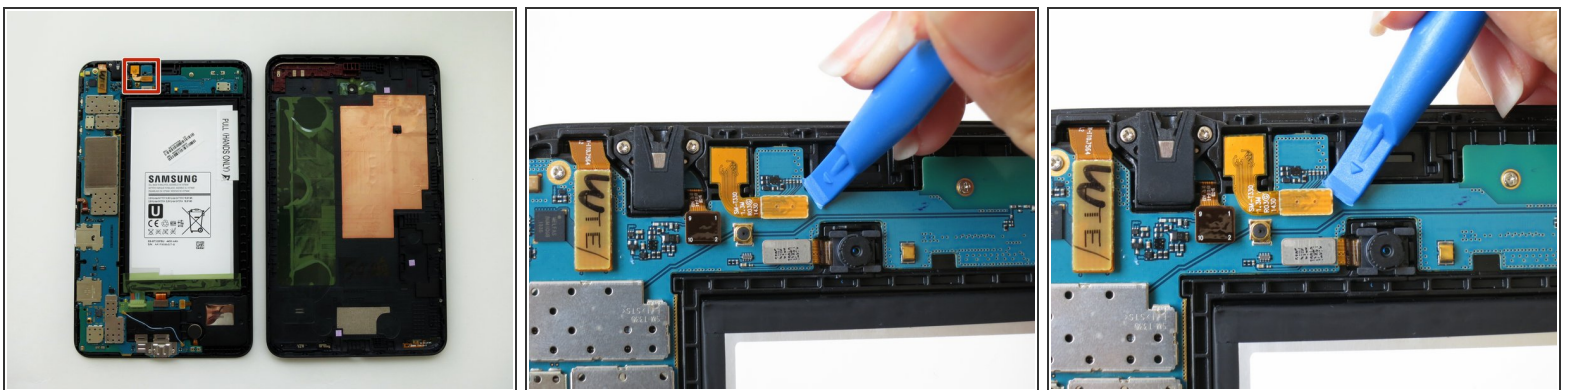



- The front camera's ribbon cable is located just above the battery, slightly to the left.
- Carefully insert the flat end of the blue plastic opening tool under the connector at the end of the ribbon cable.

## Step 5

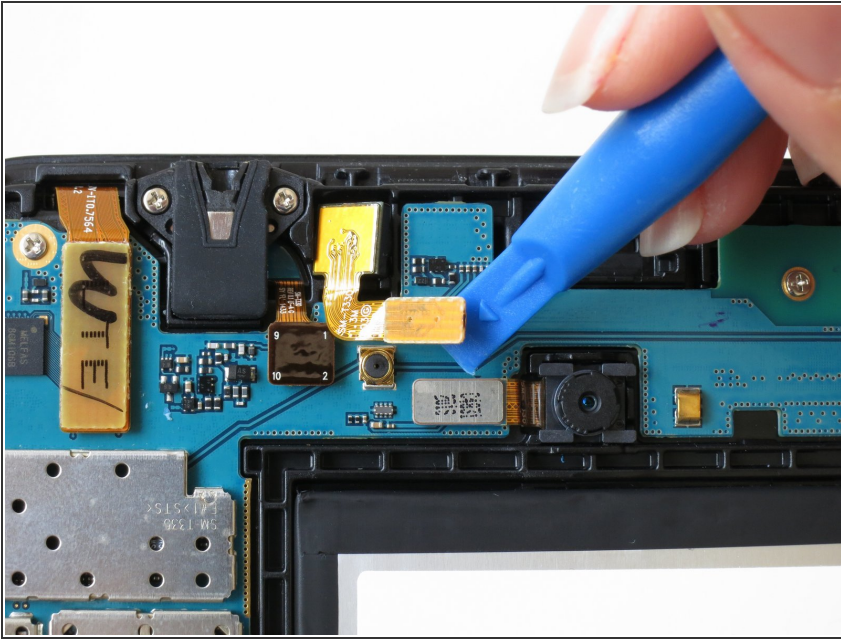

- Slightly apply pressure and move the blue plastic opening tool downwards to pop the front camera's gold rectangular connector from its socket on the motherboard.

## Step 6

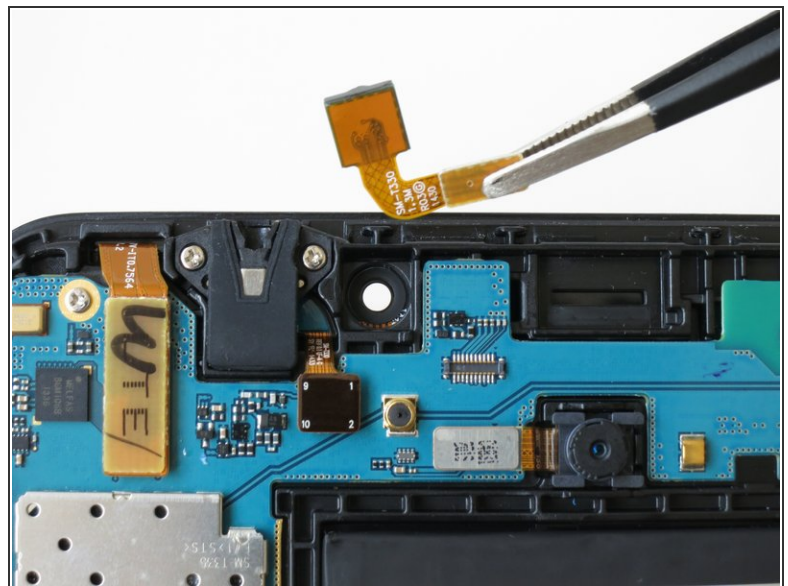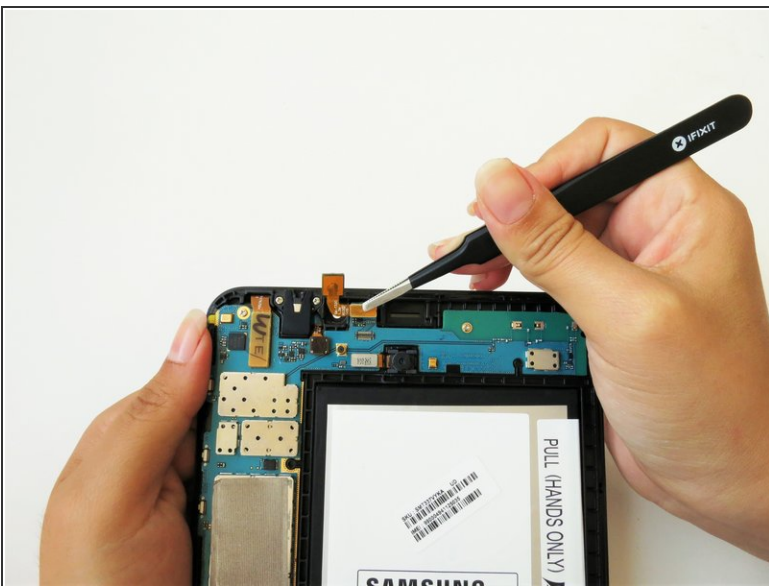

- Squeeze the gold rectangular piece with the tweezers to gently lift it from its pit.

To reassemble your device, follow these instructions in reverse order.