



Asus Zenbook UX32VD Hard Drive Replacement

Replace or upgrade your hard drive in your...

Written By: Michael Remmel



INTRODUCTION

Replace or upgrade your hard drive in your laptop to gain more storage space!



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Bottom Panel

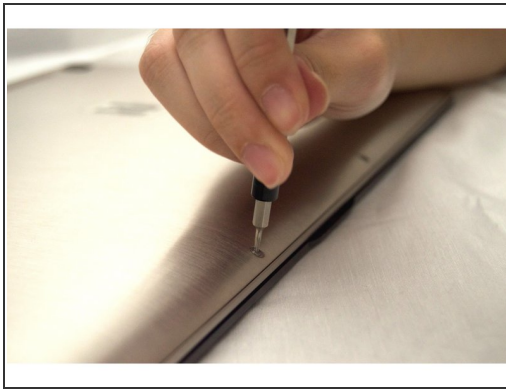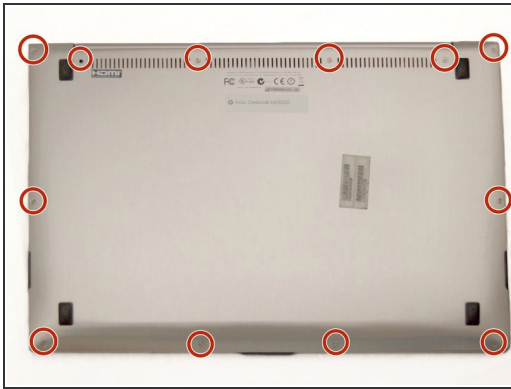



- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

Step 2





- Use a plastic opening tool to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

Step 3 — Battery

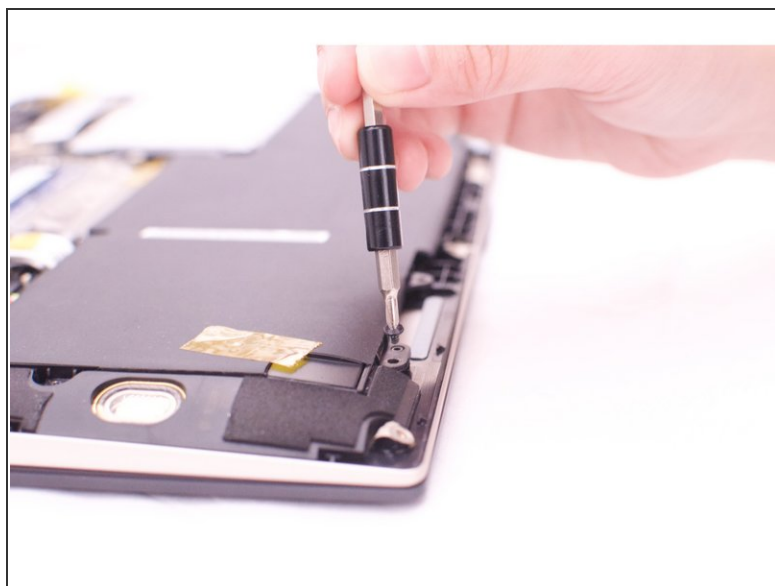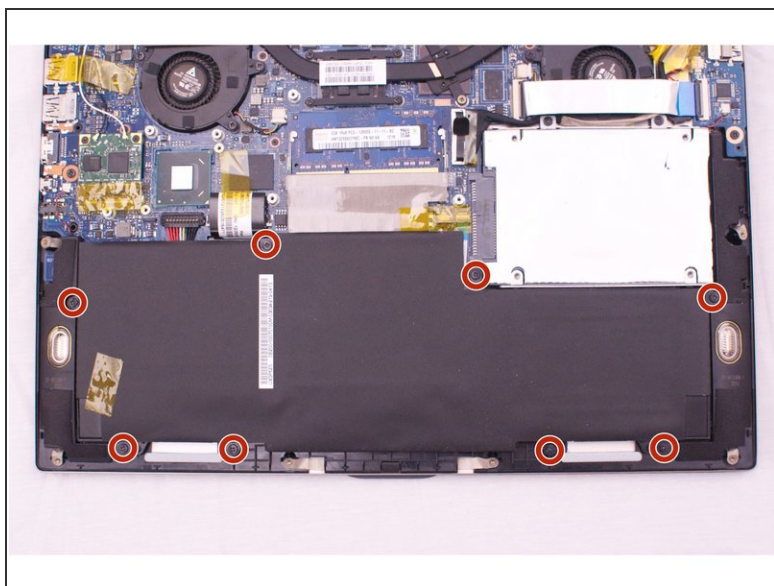




- Remove the eight 3 mm Phillips #0 screws on the bottom panel.

Step 4

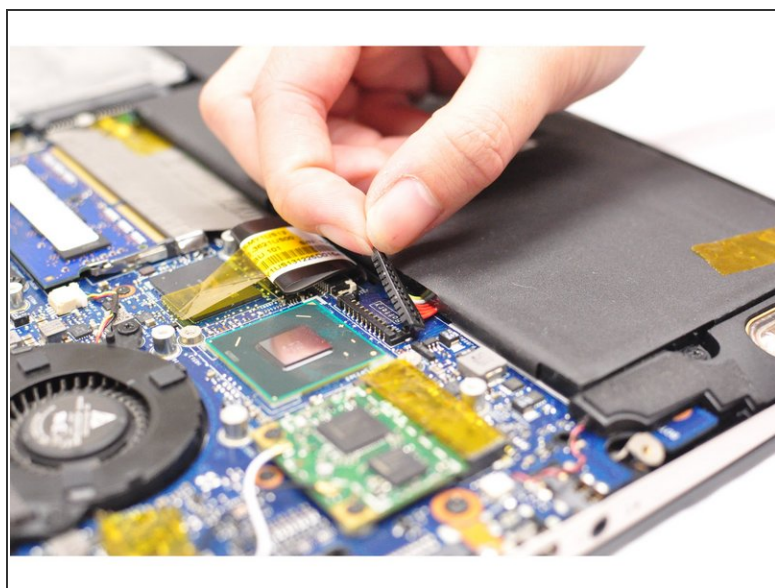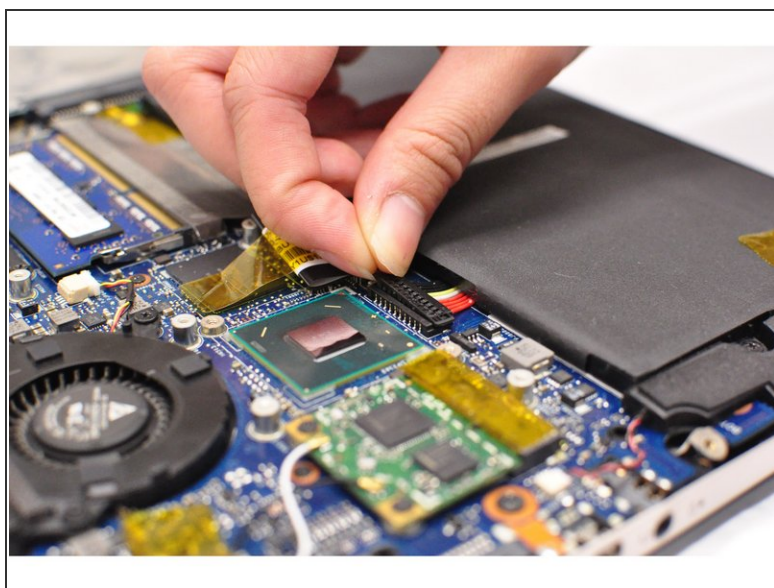

- Pry up each side of the flat connectors by hand or with a plastic opening tool.
- Lift the connector straight up from its socket.

Step 5

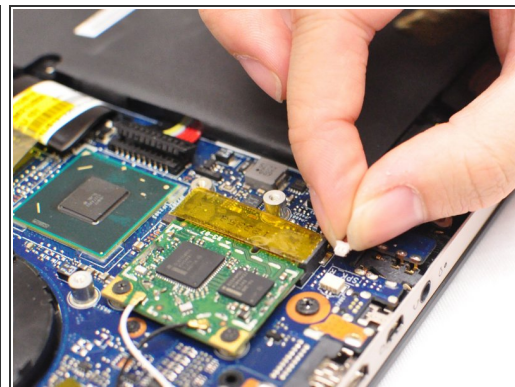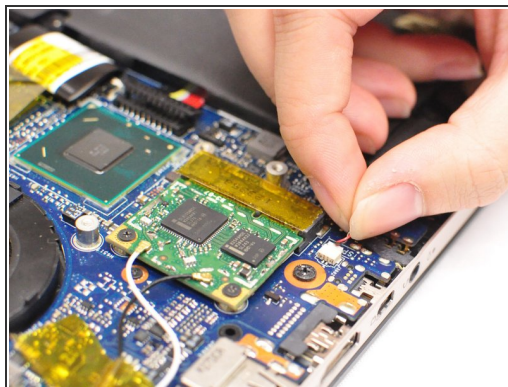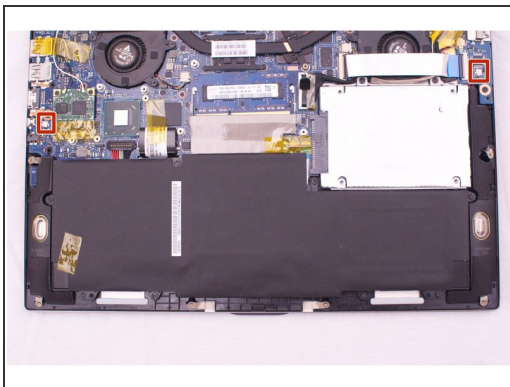



- Unplug the two bundled cable connectors on each side of the battery.
- Pull the cable away from the connector in the same direction as the individual wires are running.
- ⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 6





- Remove the battery completely.

Step 7 — Hard Drive

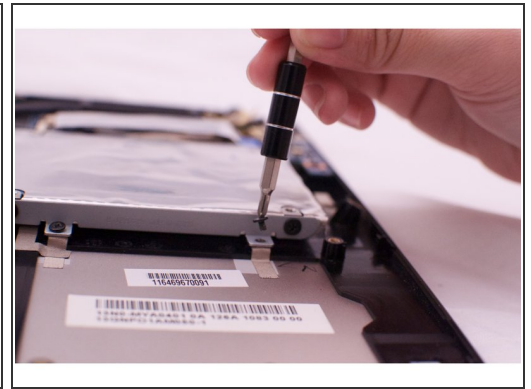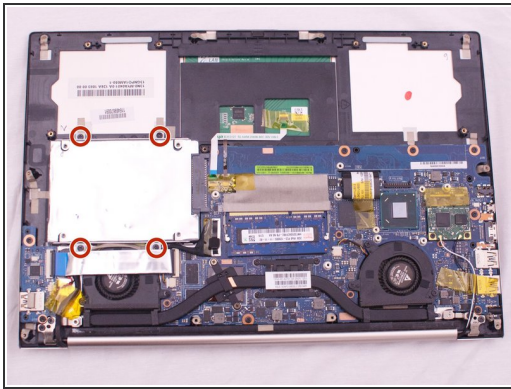

- Remove the four 3mm hard drive screws with a [Phillips #0 Screwdriver](#).

Step 8

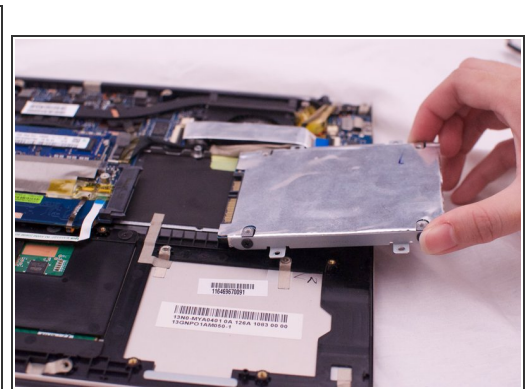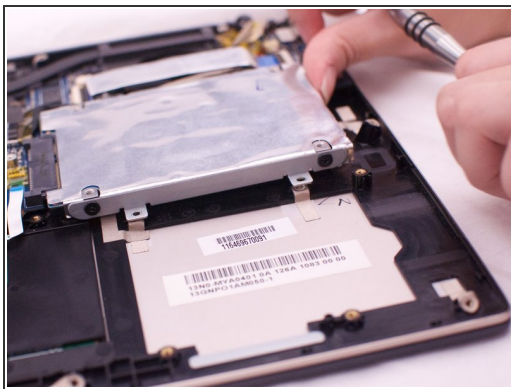

- Lift the hard drive slightly and gently pull the hard drive from the socket.
 - ⚠ Do not lift the hard drive too high. Doing so could damage the hard drive or other internal components of the laptop.
- Remove the hard drive completely.

To reassemble your device, follow these instructions in reverse order.