



Garmin Nuvi 2797LMT LCD Screen Replacement

Replacing your screen will help make it more user friendly.

Written By: baileykaytar



INTRODUCTION

This guide will show you, in easy-to-follow steps, how to replace the LCD Screen. It seems like a lot of work, but don't worry because it isn't.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — LCD Screen



- i** Before you begin make sure your device is turned off.
- Using your T-6 Torx Screwdriver, unscrew the ten 2.38 mm torx T-6 screws from the back of your GPS.

Step 2



- Using the biggest plastic opening tool, pry open the GPS from the sides. You should now be able to see everything inside the GPS.

! Be careful when opening the GPS because of the ribbon attached to the screen. It can tear easily.

Step 3



- Locate the ribbon attached to the motherboard. Carefully detach the ribbon.

Step 4




- Using your T-4 Torx Screwdriver, unscrew the four 2.38 mm Torx T-4 screws from the back of your screen.

Step 5



- Now pulling up on one of the corners, bring the top half of the casing out of the bottom half.

Step 6

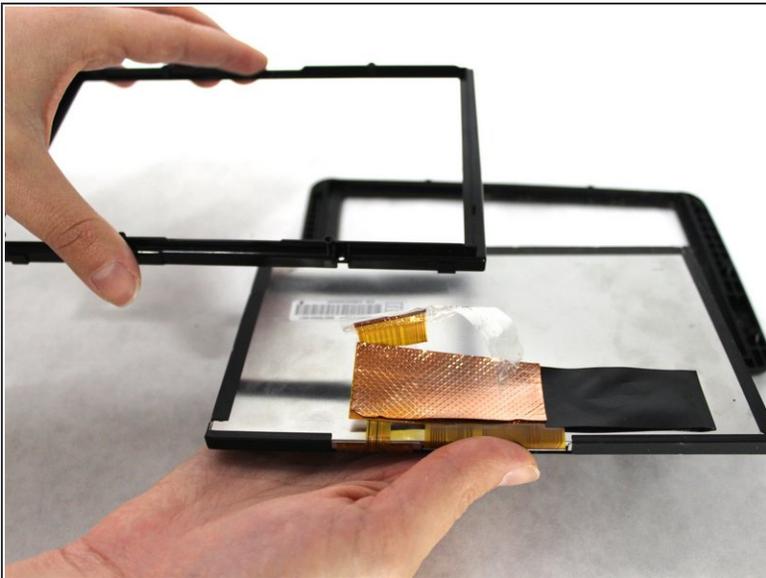

- Now remove the front casing and back casing away from the screen. You will end up with three separate pieces.

To reassemble your device, follow these instructions in reverse order.