



Nikon Coolpix S220 Outer Cover Replacement

Replace the outer cover of your Nikon Coolpix S220 camera.

Written By: Shauna



INTRODUCTION

This guide will teach you how to remove the outer cover of your Nikon Coolpix S220 camera. It is an easy and fast process that most people should be able to accomplish with nothing but a small screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Cover



- Remove the two 2.8 mm screws on the left side of the camera.

Step 2




- Remove the four 2.8 mm screws on the right side of the camera.

Step 3



- Remove the three 4.1 mm screws on the bottom of the camera.

Step 4

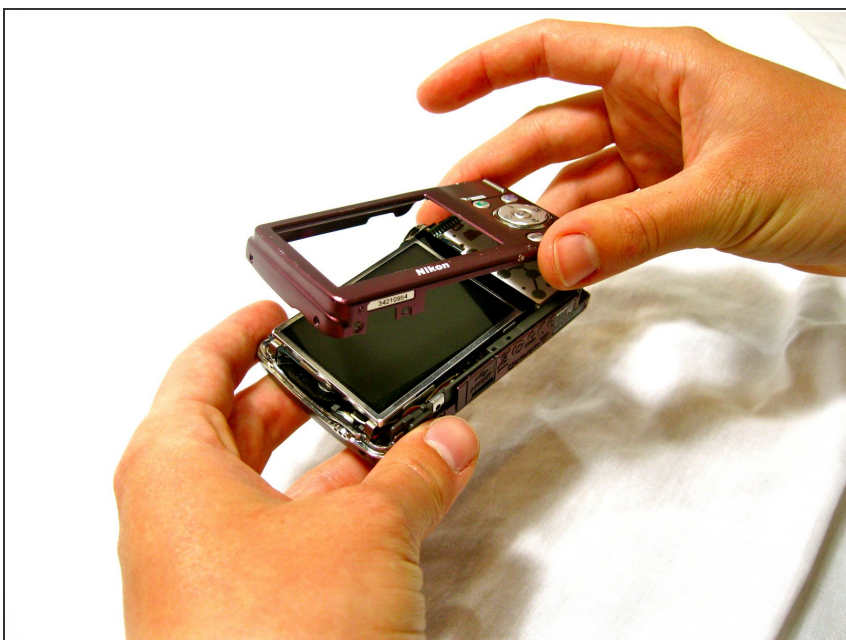

- Gently lift the rear cover from the camera.

To reassemble your device, follow these instructions in reverse order.