



# Apple Powerbook 520/540 General Disassembly

This guide will show you how to disassemble a PowerBook 520/540 so that you can gain access to the hard drive, RAM and processor cage, and the floppy drive.

Written By: Mark McNeff



# INTRODUCTION

In order to obtain access to the internal components you must first follow this step by step general disassembly guide. This will be a first stop in installing a new component that is enclosed by the outer shell.



## TOOLS:


- [Essential Electronics Toolkit](#) (1)
  - [T8 Torx Screwdriver](#) (1)
-

## Step 1 — Apple Powerbook 520/540 General Disassembly




- Turn computer over.
- Remove battery expansion cover and battery.

## Step 2

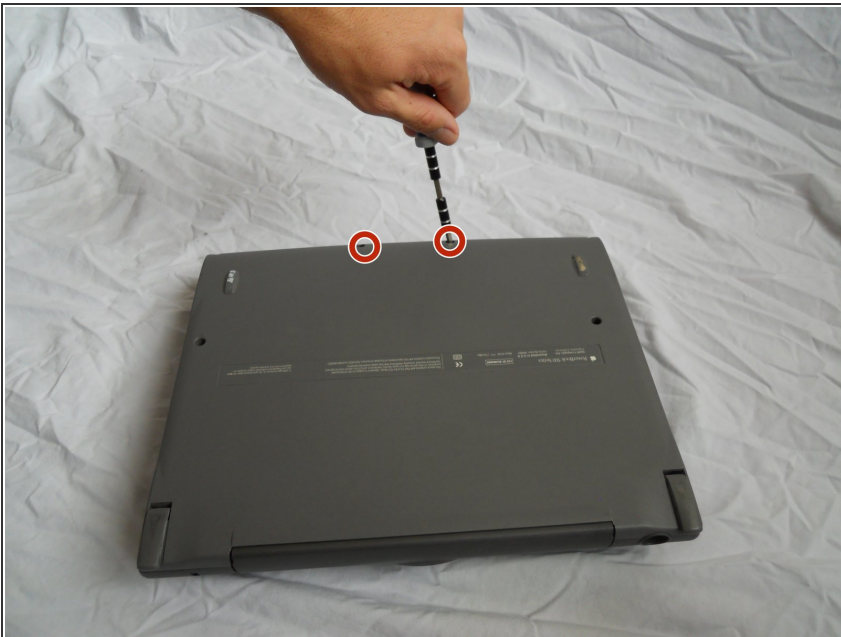

- With monitor hinge at the bottom, remove the two top center screws.

### Step 3

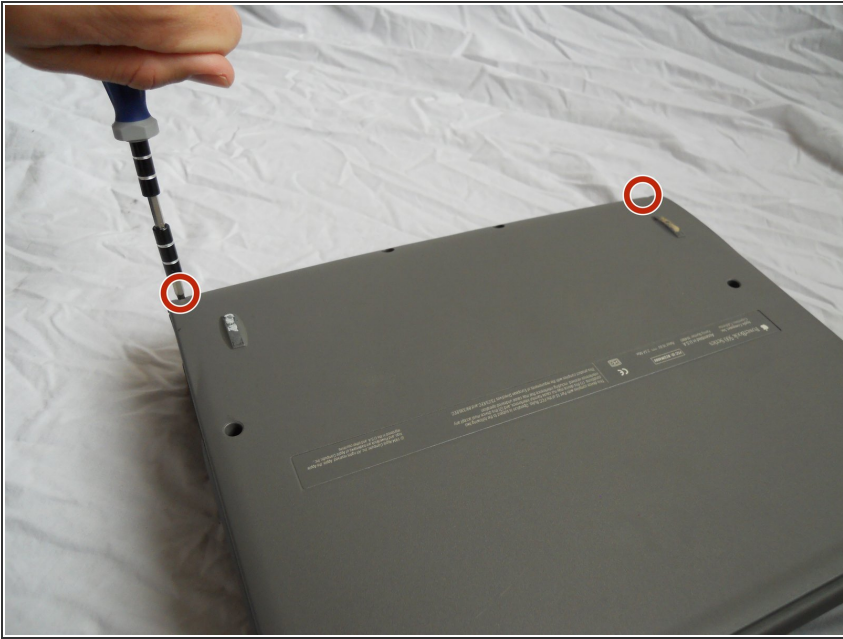

- Remove top left and top right screws.


### Step 4



- Remove middle left and middle right screws.



## Step 5

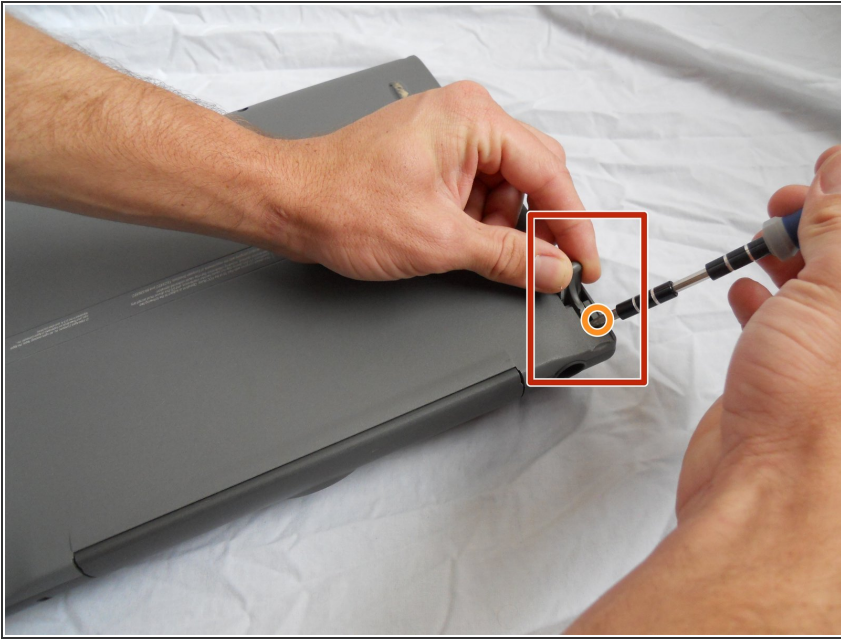


- Open computer kickstands.
- Remove screws underneath each kickstand.

## Step 6



- Lift keyboard from bottom and take out of shell.

## Step 7

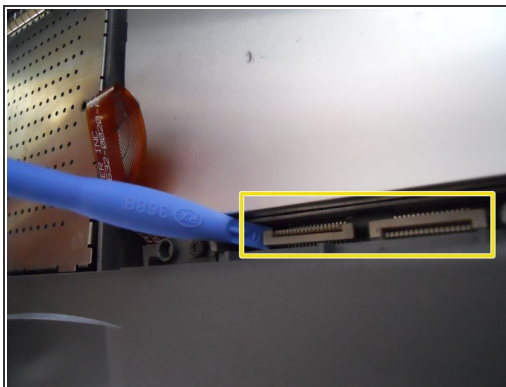

- Lift the white ribbon clamps securing the keyboard ribbon cables to the motherboard. You can do this using a plastic opening tool.
- Removing both ribbon cables from the motherboard will leave the clamps like so.
- From here you can access the logic board, hard drive, and floppy drive.

To reassemble your device, follow these instructions in reverse order.