




ASUS F550 RAM Replacement

Written By: Ryan

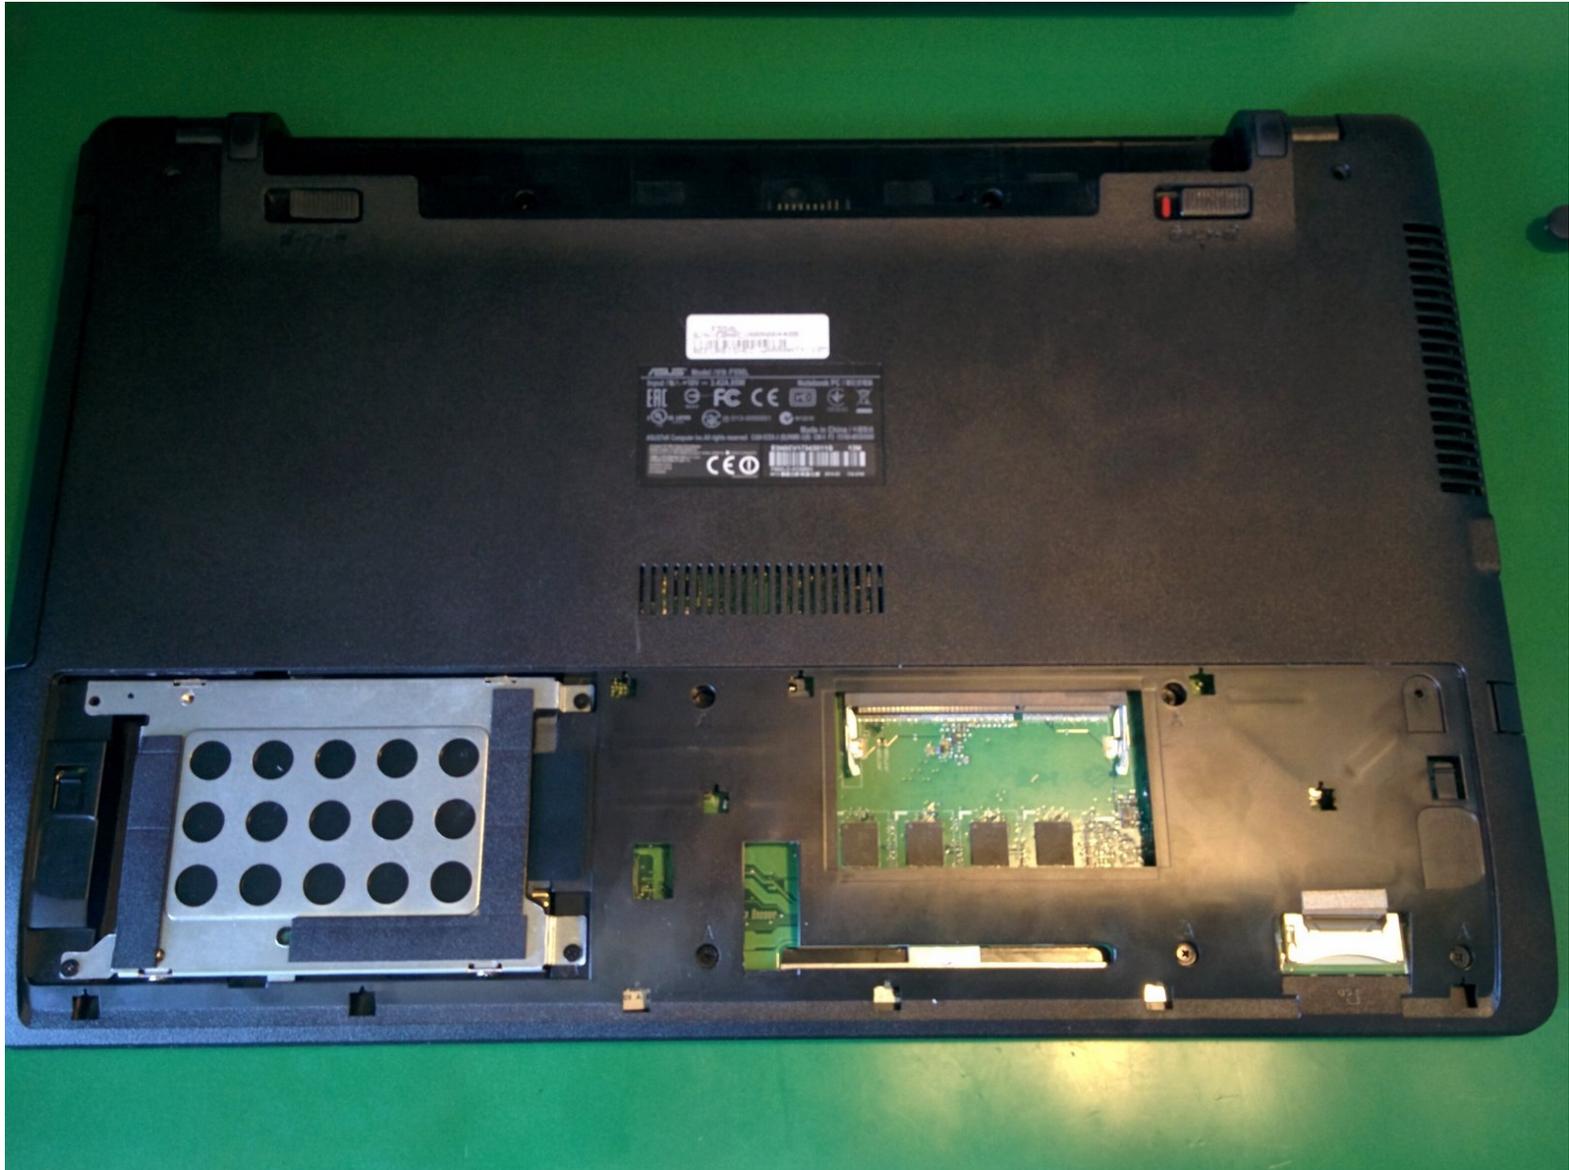

 **TOOLS:**



- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — ASUS F550 HDD/Ram Cover Removal



- Remove the battery, using release clips.
- ⓘ Ensure device has no residual power by attempting boot once battery is removed.
- Remove either 2 (or 4 for a full teardown) 12mm phillips screws, then removing the bottom cover to gain access to the HDD and RAM.
- Remove HDD and RAM cover

Step 2 — Remove Ram

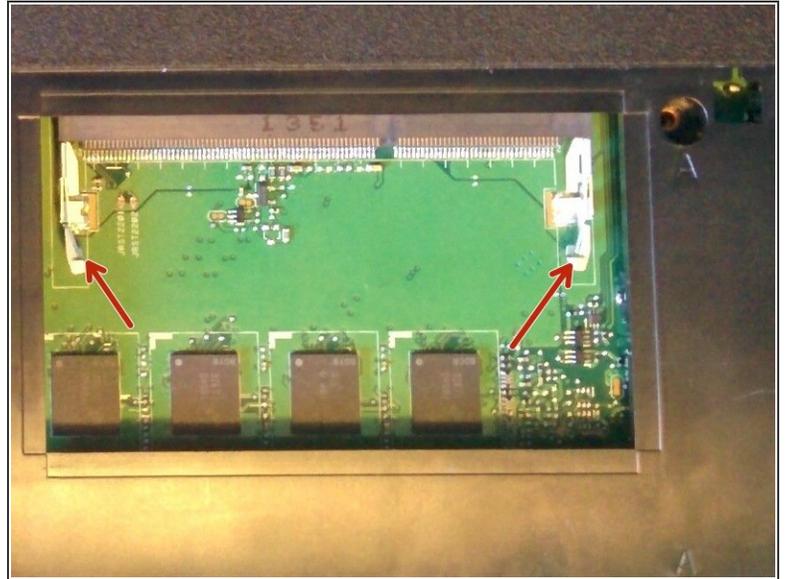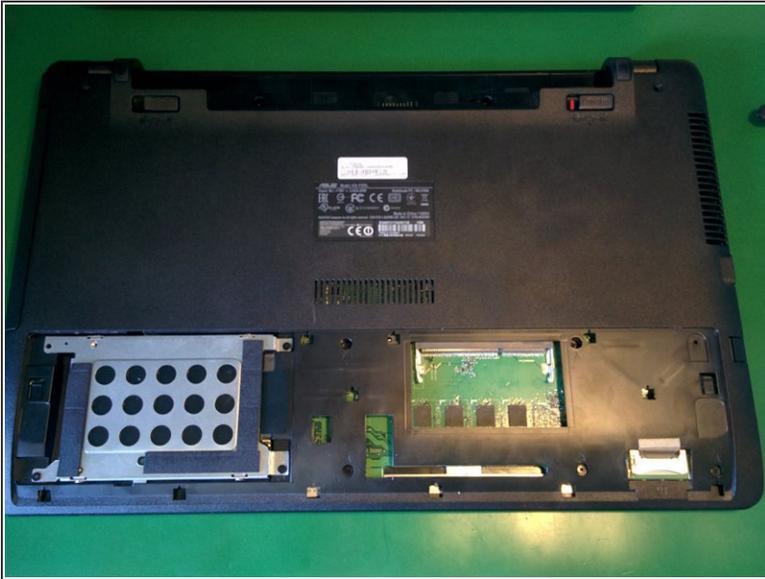

- Release securing arms and remove RAM.

To reassemble your device, follow these instructions in reverse order.